



**Stake A** is used to fix the inflatable on ground and prevent it from moving.


**Stake B** is used to further stabilize the inflatable and help it hold up well in a mild wind.

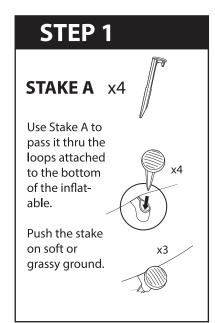

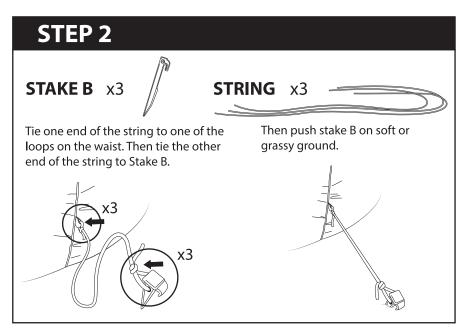

## TO USE:

1. Be sure inflatable is zipped up.

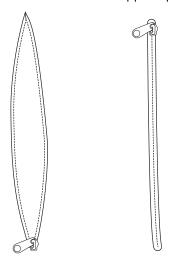

- **2.** To turn on plug into outlet.
- **3.** To turn off un plug and un-zip the inflatable to let air out.



## **CONTROLS:**



## Still Mode:

Give Inflatable Mr Chill a decorative look by entering into still mode. Mr Chill will not run any animation but instead will maintain a still face. Press and hold the + & -buttons simultaneously for 3 seconds to enter into still mode. To exit press any button to resume animations.

\*Note: Video will replay on loop until unplugged, there is no timer on Inflatable.

## **CARE INSTRUCTIONS:**

Wipe clean with a damp cloth and allow to dry before storing away.



PO BOX 9525 GLENDALE, CA 91226 WWW.MINDSCOPEPRODUCTS.COM WWW.ANIMAT3D.COM

