

Battery Operated Window Candle

Features:

Dual intensity bent LED technology.

Point bright side of candle outward toward the window

Adjustable Height

Adjust height to avoid mullion bars on windows

Built in daily 6 hour timer

No need to turn candle on and off daily


Assembly:

1. Unscrew bulb
2. Insert 4 x AA batteries (+ side up)
3. Replace bulb.
 - a. Candle will turn on once the bulb is fully screwed in.
 - b. Timer is set when candle is turned on. Candle will stay lit for 6 hours, turn off, and turn back on at the same time every day.
 - c. To reset daily timer, unscrew bulb and screw back in


Height Adjustment: Candle height has two positions.

Shorter:

1. Remove rubber ring from bottom of candle

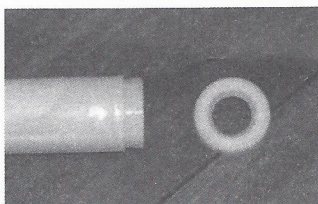

2. Slide candle through base

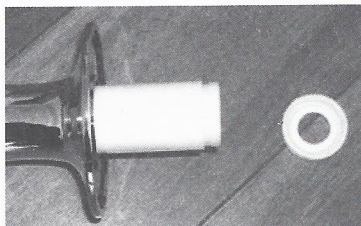


3. Replace rubber ring

4. Slide candle up into base so rubber ring is seated at the bottom of the base.



Taller:

1. Remove rubber ring from bottom of candle
2. Remove candle from base
3. Replace rubber ring on bottom of candle
4. Place candle in top of base so rubber ring is seated in top of the base

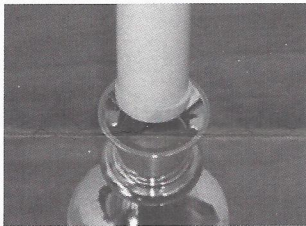

Care:

Remove batteries when not in use
Replace batteries when candle dims
Dispose of used batteries responsibly

Clean with non abrasive cleaner

Ø Dim Bulb – Common Causes



- One or more batteries facing the wrong direction (all should be + side up)
- Old batteries
- Mixed old and new batteries

Ø Bulb Not Lighting


§ Batteries facing the wrong direction. Batteries should all be + side up

§ Bent or stuck prong on inside of candle tube not making contact with the bulb

- Press prong and make sure it springs back
- Prong is bent outward and does not make contact with outside rim bulb

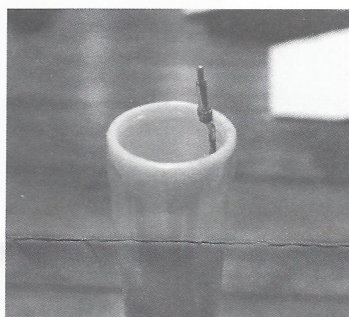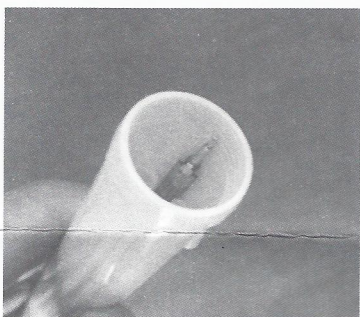

- ◆ Pull prong up
- ◆ Slightly bend prong towards candle center
- ◆ Push prong back down and add top battery
- ◆ Prong should make contact with outer ring of bulb

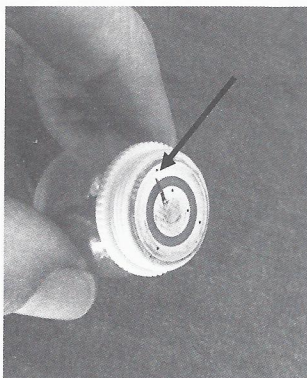

“For trouble shooting video go to: <https://m.youtube.com/watch?v=AVxIILMlM38>