


尺寸:135\*88mm

材质:105克铜板纸

工艺:拆页(4页)

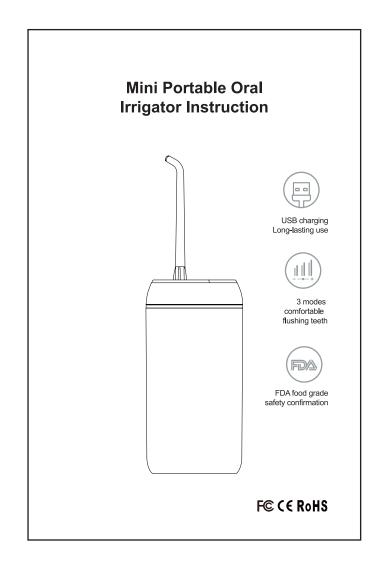

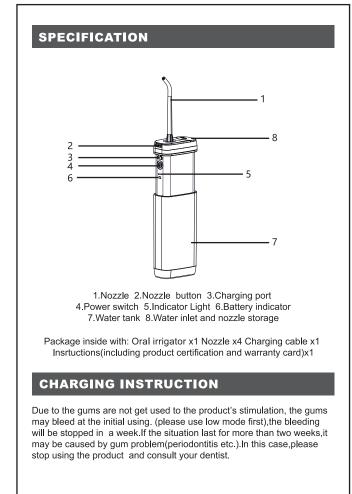


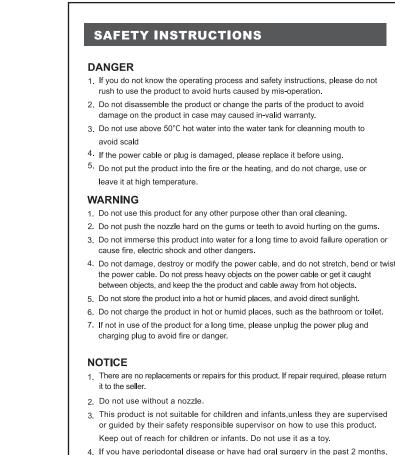


please consult your dentist before using.


5. Do not add mouthwash into the water tank which will cause corrosion and the


tank will be adhered to the device body can result in tank opening failured

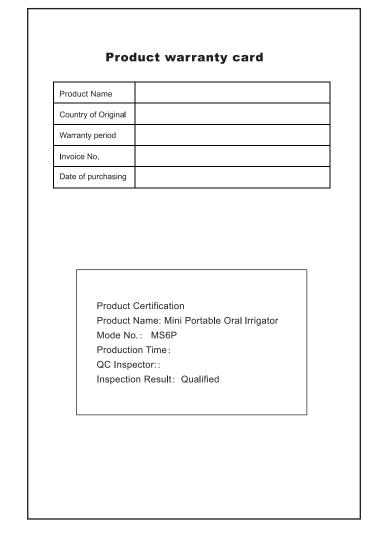

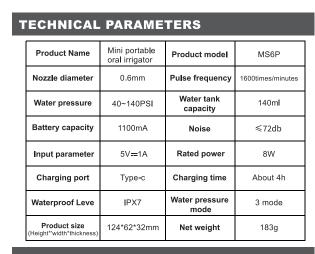

Problem	Possible reasons	Solution
No Working	Newly purchased or not used for more than three months	Please charge it for more than 4 hours
Low water pressure when working	Something inside the nozzle and blocked the nozzle into deformation.	Replace the nozzle
Battery Only can be used for a short time when fully charged.	The battery is at the end of its useful life	Contact your seller
	Insufficient charging times	It refers to recharging for more than 4 hours before using
The charging indicator light does not light up when charging	The power plug is not properly inserted.	Please connect the power correctly.
	Product charging circuit is faulty	Please contact your seller

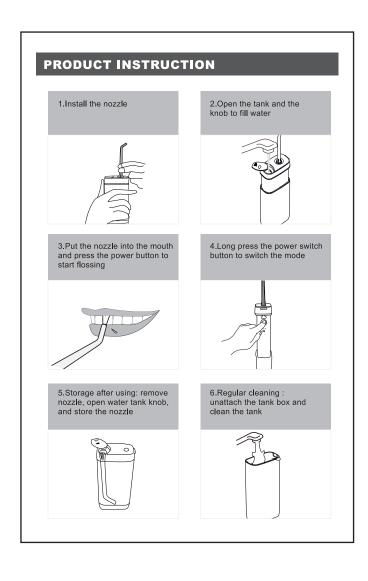

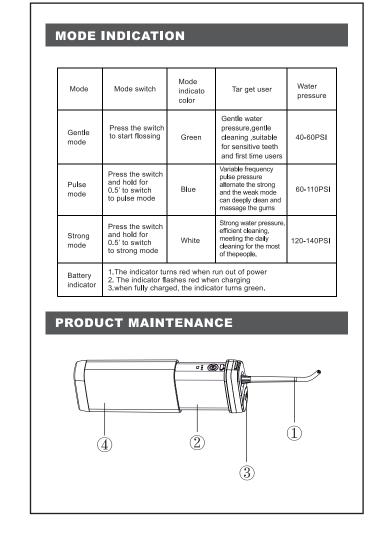

## 1.Nozzle Press the nozzle button and remove the nozzle, wash it with water and then wipe dry with a cloth. The dentist recommends to change the nozzle every 6 months. If the top of the nozzle is deformed, replace it with a new one to avoid malfunction. 2.Product body Remove the dirt with a cloth dampened with liquid soap, then wipe clean with a dry cloth. If the product body is dirty, wash it with water. Do not wipe the product with thinner, gasoline, alcohol etc. Do not wash with hot water above 50°C. Please wipe dry after cleaning. 3.Water inlet Wipe off the dirt, otherwise it will cause a leakage. 4.Water tank Open the tank and clean it regularly. Wash the internal with a brush or other object and wipe with a dry cloth. When not in use of the product for a long time, please keep the water tank dry. Thank you for purchasing our product. If you have any questions, please contact your seller.