


AJ300

Natural Sound Bedside Lamp

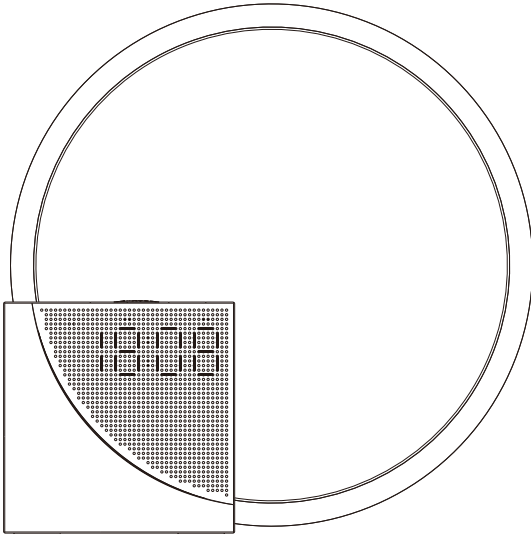

Please read carefully before use

Thank you for purchasing the AJ300 desk lamp scene speaker. Here enclosing with the detailed instructions for your best reference to experience our product easily! This user manual is designed to familiarize you with all the features of this device. Please take time to read this user manual carefully, if the translation is having faults or imperfect or there are some typographical error, hope to get your understanding.

Function introduction

- Built-in 10 Natural Sounds
- Time Display
- 2 Sets of Alarm Clock
- Countdown 30mins,60mins,90mins
- Desk Lamp Function, with 3- level Dimming
- Breathing Lamp Function
- Wake-Up Lamp(in AL2 mode)
- Snooze Function
- USB Output 5V 2A (10W MAX)
- Power off memory function(maintain approximately 3-5 hours)


Technical Paramaters

Model No	AJ300	Rated Voltage	12V/1A
Lamp Power	4W	Breathing lamp	1W
White Noise Power	70dB	USB Output	5V/2A(Max 10W)
Color Temperature	4000±250K	Horn Parameters	Φ 40mm 4Ω 3W
Power off memory	3 – 5 Hours	Weight	475g
Product Size	225x51x228mm		

Lamp Operation

- Plug in the power adapter included in the package at the "DC 12V" on the back of the product, and the time will display normally after plugging in to indicate that it is working normally.
- Short touch the lamp tube to light up the desk lamp, then short touch the lamp tube for 3-level dimming function, and finally touch to turn off the desk lamp, that can be used in the cycle operation.
- Long touch for 2 seconds to enter the breathing light mode, and then long touch for 2 seconds to turn off the breathing light.

Key Introduction

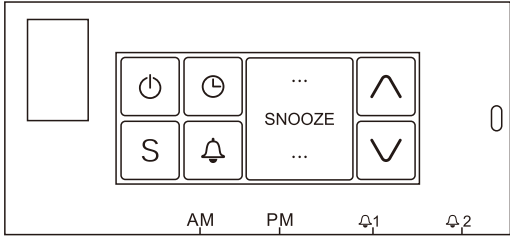

Power on/off/Track switching:

- In the clock mode, short press this button to start the natural sound function.
- Short press this button for the track switching function, including 01 to 10 cycle selection respectively: 01 birdsong, 02 ocean wave , 03 flowing water, 04 bonfire, 05 summer night, 06 thunderstorm, 07 fan, 08 rain, 09 music box, 10 clock ticking.
- Press and hold this button for 2 seconds to turn off.

Countdown:

- In natural sound mode, short press this button to select 30 mins/60mins /90 mins/OFF, and at the same time the indicator light in the upper left corner will turn on.The countdown will automatically confirm in 3 seconds and return to the time mode. Short press the up and down buttons to adjust the appropriate volume.
- During the countdown, the natural sound gradually decreases and the light gradually dims until they turned off;

Clock Setting:

- In the clock mode, long press this button for 2 seconds to enter clock setting."hour" digits starts flashing,then short press the ^ and v button to adjust.Press ⌚ agian or wait for 10 seconds to confirm.
- In time display mode,short press this button to switch between 12 or 24 hour format.

Alarm Clock Setting :

- In the clock mode, short press the 🔔 button.🔔1 light up and display the current alarm "clock 1" time, short press v button to turn off🔔1, short press ^ button to turn on🔔1;Short press again to enter the 🔔2.
- Long press 🔔 key for 2 seconds to enter the alarm setting 🔔1and 🔔2,the default 🔔1symbol flashes together with "hour" and "minute", short press ^ or v key to select 🔔1or 🔔2 mode.Short press 🔔 key again to enter the alarm clock setting and the "hour" is flashing, then press ^ or v key to select.Then short press 🔔 key to enter the "minute" flashing, press ^ or v key to select.Then short press 🔔 key to set the alarm clock ringtone track, press ^or v key to select.Short press or wait for 10 seconds to cofirm with a “beep” sound and return to time display.
- 🔔2 is built in wake-up light function, the light gradually changes from dark to brightest 10 minutes in advance, and the light reaches t he brightest at the same time the alarm clock rings;

SNOOZE

- In clock mode,short press on SNOOZE button to adjusts the brightness of display screen in 3 levels:brightest,medium,slightly dim,and off in a loop.
- During alarm or snooze mode,a short press button on 🔔or a 2-second longpress on SNOOZE button will turn off the alarm for the day.
- When the alarm goes off and the SNOOZE button is pressed,the indicator light on the alarm will flash until the alarm rings again.
- When the 🔔2 goes off,short press the SNOOZE button ,light intensity will gradually increase again.After 10 minutes of snoozing,the alarm will ring again.
- The SNOOZE function is set to a maximum of 3 times,after which the alarm for the day will be turned off.If the SNOOZE button is not pressed, the alarm will turn off for the day after 30 minutes of ringing.

Up:

- When setting the clock and alarm clock, short press this button to turn up the function; In the natural sound mode, short press this button to increase the volume;

Down:

- When setting the clock and alarm clock, short press this button to scroll down. In natural sound mode, short press this button to decrease the volume;

Power-off Memory Function

After unplugging the DC power supply (the internal battery keeps the time running normally, it can last for about 3-5 hours after the power is cut off), the display screen is off, the light is off, the sound stops, and all functions stop and do not respond. However, the clock will continue to run.When the DC power is reconnected, the time will be displayednormally again.

Warranty Card

Applicable for

- Since buying date,the user enjoys one year free repair services under normal use.After one year,will be charged according to each component part cost.
- In case change component part,will be charged according to our company's component part cost list.
- The following situations without free repair services in warranty period
1)Damage caused by natural earthquake,rat disaster,and unnormal use.
2)Damage caused in transportation,fall,and unproper storage.
3)Consumable component,such as spare parts,batteries,light bulbs,etc.
4)Warranty information records is not complete,no purchase date, no buying shop seal,etc.
5)Featured using environment,such as humidity,sulfur area, high salty and on board,etc,easy corrosion area.
6)Using not according to the instructions.
7)Special offer.
- When return to factory for repair,the user should make sure the product packed properly to avoid any damage during transportation.
- Factory not responsible for the damages caused by the users themselves unproper disassemble.