

iZBT50 - QSG (English)
Size: 510 x 150 mm (folded 102 x 150 mm)
Material: 157g Art paper
Color: 1C + 1C (black)

Aug 5, 2022

iHome

 
SWEETDREAMS SOOTHER WITH CRY SENSOR




Model: iZBT50

QUESTIONS? visit www.ihome.com

OVERVIEW

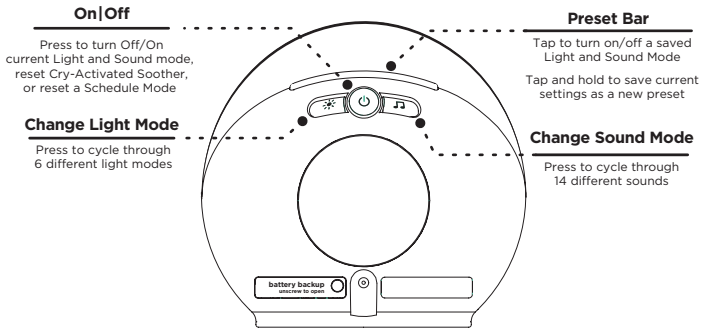


REMOTE CONTROL

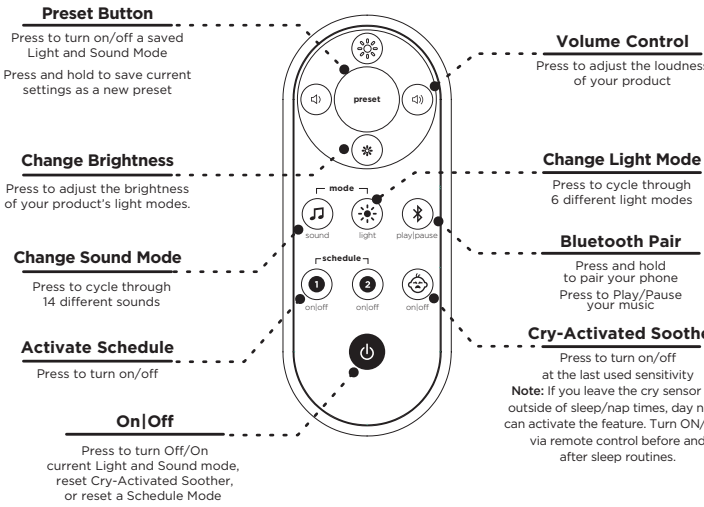 


1

 BOTTOM CONTROLS (FOR ADVANCED FEATURES)

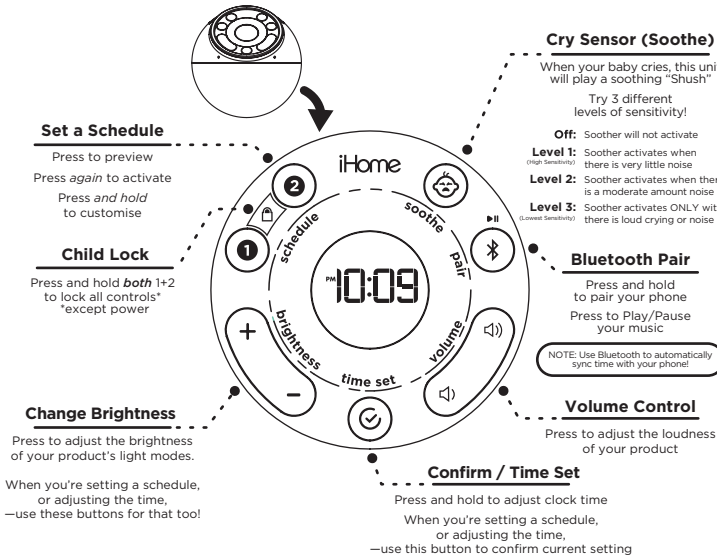

DISPLAY

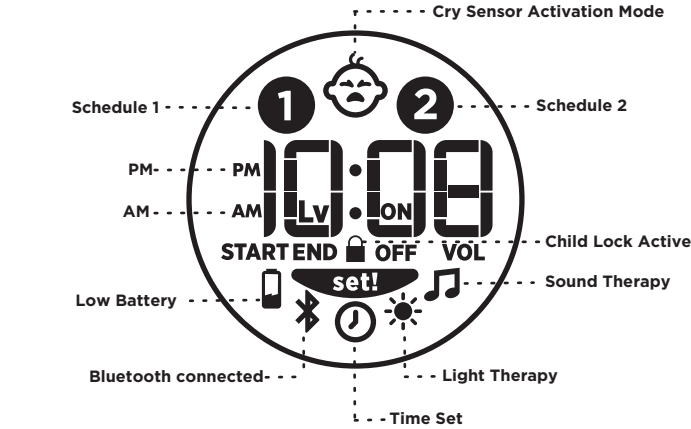 


2

GETTING STARTED


1. Connecting the Unit

 Connect the included AC adapter to the DC jack located on the back of the unit and connect the other end to a working wall outlet not controlled by a light switch. Remove the battery pull tab from the back of the unit.

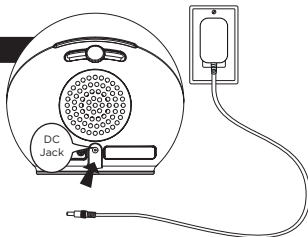

2. Connecting to Bluetooth

 - Turn on your Bluetooth device and make it 'discoverable' by turning on Bluetooth mode.
- Press and hold the **Bluetooth Pairing Button** on the bottom of the iZBT50 unit, or on the remote control, until the Bluetooth Pairing Icon flashes to indicate the unit is in pairing mode.
- Select 'iHome iZBT50' on your device's Bluetooth menu to connect!

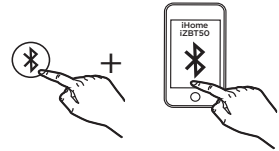

3. Setting Your Clock

Auto Time Sync (via Bluetooth)

Automatically sync the clock time of the unit to your iPhone or iOS device over Bluetooth. The time will sync when you first pair and re-link your device over time.

NOTE: Does not work with Android devices.

 
Manually Setting the Time

- Press and hold the Time Set Button on the bottom of the unit until the display flashes and a beep sound. Release the Time Set Button.
- Press the - or + Buttons to select 12 or 24 hour display mode and press Time Set to confirm.
- Press the - or + Buttons to adjust the hour, and tap Time Set to confirm. (Make sure to set correct AM/PM time). The AM/PM indicators appear on the left lower corner of the display.
- Press the - or + Buttons to adjust the minute, and tap Time Set to confirm.

LIGHT THERAPY

Press the **Light Button** repeatedly to cycle through light therapy modes:

- Rest Glow** - Red Light mode for falling asleep
- One Color** - Rainbox spectrum slow fade
- Sun Light** - Pick your favorite color
- Candle** - Adjustable lamp for reading or sleep
- Off** - Warm calming mood lighting effect

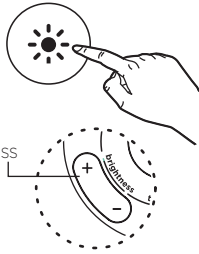


NOTE: Press & Hold to Turn OFF current Light Therapy Mode

SOUND THERAPY

Press the **Sound Button** repeatedly to cycle through sound therapy modes:

 - Sleep**
 - Air Focus
 - Quiet Drive
 - Shush Meditation
- Lullaby**
 - Brahms Silent Night
 - Twinkle Morning Light
- Nature**
 - Ocean Storm
 - Nature River
 - OFF

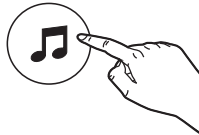


NOTE: Press & Hold to Turn OFF current Sound Therapy Mode

CRY-SENSOR (SOOTHE MODE)

Activate the Cry-Sensor Mode to sense when your baby is crying and automatically play a soothing 'Shushing' voice to calm your baby and help training for improved sleep (both parents & baby).

Try 3 different levels of sensitivity!

 - Off:** Soother will not activate
- Level 1:** (High Sensitivity) Soother activates when there is very little noise
- Level 2:** Soother activates when there is a moderate amount noise
- Level 3:** (Lowest Sensitivity) Soother activates ONLY with there is loud crying or noise

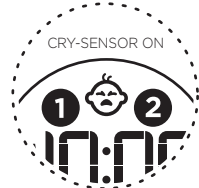

NOTE: Cry Activation mode cannot be armed while in Bluetooth mode. If Sounds Therapy is ON, the maximum volume will be limited to aid in sensing when your baby is crying.

4

HOW TO SAVE A PRESET

The unit allows you to store a preset to easily access your favorite **light and sound combinations** using the remote control.

- When your preferred **light and sound modes** are active, press and hold the Preset Button or tap the **preset bar** to activate your preset at any time.
- Once set, press the Preset Button or tap the **preset bar** to activate your preset at any time.
- Tap the preset bar to turn off your preset at any time.

SETTING SCHEDULE 1 & 2

Customize up to two programs of light/sound with a start and end time.

- Press and hold the **1** **OR** **2** for 2 seconds to begin. The hour digit will flash.

SET THE START TIME

- Press the - OR + to set the 'start' hour to the desired time. The AM/PM indicator appears to the left lower corner of the display. Press **C** to confirm.
- Press the - OR + Buttons to adjust the minute of the 'start' minute to the desired time. Press **C** to confirm.

SET THE END TIME

- Press the - OR + Buttons to schedule the 'end' hour to the desired time. Press **C** to confirm.
- Press the - OR + Buttons to schedule the 'end' minute to the desired time. Press **C** to confirm.

SET THE SOUND MODE

- Press the - OR + Buttons to select a preferred sound (1-14 tones). Press **C** to confirm.
- Press the - OR + Buttons to adjust the volume (1-16). Press **C** to confirm.

SET THE LIGHT MODE

 
- Press the - OR + Buttons to select 1 of 5 different light modes. Press **C** to confirm.
- Press the - OR + Buttons to select brightness level (1-20). Press **C** to confirm.

DONE!

- When set, Schedule 1/2 will display the respective **1** / **2** icons on the display and will activate between the respective Start/End times.
- Press **C** or **1** / **2** to suspend active schedule and reset for next day.

USING THE CHILD LOCK


When the child-lock feature is active, only Power ON/OFF will function on the unit.

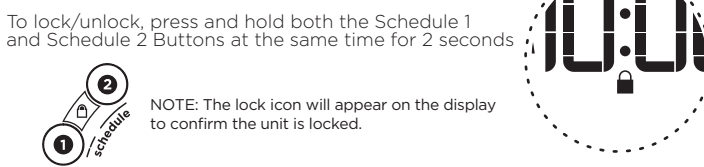

REMOTE CONTROL BATTERY

The remote control is powered by a CR2032 button cell battery. To replace the battery:

 - Use a Phillips screwdriver to open the battery compartment door located on the back of the remote control.
- Insert a fresh CR-2032 battery, checking that the polarity matches the markings on the battery slot.
- Replace the compartment door. Do not overtighten the screw.

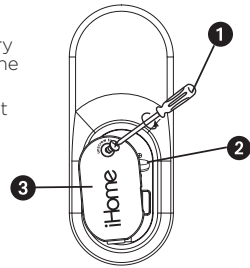

USING REMOTE CONTROL

This is an RF remote control that allows for simple control of the unit through walls or any direction without getting up or waking your baby (CR2032 battery included).

NOT WORKING? If the remote is not working, first try to replace the included battery. If it still isn't working, it likely needs to be re-paired to the unit (each remote is paired to your unit).

MANUALLY PAIRING THE REMOTE:

 
In standby mode, press and hold both the "+" and "volume +" bottom buttons on unit for 6 seconds, the LCD will show "Pair". Press any remote control button within 1 minute as a pairing signal. After pairing successful, your remote control should be able to operate the unit.

6

BATTERY BACK-UP

The unit uses a CR-2450 back-up battery to provide continuous alarm operation and clock settings in the event of a temporary power failure. Remove the battery pull tab before use. When the low battery icon flashes on the clock display, it is time to replace the back-up battery. The battery compartment is located on the back of the unit.

- Make sure the AC adapter is connected, or you will lose your time and alarm settings during battery replacement.
- Use a Phillips screwdriver to open the battery compartment door.
- Insert a fresh CR-2450 battery, checking that the polarity match the markings on the unit. Replace the compartment door. Do not overtighten.

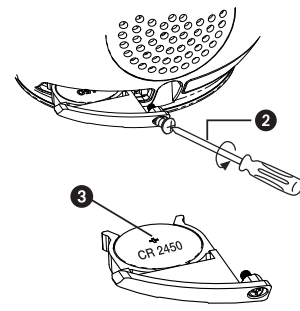

WARNING

- Do not ingest the battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

7

IMPORTANT SAFETY INSTRUCTIONS

Please heed all warnings, read and follow all instructions and keep these instructions handy for future reference.

- Do not use this product near water.
- Unplug unit and clean only with damp cloth. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Heat - This product should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this product during lightning storms or when unused for long periods of time.
- Damage Requiring Service - This product should be serviced by qualified service personnel when:
 - Plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain. The unit has been dropped or the enclosure damaged.
 - The unit exhibits a marked change in performance or does not operate normally.
- No naked flame sources, such as lighted candles, should be placed on this product.
- Attention should be drawn to the environmental aspects of battery disposal. Many electronics retailers now recycle batteries and other electronic components at no charge. To find a drop-off location near you, visit www.call2recycle.com.
- This product is suitable for use in tropical and/or moderate climates.
- Do not place product or remote within reach of baby or children.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not dispose of batteries in the household trash or fire.
- The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

MAINTENANCE

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.

8

WARRANTY

For product support information and warranty please visit:
www.ihome.com/support

© 2022 SDI Technologies, Inc. All rights reserved.
Questions? Visit www.ihome.com

iZBT50_QSG-080522-A

Printed in China

6

7

8

7

5