

Made In China
Franklin Sports Inc.
Stoughton, MA 02072

Major League Baseball trademarks and
copyrights are used with permission of
Major League Baseball Properties, Inc.
Visit MLB.com.



For replacement parts:
Visit: www.franklinsports.com/14071
Email: parts@franklinsports.com
Call: 1-800-225-8649

Franklin®



4-IN-1 PITCHING MACHINE BATTER & FIELDER COMBO

ITEM NUMBER: **14071**

For all your replacement part needs, please visit:
www.franklinsports.com/14071



NOTE: PRINT FRONT TO BACK



CUSTOMER SERVICE COMMITMENT

Thank you for purchasing this Franklin® product! In the event that the product you've purchased has missing or damaged parts, please contact us at:

parts@franklinsports.com

or

Visit our website at: **www.franklinsports.com/14071**

If possible, please include product part number and parts description so we can best assist you.


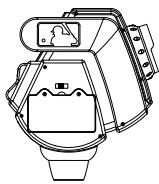
 
 
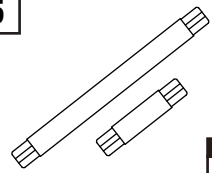


WE'RE HERE FOR YOU!

**PLEASE DO NOT RETURN THIS PRODUCT TO
THE STORE IT WAS PURCHASED FROM.**

**WE ARE COMMITTED TO FULFILLING ALL
REPLACEMENT PART NEEDS IMMEDIATELY.**


Thank you for your continued support, and welcome to the #FranklinFamily!

PARTS LIST

1  QTY x1 Ball Feeder Rep. Part: 14071-R1	2  QTY x1 Pitching Unit Rep. Part: 14071-R2	3  QTY x1 Base Rep. Part: 14071-R3
4  QTY x3 Legs Rep. Part: 14071-R4	5  QTY x2 Poles Rep. Part: 14071-R5	6  QTY x3 Ground Stakes Rep. Part: 14071-R6
7  QTY x6 Plastic Balls Rep. Part: 14071-R7		


ASSEMBLY INSTRUCTIONS

STEP 1

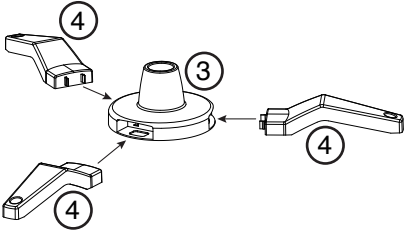


PARTS

3



x1

 4




x3

NOTE


Snap the (3) **Legs** (#4) into the **Base** (#3) as shown.

STEP 2

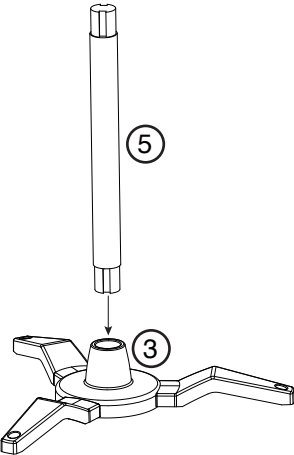


PARTS

3



x1

5




x1

NOTE

Insert the **Pole** (#5) into the top of the **Base** (#3) as shown.


ASSEMBLY INSTRUCTIONS

STEP 3

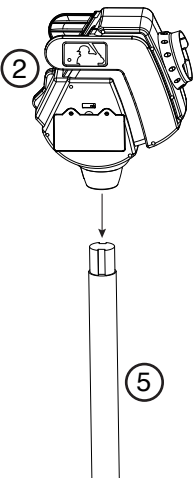


PARTS

2



x1

5




x1

NOTE


Attach the **Pitching Unit** (#2) to the **Pole** (#5) as shown.

STEP 4

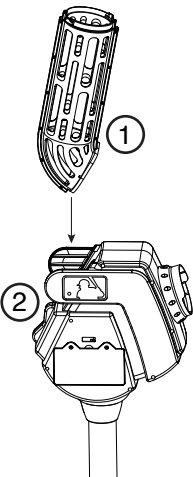


PARTS

1



x1

2




x1

NOTE


Slide the **Ball Feeder** (#1) into place on the back of the **Pitching Unit** (#2). The telescopic design allows the ball feeder to adjust in length to fit more balls.

ASSEMBLY INSTRUCTIONS

STEP 5

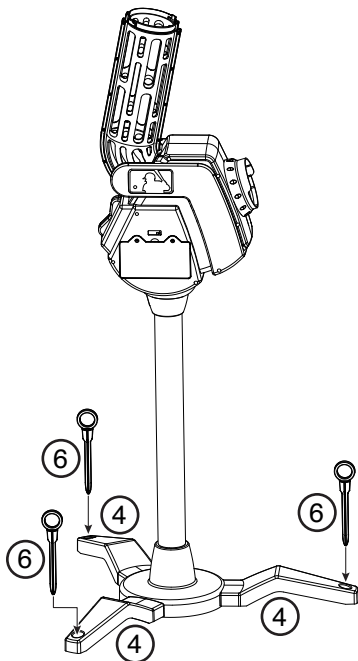

PARTS

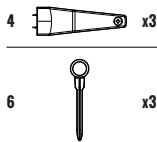


NOTE

Place the **Ground Stakes (#6)** through the holes on the **Legs (#4)** and into the ground for added stability.

**YOU ARE NOW READY TO PRACTICE
POP FLIES, GROUNDERS, AND FAST PITCH!**

ASSEMBLY INSTRUCTIONS

STEP 6

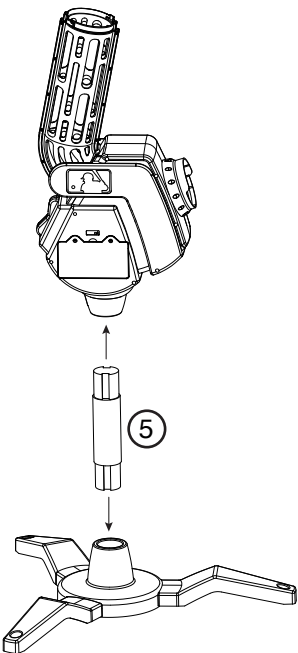

PARTS




NOTE

When you're ready to practice Soft Toss, simply remove the longer pole and replace with the **Shorter Pole (#5)** so that your Pitching Unit is closer to the ground. Adjust the angle of your Pitching Unit to your liking and continue play!

**YOU ARE NOW READY TO
PRACTICE SOFT TOSS!**

GAMEPLAY INSTRUCTIONS

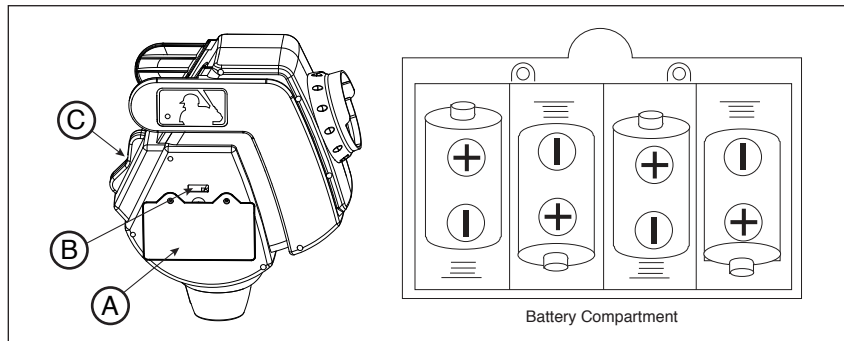

A) The battery compartment is located on the side of the pitching unit.

- Requires 4 "C" size batteries (not included)
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

B) To play, turn the power button to the "ON" position and load the balls into the ball feeder.

When you are done using the machine, turn the power button to the "OFF" position.

C) To adjust the angle of the pitching unit simply press the top of the button and hold in on the back of the unit to shift to the desired angle (Soft Pitch; Fast Pitch; Grounder's Practice; Pop Fly Practice).


Note: To conserve batteries remember to turn product to "OFF" position.

Remove batteries when stored for long periods of time.

IMPORTANT INFORMATION – PLEASE READ BEFORE USE

- This product is intended only for outdoor recreational use.
- Use only with balls designed or sold with this item. Do not attempt to use any other balls.
- Do not place hands or objects into any opening of the machine while in the "ON" position. Injury or damage to product may occur.
- Do not stand in front of unit or players using this machine.
- Do not point toward or use near breakable objects. For example: glass windows and doors.
- If the product jams, turn machine to "OFF" position. Lift up and turn toward ground or upside down to dislodge ball. Do not point toward any person.
- Use only on a flat playing surface.
- Adult assembly and supervision is required.

FOUR DIFFERENT ANGLES FOR THE BATTER & FIELDER

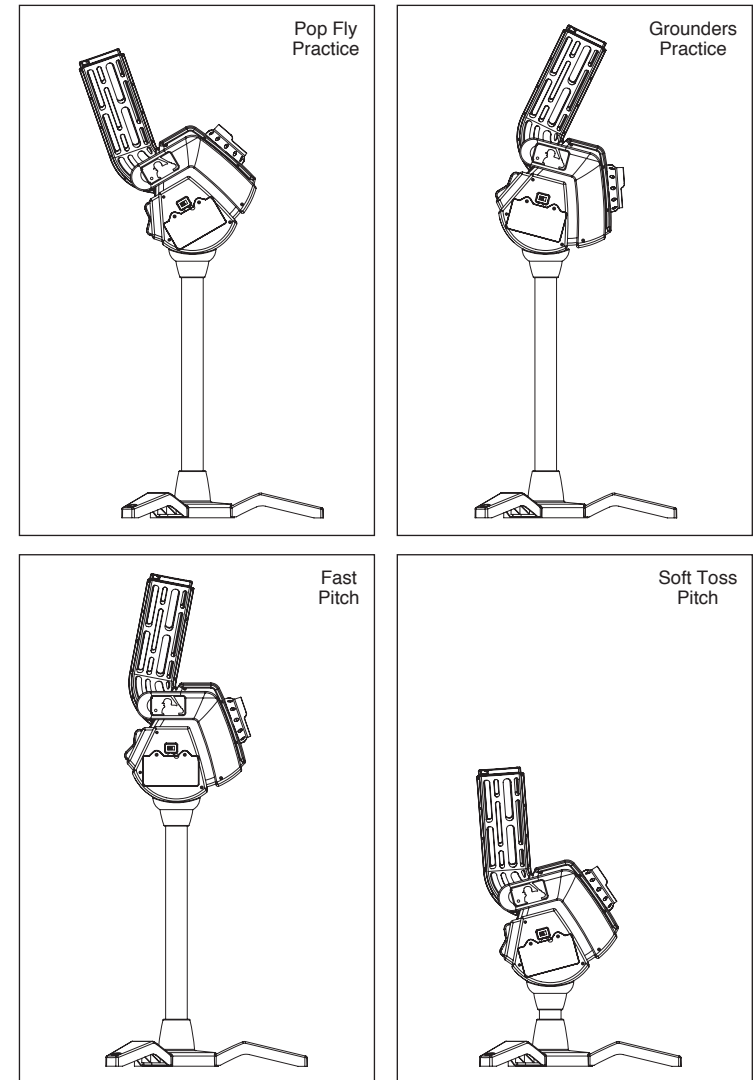

YOU ARE NOW READY TO PLAY!