

3 to ADULT

AIR TOOBZ

/// AIR-POWERED PLAY



USER'S MANUAL

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the **couraged** *to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The identification, by name, address and telephone number or Internet contact information, of the responsible party. The responsible party for Supplier's Declaration of Conformity must be located within the United States Name or item number of product.

SAFEGUARDS AND INSTRUCTIONS

Save these instructions.



PLEASE READ ALL INCLUDED MATERIAL AND SAVE FOR FUTURE REFERENCE.

IMPORTANT

- *This product is not intended for children under 3 years old.*
- *Parental guidance is recommended for play. Keep the product in your sight while children are playing with it. The toy is intended to be assembled by an adult.*
- *Only use the included Air Toobz balls and accessories with this product.*
- *Do not insert other foreign objects into the Air Toobz Unit.*
- *Keep hair and loose clothing clear of the fan input to prevent injury or damage to the product. Do not insert hands or other foreign objects not intended for play past the rubber membrane of the input.*
- *Do not aim or launch balls at the eyes or face of people or animals. Use only the balls designed and intended for this product.*
- *Do not modify this product or any of its included accessories.*
- *Remove cardboard and plastic packaging prior to giving it to children.*



BATTERY AND CHARGING SAFETY PRECAUTIONS



- *The product includes an internal battery that is factory-installed and non-replaceable.*
- *Opening the product's housing could render the product inoperative and will void manufacturer warranties.*
- *This toy is equipped with a lithium-ion battery. Never charge the battery unattended. Charge the battery in an isolated area. Keep away from flammable materials.*
- *Do not expose the product to direct sunlight. There is a risk of the batteries overheating or igniting.*
- *Do not disassemble, modify, heat, or short-circuit the batteries. Do not place them in fires or leave them in hot places.*
- *Do not drop or subject the product to strong impacts.*
- *Do not allow the batteries or the product to get wet.*
- *Only charge the unit with the included and specified Air Toobz battery charger.*
- *In the unlikely event of leakage or explosion, use a sand or chemical fire extinguisher for the battery.*
- *Batteries must be recycled or disposed of properly.*
- *Do not operate the product with a damaged cord or plug or after the product malfunctions or is dropped or damaged in any manner.*
- *This product is not recommended for use outdoors.*
- *Do not let the cord hang over the edge of a table or counter while the unit is charging.*
- *Charging should be performed by an adult and out of reach of young children.*
- *Lithium-ion batteries deteriorate, and their life span will shorten after repeated use. This is not a malfunction of the product.*

For Retail Store Demo Instructions call 1-800-335-5621



 
- The transformer, power supply or battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Misuse of transformer can cause electrical shock. I The toy shall only be used with a transformer for toys or a power supply for toys I The toy shall be used with the transformer or power supply supplied, if the transformer is supplied with the toy;
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this toy.

BATTERY AND CHARGING

To begin charging the unit, make sure the unit is powered down, then connect the included 12V Air Toobz charging adapter to the DC port on the back of the unit. The four blue indicator lights will begin flashing, indicating that the unit is charging. Once the unit is fully charged, the lights will stop flashing and remain on. Disconnect the charger. You are ready to play! **NOTE: The fan unit will not operate while the charger is connected.**

Batteries must be recycled or disposed of properly. When this product has reached the end of its useful life, it should not be disposed of with other household waste. The Waste Electrical and Electronic Equipment Regulations require it to be separately collected so that it can be treated using the best available recovery and recycling techniques.

This will minimize the impact on the environment and human health from soil and water contamination by any hazardous substances, decrease the resources required to make new products and avoid using up landfill space. Please do your part by keeping this product out of the municipal waste stream!

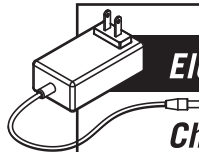

Electrical Specifications:

Charger: 12.6V 1A

**Battery: 11.1V 2200mAh
Lithium Ion**




TURNING ON AIR TOOBZ

Save these instructions.

To turn the unit on, press and hold the orange power button for 0.5 seconds. Once on, the 4 blue lights will display the current battery level. The green lights surrounding the speed control dial indicate the current speed setting of the fan. Rotate the dial to adjust the speed of the fan from levels 1 to 15. Press the orange power button again to turn the unit off when you are done playing.

To maximize battery life and prolong playtime, the unit includes an automatic 15-minute shut-off function. To resume play, just press the button to turn it back on.

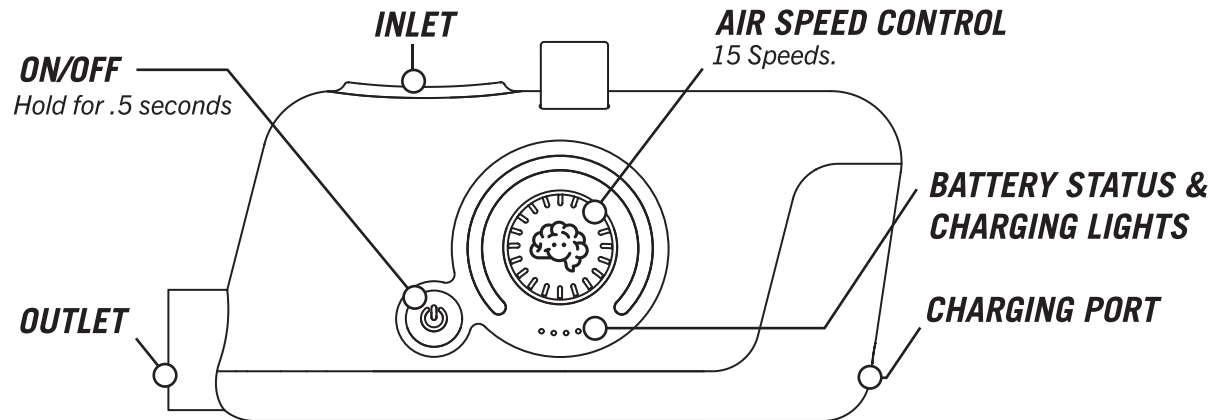


For Retail Store Demo Instructions call 1-800-335-5621




GETTING STARTED

To begin play, connect either a straight tube or corner tube to the fan unit's output using one of the orange connector rings. Continue using the connector rings to connect more tubes to create all kinds of loops, twists, and turns. There's no wrong way to build! Once your tube structure is built, turn on the fan unit, set the fan speed to the desired level, and then feed the balls into the top opening/input of the fan unit, one at a time, to watch them fly through your creation.

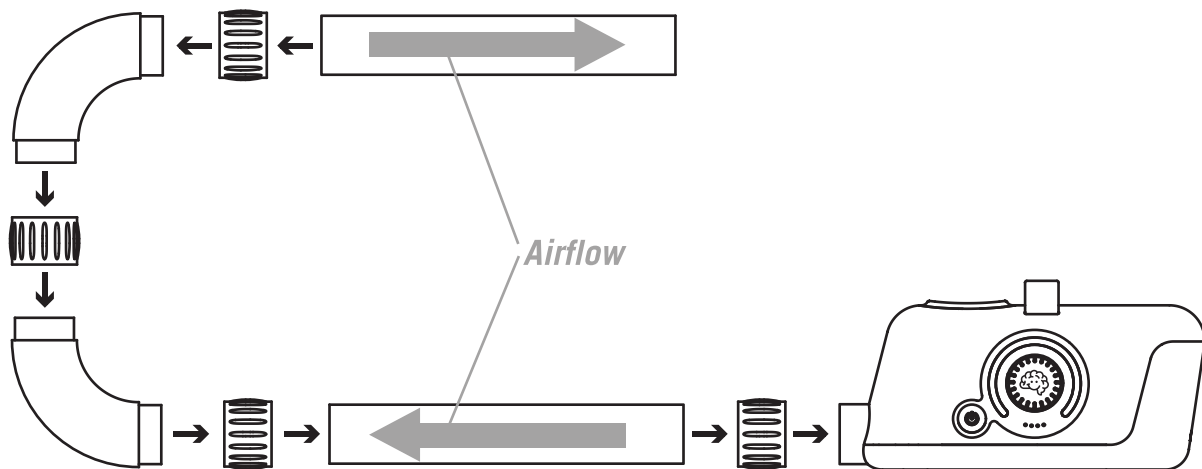


START EXPLORING

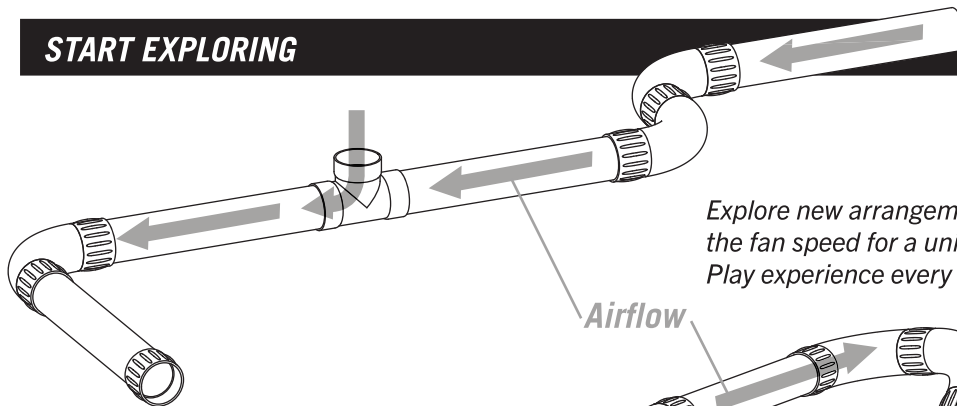

Explore new arrangements and adjust the fan speed for a unique Air-Powered Play experience every time.

Airflow

Experiment further by incorporating the Funnel and T Tube into your builds to create another input, a splitter, a continuous loop, and more. The different parts have many different uses and arranging them differently can give you an entirely different result.

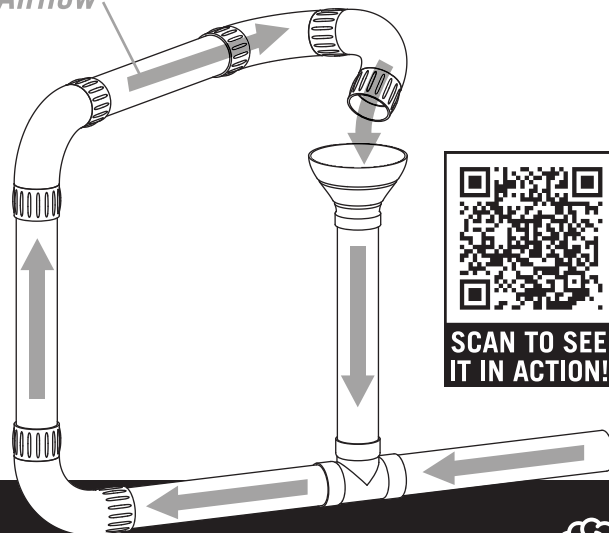

SCAN TO SEE
IT IN ACTION!

CLEANING



Do not submerge the main fan unit or accessories in water. Clean external rubber and plastic parts with a damp soft cloth and mild detergent. Wipe dry with a lint-free towel.

1-800-335-5621 



AIR TOOBZ

/// AIR-POWERED PLAY

Fat Brain Toy Co. • 800.335.5621 • www.fatbraintoyco.com • Elkhorn, NE 68022
Please keep all relevant information. Made in China. © 2023 Fat Brain. PATENT PENDING.

