



SHARPER IMAGE®

REVEL HAIR MULTI-STYLER



Scan for more styling tips and guides.

CONGRATULATIONS ON YOUR NEW REVEL HAIR MULTI-STYLER.

Please read all instructions and warnings prior to use.
Keep this manual as it contains important information for
future reference.

SHARPER IMAGE® NAME AND LOGO (INCLUDING THE 77
LOGO, TOMORROW'S TOMORROW, SHARPER IMAGE®
REVEL, AND CELEBRATE YOUR HAIR) ARE TRADEMARKS OR
REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2023
MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS
RESERVED.

FOR CUSTOMER SUPPORT, PLEASE CALL 1-800-374-2744.

Printed in China.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety
precautions should always be followed.

PLEASE READ BEFORE USE KEEP AWAY FROM WATER AND OTHER LIQUIDS.

DANGER – As with most electrical appliances, the hair multi-styler is electrically live even
when the switch is in the off position. To reduce the risk of electric shock:
• Always unplug the hair multi-styler after each use.
• Do not place or store the hair multi-styler where it can fall or be pulled into tubs, sinks, or water.
• Do not use the hair multi-styler while bathing or showering.
• Do not use the hair multi-styler near or place it in water or other liquids.
• If the hair multi-styler falls into water or other liquids, unplug it immediately. Do not reach into or
make contact with water or other liquids before first unplugging the hair multi-styler.


WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:
• Never leave the hair multi-styler unattended while it is plugged in.
• Close supervision is necessary when this hair multi-styler is used by, on, or near children or
individuals with certain disabilities or sensory impairment.
• Use this hair multi-styler only for its intended use as described in these instructions.
• Use this hair multi-styler only with the included attachments or with official Sharper Image®
compatible attachments. Do not use with any other attachments.
• Never operate this hair multi-styler if it has a damaged cord or plug, if it is not working properly, or if
it has been dropped, damaged, or dropped into water. Return the hair multi-styler to a service
center for examination or repair before attempted use.
• Keep the power cord away from heated surfaces.
• Do not wrap the power cord around the hair multi-styler or wrap the power cord too tightly.
• Never block the air openings while the hair multi-styler is in use. Do not place the hair multi-styler on
soft surfaces that may block the air openings, such as beds, couches, blankets, or towels.
• Keep the air openings clear and remove all lint, hair, and other debris.
• Do not fall asleep while using the hair multi-styler. Do not use the hair multi-styler on anyone who is
asleep or otherwise unable to respond.
• Never drop or insert any object into any opening of the hair multi-styler or its attachments.
• Do not use the hair multi-styler outdoors.
• Do not use the hair multi-styler in any location where aerosol (spray) products are being used or
recently have been used.
• Do not use the hair multi-styler where oxygen is being or recently has been administered.
• Do not direct hot air towards eyes or other heat-sensitive areas.
• Attachments and some areas of the hair multi-styler may become hot during use. Allow to cool
completely before handling.
• Do not set down or place the hair multi-styler on any surface while powered on.
• Keep hair and loose clothing away from the air inlets while in use.
• Do not operate the hair multi-styler using a voltage converter.
• Do not use the hair multi-styler with power strips or extension cords.
• This hair multi-styler has a polarized plug with a wide and narrow prong. As a safety feature, this
plug will fit in polarized outlets in a single orientation. If the plug does not fit fully into an outlet,
reverse the plug orientation. If the plug still does not fit, contact a qualified electrician. Do not
attempt to bypass this safety feature or force the plug into an incompatible outlet.

Household use only.

SAVE THESE INSTRUCTIONS.

WHAT YOU GET

- a. Hair multi-styler
- b. Detangler
- c. Airflow curler left
- d. Airflow curler right
- e. Styling brush
- f. Volumizing brush
- g. Smoothing brush

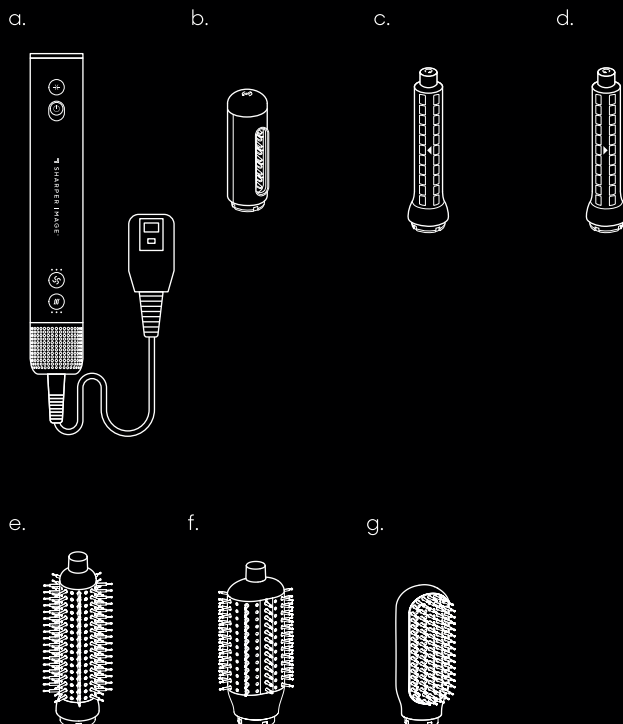


GETTING STARTED

POWER


- 1. Plug the attached power cord into a 120V indoor wall outlet.
- 2. Press the red reset button on the plug housing. (Figure A.)
- 3. Before starting the hair multi-styler, press the test button on the plug housing and check the reset button. (Figure B.)
 - If the reset button pops up, the ALCI safety device has activated successfully. Continue to step 4.
 - If the reset button does not pop up, stop. Unplug the hair multi-styler immediately and return it to be serviced.
- 4. Press the reset button again to reset the ALCI safety device.
- 5. To power on the hair multi-styler, slide the power switch up to the on position. (Figure C.)
- 6. To power off the hair multi-styler, slide the power switch down to the off position. Always unplug the hair multi-styler when done.

IMPORTANT: Follow these steps each time you use the hair multi-styler. Never use or attempt to use the hair multi-styler if the ALCI safety device does not activate.

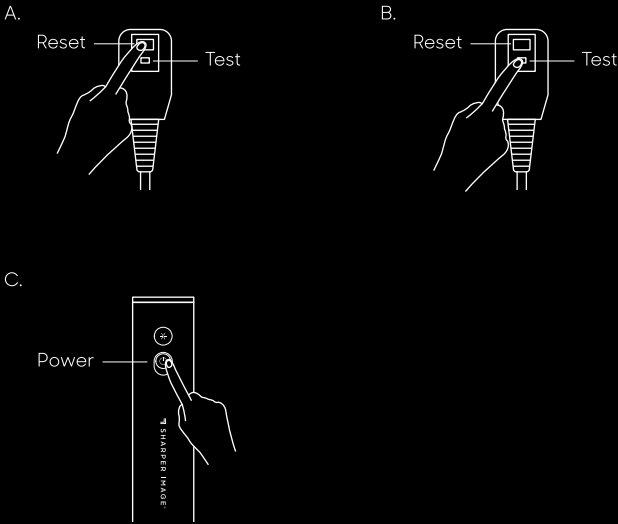

ATTACHMENTS


- 1. For easy curls, choose the airflow curler left or airflow curler right to curl your hair in either clockwise or counterclockwise twists. The top of each airflow curler features an arrow label showing the direction it curls. (Figure D.)
- 2. For additional styling needs, choose from the other attachments included.
 - Styling brush – Manage and style curly hair
 - Volumizing brush – Add volume and lift to any look
 - Smoothing brush – Smooth hair and reduce frizz
 - Detangler – Comb out tangles
- 3. To install your chosen attachment, line up the bottom of the attachment with the top of the hair multi-styler and slide the attachment into place. The attachment should lock into place. (Figure E.)
- 4. To remove an attachment, press and hold the release button on the back of the hair multi-styler and then pull the attachment off the hair multi-styler. (Figure F.)
- 5. When the detangler is installed on the multi-styler, twist the top of the detangler to extend or retract the comb. Use with the comb extended to detangle hair or use with the comb retracted to dry hair. (Figure G.)

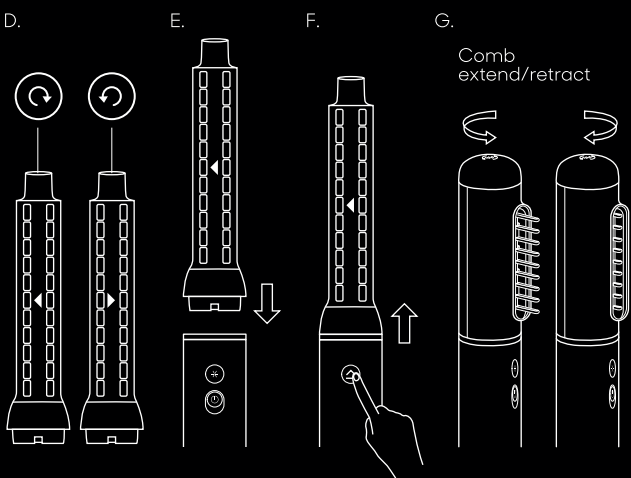

HOW TO USE


SETTINGS

- 1. To change the airflow speed, press the speed button. The number of illuminated white lights above the speed button indicate the airflow speed. (Figure G.)
- 2. To change the heat level, press the heat button. The number of illuminated red lights below the heat button indicate the heat level. (Figure H.)
- 3. To use cool shot and lock in styles with cold air, press the cool shot button above the power switch. The red lights below the heat button will turn off when cool shot is active. (Figure I.)

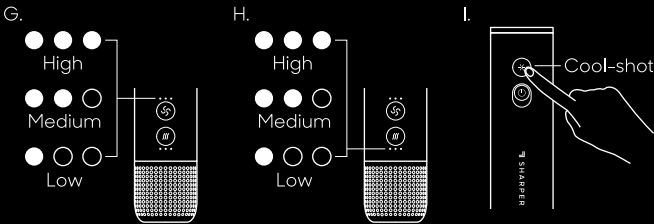

CARE INSTRUCTIONS

- 1. Clean the hair multi-styler regularly to prevent overheating and to ensure optimal performance.
- 2. Spot clean only with a dry cloth. Do not expose to moisture or any cleaning chemicals.
- 3. To clean the air intake, remove the filter cap from the bottom of the hair multi-styler. (Figure J.)
- 4. With the filter cap removed, gently remove any debris from the air intake and wipe clean with a dry cloth. (Figure K.)
- 5. Replace the filter cap by sliding it up into place until securely attached.

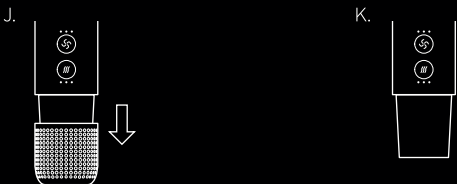

TROUBLESHOOTING

ALCI OPERATION
ELECTRICITY FLICKERS OR TRIPS
CIRCUIT BREAKER DURING USE.

This dryer is equipped with an Appliance Leakage Circuit interrupter (ALCI), a safety feature that renders it inoperable under abnormal conditions. Should the dryer turn off in use, press the red Reset button on the plug and the dryer should function normally. If the dryer does not reset, please check your circuit breaker. If the issue persists, ensure there are no other appliances plugged in within the room where the dryer is being used. Do not use the dryer with a power strip.

WARNING: Any other servicing should be performed by an authorized service representative or that the appliance has no user serviceable parts.

STOP This message about...
Ground **F**ault **C**ircuit **I**nterrupters
...can save a life!

If you must use your hair multi-styler in the bathroom, install a ground fault circuit interrupter (GFCI) now! A GFCI is a sensitive device designed to react immediately to electric current leaks and stop the flow of electricity. Your local electrician can help you decide which type is best for you – a portable unit that plugs into an electrical outlet or a permanent unit installed by an electrician. The National Electrical Code (NEC) requires GFCIs in bathrooms, garages, and outdoor outlets of all new homes.

Why do you need a GFCI?
Electricity and water don't mix. If a hair multi-styler falls into water while plugged in, the electric shock can kill you – even if the hair multi-styler is switched off. A regular fuse or circuit breaker will not protect you under these circumstances. A GFCI provides far greater protection.

A GFCI can save your life! The price is well worth it.

Don't wait. Install a GFCI now!

*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.