

Model No.
YC3149BM
Made in China



ILLUMINATED
LED BADMINTON


INSTRUCTION MANUAL YARDCANDY LED ILLUMINATED BADMINTON SET

Congratulations on your purchase of your YardCandy® LED Illuminated Badminton Set
– the perfect accessory for any outdoor party!



Package Includes:
2 LED Racquets (1 red, 1 blue)
2 LED Birdies
Instruction Manual

BATTERY INFORMATION

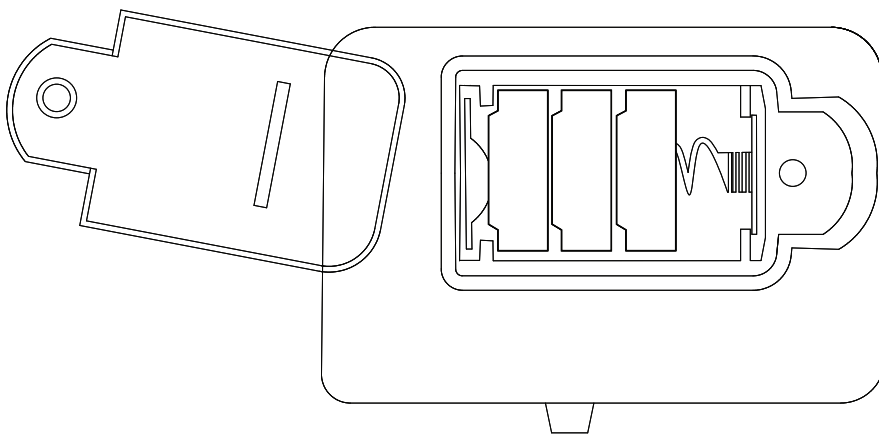

LED Racquet & LED Birdie Unit • Battery Compartment

Battery Information

YardCandy LED Badminton requires AG13/LR44 batteries, all included.

NOTE: Be sure to remove the clear plastic tab from the battery compartment before use.

Battery Replacement

Use a screwdriver to remove the screw from the battery compartment door.

Remove the door and insert 3 AG13/LR44 batteries, being sure to follow the polarity markings (+/-) as shown in the diagram.

Replace the battery compartment door and secure with the screw. Do not overtighten.

CAUTION

Do not mix old and new batteries.

Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.

Batteries must be installed according to the correct polarization.

HOW to SCORE in BADMINTON

USING YOUR LED HORSESHOES

A match consists of the best of 3 games of 21 points.

Every time there is a serve — a point is scored.

The winner is the first side to get to 21 points, with a 2-point lead.

The game is played until someone wins by 2.


At 29 all, the side scoring the 30th point, wins that game.



LIMITED 30-DAY WARRANTY

B&D Group, LLC, warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 30 days from the date of purchase. If any such defect is discovered within the warranty period, B&D Group, LLC, will repair or replace the unit free of charge upon receipt of the unit, shipping postage prepaid and insured to the factory address received from Customer Service. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of any panels voids all warranties. This warranty does not cover cost of repairs made or attempted outside the factory. Any applicable implied warranties, including warranties of merchantability and fitness are hereby limited to 30 days from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States would be expressly communicated from Customer Service. Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter detailing the complaint or issue, along with your daytime telephone number, name and address inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to Service@BandDGroup.com, specifying the model number and the problem.

PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING. WE CANNOT STORE YOUR UNIT.

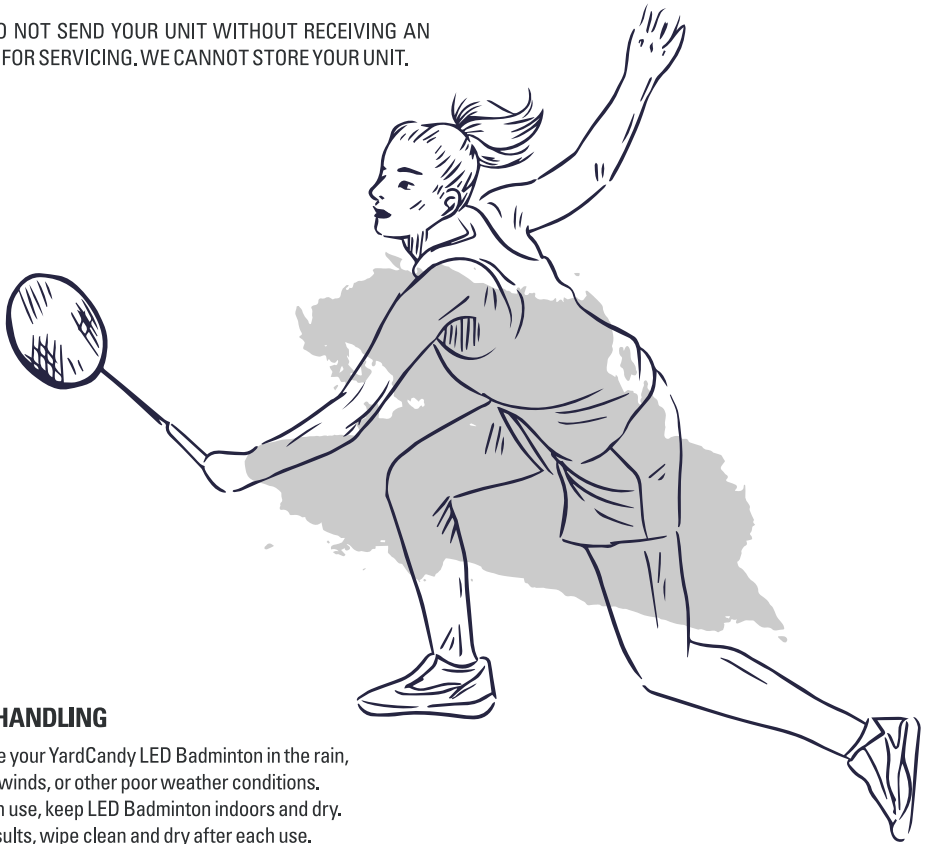

CARE & HANDLING

DO NOT use your YardCandy LED Badminton in the rain, snow, high winds, or other poor weather conditions. When not in use, keep LED Badminton indoors and dry. For best results, wipe clean and dry after each use.

DISTRIBUTED BY B&D GROUP, LLC.

14149 SW 119th Avenue
Miami, Florida 33186 • Tel. 305.964.7295



www.PoolCandy.net

  @PoolCandy