INSTRUCTION MANUAL

INTRODUCTION:

This Super Slot Machine allows you to play the slots at home, just like in Las Vegas! It has been designed to realistically mimic the sound, appearance, and action of a real casino machine. Simply pull the lever in a downward motion and see the reels spin, like the real casino slots. Any combination of BARS and 7s that appear across the center of the reels is a winner. If you hit a winner, the jackpot will pay out automatically with any tokens in the machine. A bell will sound and the win light will flash if batteries are installed.


THIS BANK CANNOT BE USED AS A GAMING DEVICE NOR SUITABLE FOR CHILDREN UNDER 14 YEARS OF AGE.

INSTRUCTIONS:


Batteries are required to hear the bell and flash the light on a winner. Please refer to illustrations below on how to install batteries. The unit does NOT require batteries or coins to operate.

The unit accepts 95% of the world coins and any coin that will fit in the coin slots. Coins inserted into the TOP LEFT slot (SAVINGS BANK COIN SLOT) will drop into a back compartment. Saved coins in this back compartment can be removed by opening the SAVINGS BANK DOOR at the bottom left of the back panel.

All coins dropped into the RIGHT FRONT slot (COIN SLOT FOR AUTOMATIC JACKPOT) will be released on any jackpot winnings. These coins can be released at any time by pushing the manual release lever in the coin drop opening.

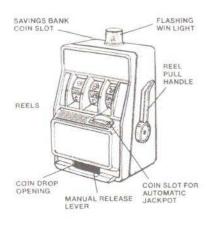



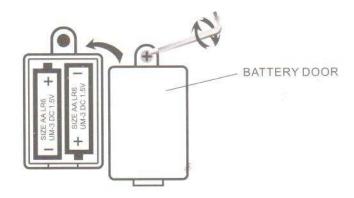

Gently pull the handle in a smooth, downward motion to spin the reels. Release the handle immediately after the mechanism releases (at the end of the pull). NEVER jerk or pull the handle in a rough manner.

Always wait for the reels to stop completely before pulling the handle again. Always clear all coins from the Coin Drop Opening BEFORE pulling the handle again.

BATTERY INSTALLATION/REPLACEMENT

This unit takes two (2) #5 size (AA, 1.5V) batteries (NOT included).

- Remove battery door on back of unit by pressing the tab down.
- Insert two (2) #5 size (AA, 1.5V) batteries as show inside the battery compartment.
- · Replace the battery door tightly and close.
- Use only alkaline batteries for longer life
- · Replace batteries when product does not function properly.
- · Remove dead batteries and dispose of them safely.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.