

展开A4:210*285MM


NOTE: DO NOT STACK anything on TOP of Bikky

Allow Bikky to Cool Down (3 to 5 Minutes) before cooking the next cookie


NOTE: Fan May come on to Cool Down Heat

**PATENT PENDING
MADE IN CHINA**

 
**Lincoln Stern Products, LLC
PHONE: (352) 834-1490
MONDAY - FRIDAY 9-5 EST
EMAIL: sales@getbikky.com
WEBSITE:
WWW.GETBIKKY.COM**



Intertek



Instant 1 Serve Cookie Maker
COOKIE MAKER
INSTRUCTION MANUAL
MODEL NO: EL23002-00000A

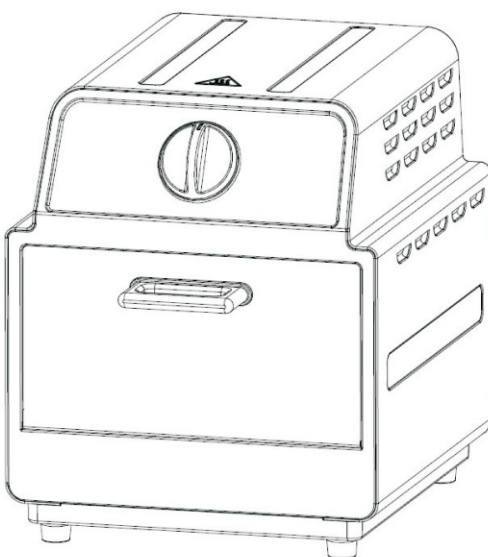

1 / 10

Thank you for purchasing Bikky. Please read this instruction manual carefully before using and keep it handy for future reference.

INDEX

1. Safety Precautions /Cautions

2. Specifications

3. Diagram

4. Name of parts/Functions

5. Usage

6. Cleanliness and Maintenance

7. Troubleshooting

2 / 10

11. Allow Bikky to cool for two minutes before continuing to your next cookie.

12. Enjoy!

CLEANLINESS & MAINTENANCE

1. Please shut off the power and pull out the plug before cleaning.

2. Allow Bikky to cool completely before cleaning.

3. Clean with water and a mild detergent.

4. Be sure to dry completely after cleaning.

5. If there is oil in the cookie machine, please use a soft wet cloth soaked in neutral detergent to wipe.


6. Make sure there is no water left inside of your appliance as this could cause an electrical shortage and fire.

7. After cleaning, let the product dry and store in a cool dry place.

8. Remove the crumb tray regularly and discard the residue on the tray, wipe it clean with a soft wet cloth, and then insert it into the designated position of the appliance's crumb tray.

10 / 10

Safety Precautions




WARNING

1. Please read this instruction manual carefully before using and keep it handy for your future reference.


2. This appliance is not intended to be operated by means of an external timer or separate remote-control system.

3. Please make sure that the crumb tray is inserted into the designated position inside the machine before use.

4. CAUTION: High Temperature  Do not touch the surface when the machine is in operation or just after use.

5. Do not touch the heating element during operation - high temperature.

6. Warning: Not intended for use by small children. Appliance will be very HOT during and after use.



CAUTION

1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

2. This product is for household use only. The Company shall not be liable for any failure caused by any commercial use, inappropriate use or

3 / 10

non-compliance with this instruction manual and such failure is not covered by the warranty.

3. Use of the product for anything other than its intended use is strictly prohibited.

4. To avoid danger of suffocation, keep the plastic bag away from babies and children. Do not use in Cribs, beds, carriages or playpens. This bag is not a toy. Discard bag and any other packing materials immediately after removing product.

5. Please remove all of the packing materials before use, otherwise the product will cause fire.

6. Ensure that the power cord does not come into contact with sharp edges, raw edges, other protruding sharp objects, or items with hot surfaces. To prevent leakage, electric shock or fire.

7. Be sure you are using a 110 volt outlet as your power supply for plugging in your appliance.

8. Ensure the plug is fully inserted into the 110 volt power outlet.

9. Do not operate the product on carpet, towel, plastic, paper and other flammable materials to prevent fire.

10. Do not put the product on the table which is not stable, wet, high temperature, smooth and heat resistant, so as to avoid electric shock, fire, slide and other injuries and property loss.

11. Do not use this product in an environment with gas leakage as it could cause combustion and fire.

4 / 10

INSTRUCTIONS

1. Plug Bikky's power cord into a 110 volt power outlet.

2. Using your favorite cookie dough: If using "tube" dough, slice about 1/4" thick with a serrated knife. If using pre-measured squares, flatten one dough square to about 1/4" thick.

3. For best results, remove dough from refrigerator for 5 minutes before baking.

4. While dough is setting, preheat Bikky to warm the baking tray. This step is not necessary when baking additional cookies.

5. Using tongs or an oven mitt, remove Teflon coated tray from Bikky and place one room temperature cookie on pre-heated tray. Return tray to Bikky.

6. Turn dial to desired cooking level (chewy to crispy). Blue light will illuminate.

7. Bikky will quickly heat up and begin baking your cookie.


8. Your will hear a "ding" and Bikky will shut off when your cookie is done. Allow Bikky to shut off on its own, rewinding the timer could cause damage.

9. Using tongs or an oven mitt, remove the Teflon coated tray from Bikky. Be careful as tray will be hot.

10. Allow cookie to cool for one minute, then use a small spatula to remove cookie from tray.

9 / 10

Name of parts/Functions

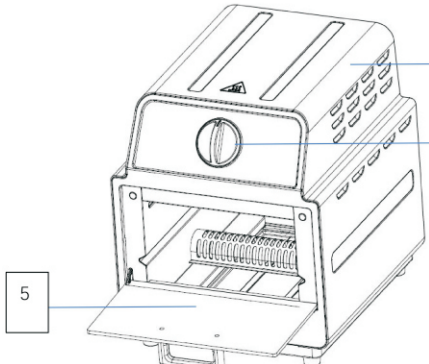

1

2

3

4

5

1、 Main Body

2、 Timer Knob

3、 Cookie Box

4、 Grill

5、 Glass Door

8 / 10

12. Do not use this product under or near combustible materials such as curtains and closets to prevent fire.

13. Do not allow the product to work unattended to avoid hazards such as fire caused by scorched ingredients.

14. Before using for the first time, please take out the cookie tray and grill and wash them in a soapy solution.

15. Before use, check whether the timer is in the OFF position.

16. During use maintain a minimum spacing of 4 inches between all sides of your appliance and any combustible surfaces.

17. It is normal that there may be a small amount of smoke or a slight odor when using your Bikky for the first time.

18. Do not operate Bikky when empty. Do not operate continuously for more than 15 minutes. Allow to cool for 15 minutes after 15 minutes of continuous operation.

19. Ensure that baking items do not touch the heating element during use.

20. Do not put any paper, plastic and other flammable materials in the cookie machine to avoid fire danger.

21. Do not place glassware, sealed containers and other explosive items in the cookie machine to heat, in order to avoid the risk of explosion.

22. Do not run the product under an external timer or independent remote control system to prevent short circuit, spontaneous combustion and other risks.

23. Please set the timer to "OFF" and then unplug it when not in use.

5 / 10


24. When removing the plug, hold the plug and pull it out. Do not yank or twist the power cord to prevent power cord damage and leakage risk.

25. Use tongs or oven mitt to remove baking tray to avoid burns. Baking tray will be HOT after use.

26. Do not immerse the product and the power cord in water or other liquid. Do not spray the appliance with water or any other liquid when plugged in.


Specifications

Model No	Power Range	Power Supply	Capacity
EL23002-00000A	685W	120V~60Hz	

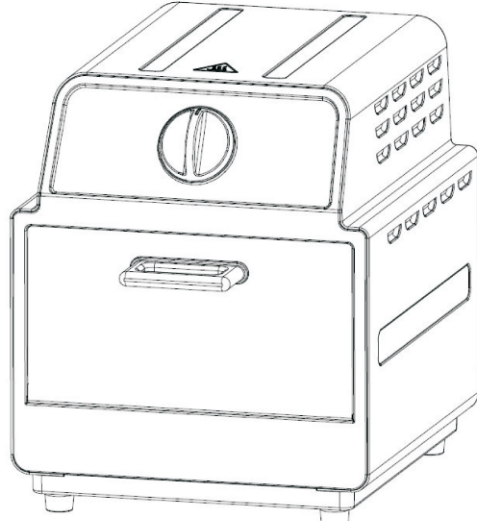


6 / 10

 Diagram

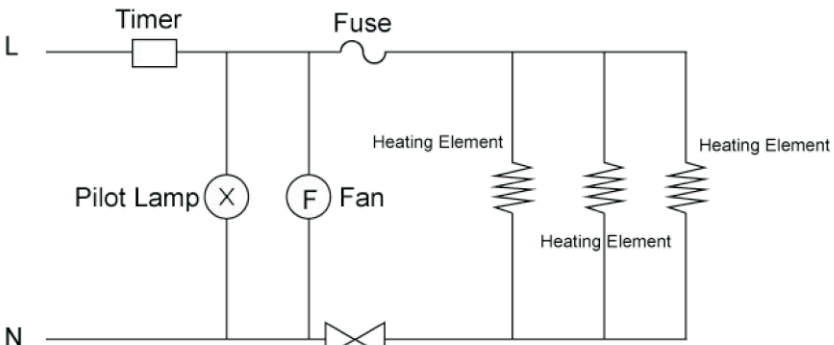

Temperature Control

 Knob timer scale

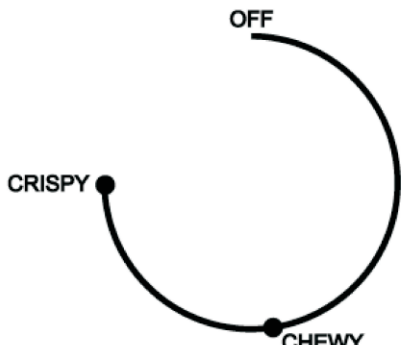

3 minutes to chewy /5 minutes to crispy

7 / 10