


Instruction Manual


Version 1.0

Moon Phases LED Wall Clock

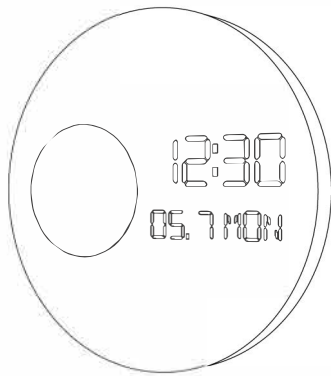

[The product is subject to the actual product in the package]
Please read this manual carefully in order to make better use of product performance

Legend

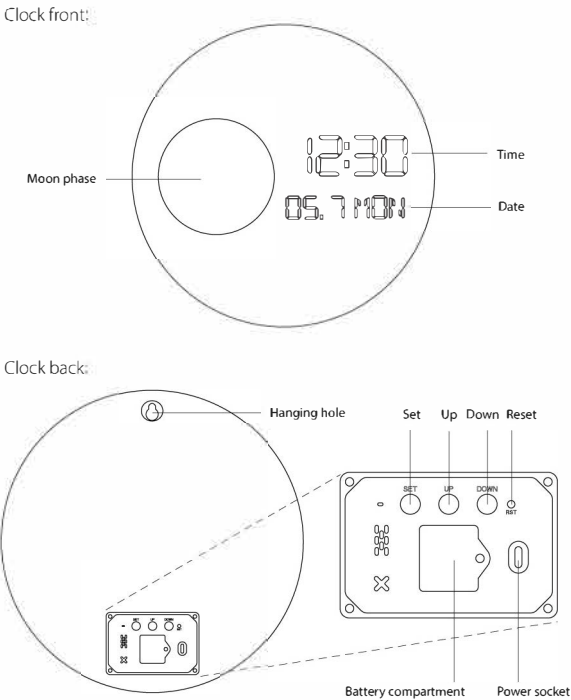

-1-

Specification

Product size: 295*295*25mm
Product weight: 1158g
Product material: MDF+PVC
Power supply: DC 5V

Setting Instruction

1 Time Setting

In time display mode, press the button "SET" till the numbers flashing to enter the setting mode. In the setting mode, you can do the settings including "Year" "Month" "Date" "Hour" "Minute".

1.1 Setting of Date

In the time mode, press the button "SET" to enter setting mode. Press button "UP" or "DOWN" to adjust the "Year" "Month" "Date" respectively. After setting the date, the week will change automatically (Long press the "UP" or "DOWN" button to continuously increase/decrease).

2021 — Year
28.6 MON — Week
Date Month

Week comparison table:

SUN	MON	TUE	WED	THU	FRI	SAT
Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday

-2-

1.2 Time Setting

In the time mode, press the button "SET" to enter setting mode and press "SET" again 3 times. The hour is flashing. Press "UP" or "Down" to adjust the hour.


Hour 12:30
30 MON

Press "SET" again, the minute is flashing. Press "UP" or "Down" to adjust the mins. Seconds automatically return to zero when minutes are changed.

Minute 12:30
Seconds 30 MON

2.Moon Phase Setting

Moon phase changes automatically according to the set date.

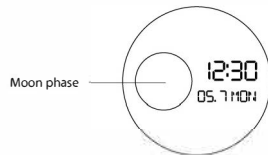

The moon phase has 12 states.



-3-

3 12H/24H Setting

In the time mode, press the button "DOWN" to adjust the 12H/24H setting. When "AM/PM" appears on the left side of "hour", it is 12H system. When the symbol of "AM/PM" disappear, it is 24H system.

12H AM/PM 2:30
05.7 MON

4 Brightness Setting

Press the button "UP" to adjust the brightness of clock. There are five luminance for your choice: L5-L1, where L5 is the brightest and L1 is the darkest.

Brightness level L5
05.7 MON

-4-

Tips

- When the function is abnormal or the display is abnormal (Such as no picture displays in the screen when the power is plugged in), press the reset button on the back for the product to reactivate it.
- The clock is equipped with two CR2032 batteries to keep the memory of clock setting. Simply replace the battery if the battery is off.
- If no operation is performed for 15 seconds after entering the setting mode, it will automatically exit the setting mode.
- The item to be set will flash at a frequency of "1HZ", and press the "UP" or "DOWN" button once to increase/decrease in a single step. Long press the "UP" or "DOWN" button to continuously increase/decrease.
- To clean the clock, use a cloth or paper towel with water and wipe gently, do not immerse the clock completely in water or rinse directly with water.

Made in China

-5-