

SHARPER IMAGE®

LED RECHARGEABLE UNDERHOOD WORK LIGHT

Item No. 209486

User Guide



⚠ WARNING

Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.

Thank you for purchasing the LED Rechargeable Underhood Work Light. Please retain this manual for safety guidelines, assembly instructions, operation details, inspection procedures, maintenance, and cleaning instructions.

SPECIFICATIONS

Battery	Li-ion
Battery Rating	3.65V, 4000mAh
Kelvin Rating	6500k
Charge Time	4.5 hours
Run Time	6 hours [low setting], 2 hours [high setting]

WARNING

To prevent serious injury, fire, and explosion:

- Keep dry. Do not open, drop, short-circuit, incinerate, or expose to temperatures higher than 140°F. Do not charge/use if damaged.
- Do not submerge the light in water.
- Do not operate the light in explosive environments, such as in the presence of flammable liquids, gases, or dust.
- Please consult your physician[s] if you have a pacemaker before use. Electromagnetic fields in close proximity to a heart pacemaker could cause pacemaker interference or failure.
- This is not a toy. Keep out of the reach of children.
- Contains a Li-ion battery. Battery must be recycled or disposed of properly. Do not open, crush or heat above 140°F or incinerate.

CHARGING INSTRUCTIONS



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

1. Insert the end of the adaptor cord into the charging port located on one of the handgrips.
2. Insert the USB-C cable into a 5V2A charger.
3. The charge light indicator will light up during charging. After approximately 2 hours all 4 lights on the charge light indicator should be lit up, indicating the work light has been fully charged and ready for use.
4. Unplug the adaptor.

NOTE: *Do not leave the battery in a discharged state. Charge the battery every 3 months if the work light is not in use. This will keep the battery from wearing down and add to its life. Do not charge the work light at temperatures below 40°F.*

OPERATING INSTRUCTIONS

NOTE: *Before using the work light for the first time, fully charge the battery*



Read the ENTIRE IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

1. Press the **On/OFF** switch once to turn the light on. The light will turn on in low brightness mode.
2. Press the **On/OFF** switch a second time to change the light to high brightness.
3. Press the **On/OFF** switch a third time to turn the light off.
4. The length can be adjusted by pulling on the hooks. Maximum length is 85". Use the hooks to attach the light to the desired position, such as a lifted car hood.
5. When finished using the work light, store indoors away from children.

WARRANTY/CUSTOMER SERVICE

This item from Sharperimage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.