

SHARPER IMAGE®

RECHARGEABLE SALT AND PEPPER MILL SET BY SHARPER IMAGE

Item No. 209487

User Guide

Thank you for purchasing the Rechargeable Salt and Pepper Mill Set by Sharper Image. Please read this manual thoroughly before operating this device.

 
BEFORE USE

 
To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully.

- Do not immerse the appliance in water or any other liquid to avoid harm to humans or the product.
- Use for pepper and salt only; do not use for other purposes.
- Do not force the grinder to tighten or twist it or attempt to speed up the mechanism.
- Keep body parts (e.g., fingers) and utensils away from the grinding head to avoid damage.
- Hold the grinder tightly when using.
- Keep this product away from children.
- Do not dismantle the product yourself.
- Do not put the product in a dishwasher.
- Do not rinse the container unit with water.
- Keep away from flammable, explosive gas, and high temperatures.

PRODUCT DESCRIPTION


1. Charging Indicator Light
2. On/Off Button
3. Upper Body
4. Container
5. Container Cover
6. Light
7. Adjuster
8. Charging & Storage Base
9. Type-C Charging Cable

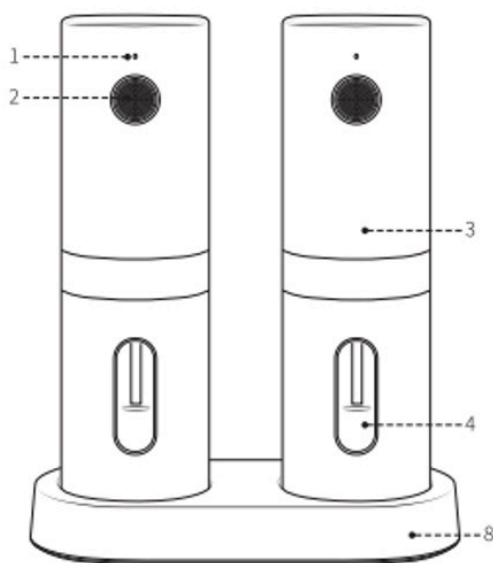

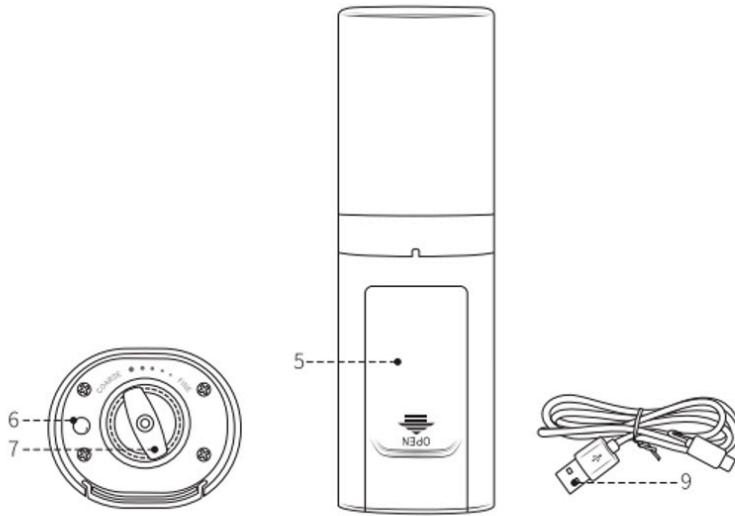

CHARGING INSTRUCTIONS

 
- **Connect the Charging Cable:** Connect the Type-C charging cable to an adapter. Plug the adapter into an electric socket, then connect the charging cable to the Type-C interface at the back of the base.
- **Charging Indicator:**
 - When charging, the indicator light will turn red, indicating normal charging.
 - The indicator light will turn white when the battery is fully charged.
- **Charging Time:** It takes about 2 hours to fully charge the battery.

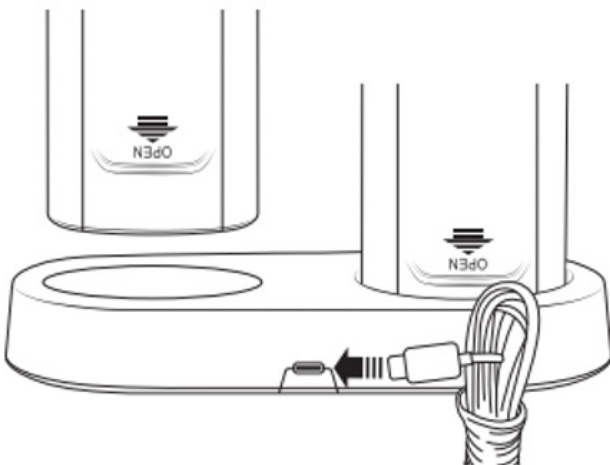


INSTRUCTIONS

Filling the Container

 
- **Open the Container Cover:** Push the container cover with your fingers.
- **Add Seasoning:** Put pepper or salt into the container.
- **Close the Container Cover:** Restore and lock the cover.

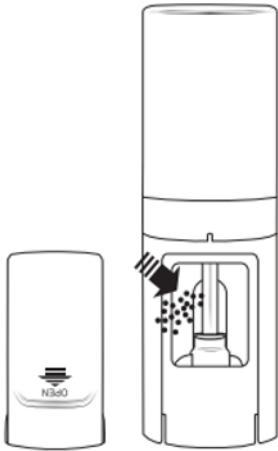

 - **Rotate the Adjuster:** Rotate the adjuster according to your personal needs.

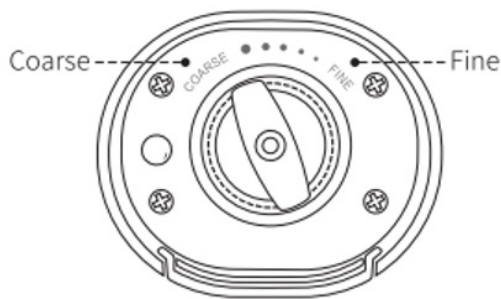

 - **Grind Operation:** Press and hold the On/Off button to grind.
- **Stop Operation:** Release the button to stop

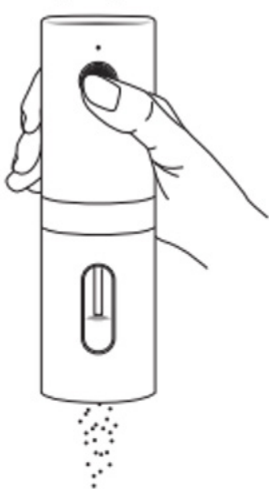

ADJUSTING THE GRIND

• **Adjustment Knob:** This product adopts an adjustment knob that can be rotated between the finest and coarsest grinding.

• **Adjust to Fine:**

- Rotate the adjuster from “COARSE” to “FINE”.
- Continue to rotate until the desired fineness is achieved.

• **Adjust to Fine:**

- Rotate the adjuster from “FINE” to “COARSE”.
- If the adjuster loosens, it could be caused by some pepper grains stuck in the burr.
- Start the product to rotate; the burr will be loosened, and you can continue to adjust.
- This is a normal situation for ceramic burrs and will not affect its normal use.

NOTE: Avoid Upside Down - With seasonings in the container, do not turn the grinder upside down to prevent grains of seasonings from getting into the battery compartment and causing battery corrosion.

TROUBLESHOOTING

If the grinder does not work or stops while grinding:

- **Charge the Product:** Ensure the grinder is charged before use. [**Note:** *It is not recommended to use the product while charging.*]
- **Adjust the Grinder Knob:** Rotate the grinder knob in a counterclockwise direction.

WARRANTY AND CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.