Congratulations on the purchase of your SnowCandy® Inflatable. In order to get the best performance from your product, we offer the following recommendations to help increase its longevity and reduce potential damage. SnowCandy® Inflatables are designed using quality PVC materials, allowing the product to perform best when properly inflated. A properly inflated product will expand without distorting the intended shape.

- Inspect the product before each use. Unfold the product on a flat surface before inflating and check for any damage.
- If you encounter any difficulty inflating the product, pinch or squeeze the base of the air valve to ease the flow of air into your inflatable.
- Keep in mind that over-inflation can also cause damage, as this will put stress on the tube seams and may burst. Ideally, inflate the product only until the shape is fairly wrinkle-free.
- If damage is found, and air leakage occurs, please use our included patch kit.
- Do not submerge the product in any liquids
- Keep unit dry when not in use
- Do not jump onto the product
- Do not cut, poke, or try to disassemble the product for any reason
- Do not tow the product with a mechanical or motorized vehicle
- Do not drag the product on a hard or abrasive ground as it may puncture the inflatable
- Do not adhere or apply any hardware or attachments to the product not recommended by the manufacturer

# **How to Inflate and Deflate your SnowCandy® Realtree® Snow Tube**

# **To Inflate with an Electric Pump**

- Open the valve completely, exposing the largest valve opening.
- Insert the large nozzle of an electric air pump into the valve and turn the pump on
- To add smaller amounts of air, open only the top of the large valve, and press a small nozzle of your pump past the flap inside the valve and turn the pump on

#### To Deflate

- Open the air valve to release the air. Pinch the valve open to speed up air flow
- For fastest results, use an electric air pump with the hose in the 'Deflate' position. Be sure to open the valve completely



# **WARNING!**

THIS IS NOT A LIFESAVING DEVICE. USE ONLY SUPERVSION. DO NOT LEAVE CHILD UNATTENDED WHILE IN USE. PRODUCT DEVELOPS HIGH SPEEDS. DO NOT STAND UP WHILE SLIDING. AVOID ROUGH OBSTACLES, ROUGH TERRAIN, AND SUDDEN DROPS. DO NOT USE NEAR STREETS OR VEHICLE TRAFFIC. THIS IS NOT A TOWABLE DEVICE, NEVER TOW BEHIND ANY VEHICLE, PROTECTIVE HELMET, SAFETY GOGGLES, RECOMMENDED.

NON-COMPLIANCE WITH THESE OPERATING INSTRUCTIONS MAY EXPOSE YOU TO SERIOUS DANGER.





# **TAPE STORE RECEIPT HERE**



### Care, Maintenance & Storage

- 1. Inspect your chair prior to each use.
- 2. Keep your chair away from sharp objects. Large cuts or snags may not be repairable and will not be covered by your warranty.
- 3. In case of incidental damage to your chair, a repair kit has been included. Please follow repair instructions carefully as shown on the patch.
- 4. To clean your chair, use soap and water with a wash cloth.
- 5. To store your snow tube, make sure it is deflated and completely dry. Store your tube in a clean, dry place at room temperature.

#### **WARNING:**

Adult supervision required for inflation, deflation and maintenance. Follow all safety instructions to avoid serious injury.

- For outdoor recreational use only. Do not use in a pool.
- $\bullet$  This tube is not intended for infants or persons with limited mobility.
- Use on flat surfaces only. Do not use this chair on abrasive surfaces or near sharp or pointed objects.
- Keep this tube away from heaters, flames, sparks, or any heat source.
- Do not use this tube while using hot or sharp objects.
- . Do not jump on the tube.

#### **CAUTION:**

Do not place near sharp objects as this may cause damage to your tube.

### **LIMITED 30-DAY WARRANTY**

B&D Group, LLC, warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 30 days from the date of purchase. If any such defect is discovered within the warranty period, B&D Group, LLC. will repair or replace the unit free of charge upon receipt of the unit, shipping postage prepaid and insured to the factory address received from Customer Service. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of any panels voids all warranties. This warranty does not cover cost of repairs made or attempted outside the factory. Any applicable implied warranties, including warranties of merchantability and fitness are hereby limited to 30 days from the date of purchase. Expressed or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States would be communicated from Customer Service. Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter detailing the complaint or issue, along with your daytime telephone number, name and address inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to Service@BandDGroup.com, specifying the model number and the problem.

PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING. WE CANNOT STORE YOUR UNIT.

#### Legal

SnowCandy is a trademark of B&D Group, LLC. Miami, FL 33126 • Distributed by B&D Group, Miami, FL ©2023. All rights reserved.

MODIFICATION NOT APPROVED BY B&D GROUP, LLC. VOIDS WARRANTY. • ACTUAL PRODUCT MAY VARY SLIGHTLY FROM PHOTOGRAPH.