

TEAM8 E

AUDIBLE GOLF GPS + EARBUDS

MANUAL / USER GUIDE

SERIAL #NUMBER

WARRANTY / CONTACT

THE FOLLOWING ARE INCLUDED:

- 30 DAY MONEY-BACK GUARANTEE
- 1-YEAR LIMITED WARRANTY
(ONLINE REGISTRATION REQUIRED)
- ENROLLED AS A TECTECTEC! MEMBER
- RECEIVE EXCLUSIVE DISCOUNTS
- PRE-RELEASE INSIDER ACCESS TO NEW PRODUCTS

CONTACT:

US@TECTECTEC.COM

(833)-383-2669

ALL SOCIAL....@TECTECTECUSA



TEAM8TM E IS A PERSONAL, AUDIBLE,

GPS DEVICE + EARBUDS. WE CREATED THIS
PRODUCT WITH ONLY **YOU** IN MIND.

GOLF IS A SPORT OF ETIQUETTE AND FUN.
HERE AT TECTECTEC!, OUR MAIN FOCUS IN
THIS PRODUCT IS TO OFFER THE FIRST AND
ONLY AUDIBLE GPS / EARBUDS DESIGNED FOR
YOUR SINGULAR NEEDS ON THE COURSE. YES,
THE **TEAM8 E** DELIVERS AN EXCELLENT
SOUND, BUT HIS LIGHT WEIGHT AND VERSA-
TILE DEVICE KEEPS YOU IN CONTROL AND IN
THE RIGHT MINDSET FOR OPTIMAL
ON-COURSE JOY AND PERFORMANCE.

TecTecTec!
ONLY WHAT YOU NEED

PRODUCT DETAILS

 
 
 
TOUCH BUTTONS

RESET BUTTON

BATTERY LEVEL LED

WIRELESS CHARGING
AREA

USB-C CHARGING
PORT

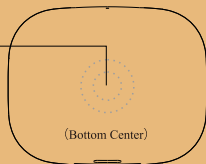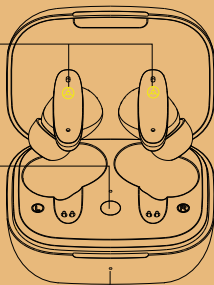

STEP 01 / APP

DOWNLOAD

ONLY NEED TO DO THIS ONCE

DOWNLOAD OUR **TECTECTEC! GOLF GPS APP**



USE THE CORRECT QR CODE ABOVE BASED ON THE COMPATIBILITY OF YOUR MOBILE DEVICE. ONCE DOWNLOADED, YOU WILL BE ABLE TO PAIR THE **TEAM8 E** WITH YOUR PHONE. NOW YOU'RE READY TO ENJOY.

STEP 01 / APP

SIGN UP

 
OPEN THE TECTECTEC! GOLF GPS APP AND
CLICK ON THE BUTTON TO "SIGN UP".

FOLLOW THE INSTRUCTIONS PROVIDED ON
THE SCREEN, SELECT "TEAM8 E" AND THEN
CLICK ON THE BUTTON TO "SUBMIT".

THE "**DEVICE SERIAL NUMBER**" IS LOCATED
ON THE FRONT OF THIS MANUAL.

STEP 02 / DEVICE

POWER ON

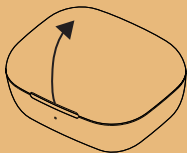

**TO TURN POWER ON,
OPEN THE CHARGING CASE**

STEP 03 / PARAMETERS

BLUETOOTH PAIRING

GO TO THE BLUETOOTH SETTINGS OF YOUR PHONE TO PAIR THE DEVICE. SELECT “TEAM8 E” TO PAIR.

IF THE PAIRING FAILED, PUT BACK THE EARBUDS INTO THE CASE AND CLOSE THE CASE, THEN TRY AGAIN.

STEP 04 / APP

QUICK PLAY

PRESS QUICK PLAY TO START.



TEAM8 E

#TM8E12345678



QUICK PLAY



SPEAKER
SETTINGS



REMOVE
DEVICE

STEP 05 / APP

PAIRING

FOLLOW PROMPT / PRESS NEXT

PAIR YOUR DEVICE

1. ON YOUR SMARTPHONE, MAKE SURE YOU HAVE BLUETOOTH TURNED ON.
2. POWER ON YOUR SPEAKER.
3. SELECT **NEXT** BUTTON BELOW.

 
CANCEL

NEXT

STEP 06 / APP

AUTHORIZATION

ALLOW ACCESS TO FIND DEVICE.

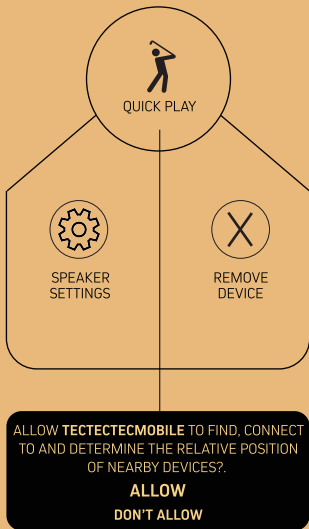

STEP 06 / APP

AUTHORIZATION

ALLOW ACCESS TO FIND DEVICE.

*** IMPORTANT***

PLEASE FOLLOW THE PROMPTS AND CLICK THE CORRESPONDING OPTIONS HIGHLIGHTED.

ALLOW **TECTECTECMOBILE** TO ACCESS
THIS DEVICE'S LOCATION?.

⬆ **PRECISE**

WHILE USING THE APP

ATTENTION

THIS APP COLLECTS LOCATION DATA TO
ENABLE DISTANCE READOUTS IN PLAY GOLF,
EVEN WHEN THE APP IS CLOSED OR
NOT IN USE.

ALLOW ALL THE TIME

STEP 07 / APP

SELECT GOLF COURSE

CHOOSE COURSE FROM NEARBY, RECENT OR SEARCH

←

SELECT GOLF COURSE

≡

SEARCH GOLF COURSES

NEARBY

RECENT

AWESOME GOLF COURSE 1

SEATTLE, WA

1.8 MI

AWESOME GOLF COURSE 2

SEATTLE, WA

3.5 MI

AWESOME GOLF COURSE 3

SEATTLE, WA

7.1 MI

AWESOME GOLF COURSE 4

SEATTLE, WA

8.4 MI

AWESOME GOLF COURSE 5

SEATTLE, WA

10.5 MI

AWESOME GOLF COURSE 6

SEATTLE, WA

13.2 MI

AWESOME GOLF COURSE 7

SEATTLE, WA

15.7 MI

AWESOME GOLF COURSE 8

SEATTLE, WA

15.9 MI

AWESOME GOLF COURSE 9


SEATTLE, WA

18.0 MI

STEP 08 / APP

SELECT TEE BOX

CHOOSE TEE BOX FROM LIST BELOW

 SELECT TEE BOX

<input type="radio"/>	BLACK	419 YDS
<input checked="" type="radio"/>	BLUE	395 YDS
<input type="radio"/>	WHITE	375 YDS
<input type="radio"/>	RED	305 YDS

IN PLAY / APP


HOLE OVERVIEW

CLICK < **HOLE** > TO MOVE HOLES MANUALLY

HOLE OVERVIEW

< HOLE 1 >

PAR 4 | LENGTH 413 | RANK 5

LAST SHOT DISTANCE --- YDS 

DISTANCE TO HOLE

396

410

424

FRONT

MIDDLE

BACK

HAZARDS

← 397

283 →

BUNKER

BUNKER

294 →

BUNKER

END GAME

 
SETTINGS

DISTANCE

*** IMPORTANT ***

GPS DISTANCE IS MEASURED FROM THE LOCATION OF THE PHONE, NOT FROM THE DEVICE.

DISTANCE

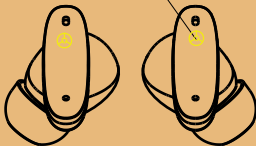


THE RIGHT EARBUD TOUCH BUTTON CONTROLS THE FOLLOWING:

- **PRESS ONCE** - MEASURES DISTANCE TO FRONT / MIDDLE / BACK OF GREEN.
- **PRESS & HOLD** - MEASURES DISTANCE FROM SHOT TO SHOT.
- **PRESS TWICE** - MEASURES DISTANCE TO CLOSEST HAZARD.

MUSIC / PHONE CALL

 **LEFT TOUCH
BUTTON**

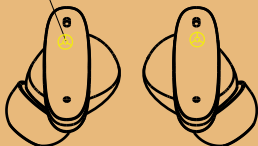


THE LEFT EARBUD TOUCH BUTTON
CONTROLS THE FOLLOWING:

- **PRESS ONCE** - PLAY / PAUSE MUSIC
- **PRESS TWICE** - ANSWER / END PHONE CALL
- **PRESS & HOLD** - REJECT PHONE CALL

CONNECTION RANGE


DISTANCE FROM DEVICE TO PHONE

 TEAM8 E MUST BE WITHIN 15 YDS TO HAVE CONSISTENT PAIRING WITH APP.

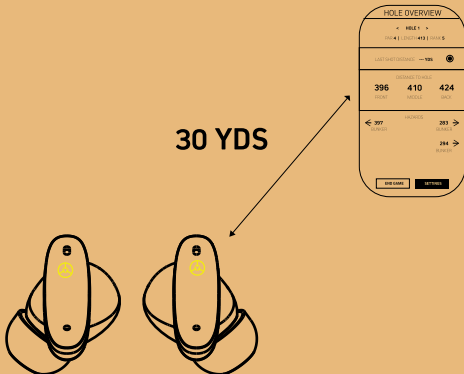

CHARGING

 **CHARGE
USB-C**



THE **TEAM8 E** COMES WITH A USB TO USB-C CABLE. PLUG THE CABLE INTO THE PORT ON THE CHARGING CASE. PUT THE EARBUDS INTO THE CASE, THEY WILL AUTOMATICALLY SHUT DOWN AND CHARGE.

A SINGLE CHARGE LASTS 1-2 ROUNDS DEPENDING ON THE USAGE.

BATTERY LEVEL OF THE CASE LED:

- **GREEN LIGHT**, REMAINING POWER $> 50\%$
- **SOLID ORANGE LIGHT**, REMAINING POWER 20 - 50 %
- **FLASHING ORANGE LIGHT**, REMAINING POWER $< 20\%$

 
CONNECT TO OTHER DEVICES

1- CLOSE THE TECTECTEC GOLF GPS APP.

2- WITH THE EARBUDS IN CASE AND LID OPEN, PRESS THE RESET BUTTON UNTIL LIGHT BLINKS.

LIGHT STATUS

RESET BUTTON

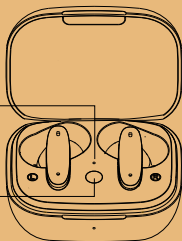

3- THEN GO TO THE BLUETOOTH PARAMETERS AND SELECT “TEAM8 E”.

FAQ

THE **TEAM8 E** IS A GPS DEVICE THAT REQUIRES A CONSTANT WIFI OR CELLULAR CONNECTION TO RETRIEVE INFORMATION FROM THE SERVER.

- THE SOUND COMES OUT FROM MY PHONE, NOT FROM THE EARBUDS, WHAT SHOULD I DO?

GO TO YOUR BLUETOOTH SETTINGS, THEN PAIR TEAM8 E. PLEASE NOTE THAT YOU MIGHT SEE TWO TEAM8 E ON YOUR BLUETOOTH SETTINGS.

- DO I HAVE TO PAIR MY DEVICE MANUALLY EVERY TIME I OPEN THE APP? NO, THE APP WILL RECOGNIZE THE DEVICE AND AUTO PAIR.

-LOW BATTERY: WHEN THE BATTERY IS LOW, THE EARBUDS WILL NOTIFY YOU.

SAFETY

FOR YOUR SAFETY AND FOR LONG ENJOYMENT OF OUR PRODUCT, PLEASE FOLLOW THE SAFETY INSTRUCTIONS:

- PLEASE USE AS DESCRIBED IN THE MANUAL.
- TO PROTECT YOUR HEARING AND WIDEN THE LIFE SPAN OF THE SPEAKER, MAXIMUM VOLUME SHOULD NOT BE HELD DIRECTLY TO THE EAR.
- PLEASE KEEP THE POWER ADAPTER AND SPEAKER DRY AND USE THEM IN A DRY ENVIRONMENT ONLY.
- DO NOT TOUCH WITH WET HANDS.
- KEEP AWAY FROM DAMP, HIGH TEMPERATURE, DUSTY, EROSIVE AND OXIDATIVE ENVIRONMENTS.
- DO NOT DROP THE UNIT
- TURN OFF POWER WHEN DEVICE IS NOT IN USE.
- DO NOT OPEN OR DISASSEMBLE THE UNIT.

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.