



Model No. PC1035BBY

BABY SPLASHRUNNER®

MOTORIZED

REMOTE CONTROL BABY BOAT

INSTRUCTION MANUAL

Congratulations on the purchase of your Baby Splash Runner Motorized Remote Control Baby Boat inflatable by PoolCandy®. In order to get the best performance from your product, we offer the following recommendations to help increase its longevity and reduce potential damage.

PoolCandy® Inflatables are designed using heavy-duty PVC materials, allowing the product to perform best when properly inflated. A properly inflated product will expand without distorting the intended shape, and will easily float across water with the least amount of resistance.

Read and follow all safety information and instructions. Keep for future reference. Failure to follow these warnings and instructions can result in serious injury or death to users, especially children.



- Inspect the product before each use. Unfold the product on a flat surface before inflating and check for any damage.
- If you encounter any difficulty inflating the product, pinch or squeeze the base of the air valve to ease the flow of air into your inflatable.
- Keep in mind that over-inflation can also cause damage, as this will put stress on the tube seams and may burst. Ideally, inflate the product only until the shape is fairly wrinkle-free.
- If damage is found, and air leakage occurs, please use our included patch kit.
- Do not submerge the product in any liquids other than water
- Do not expose the product to extreme hot or cold temperatures
- Do not jump into the product
- Do not cut, poke, or try to disassemble the product for any reason
- Do not tow the product with a mechanical or motorized vehicle
- Do not drag the product on a hard or abrasive ground as it may puncture the inflatable
- Do not adhere or apply any hardware or attachments to the product not recommended by the manufacturer

Made in China • Distributed by B&D Group, LLC. Miami, FL 33186 • PC1035BBYIM04042023



WARNING:

THIS IS NOT A LIFESAVING DEVICE. DO NOT LEAVE CHILD UNATTENDED WHILE DEVICE IS IN USE. ONLY TO BE USED IN WATER IN WHICH THE CHILD IS WITHIN ITS DEPTH AND UNDER ADULT SUPERVISION.

AGES **12-36**
months

SAFETY INSTRUCTIONS

- Constant, competent adult supervision of children and other young users is required at all times.
- Never use this product as a lifesaving device.
- This product is designed for only one child at a time.
- This product is designed for pool use and should not be used in large bodies of water.
- Do not jump onto or off of the product.
- Do not dive onto or off of the product.
- Never drive into or over swimmers.
- Keep hands, hair, and loose objects such as clothing away from the propellers.
- If an object becomes lodged in the propeller, make sure the batteries are removed before attempting to dislodge.
- Always use caution and common sense.

POOLCANDY is a trademark of B&D GROUP. ©2022-2023. All rights reserved. All rights reserved.

If you have any questions or would like additional information on PoolCandy products, please contact us at service@banddgroup.com or call us at telephone (305) 964.7295



WARNING!

ADULT ASSEMBLY REQUIRED!



WARNING!

 
**USE ONLY UNDER ADULT SUPERVISION.
THIS IS NOT A LIFE SAVING DEVICE.
THIS IS NOT A FLOTATION DEVICE. DO
NOT LEAVE CHILD UNATTENDED WHILE
DEVICE IS IN USE.**




www.PoolCandy.net



@PoolCandy

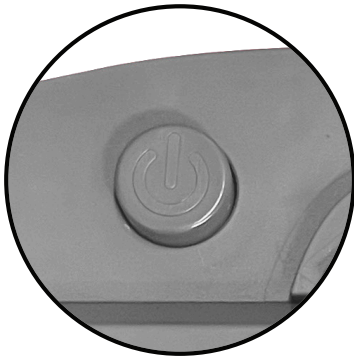

 1. Once the unit has been inflated, put the child into the inside the water. Once the child is securely in the inflated unit, push the power button to power on the motor.
2. Push the power button on the remote control and the red LED light should turn on confirming power.

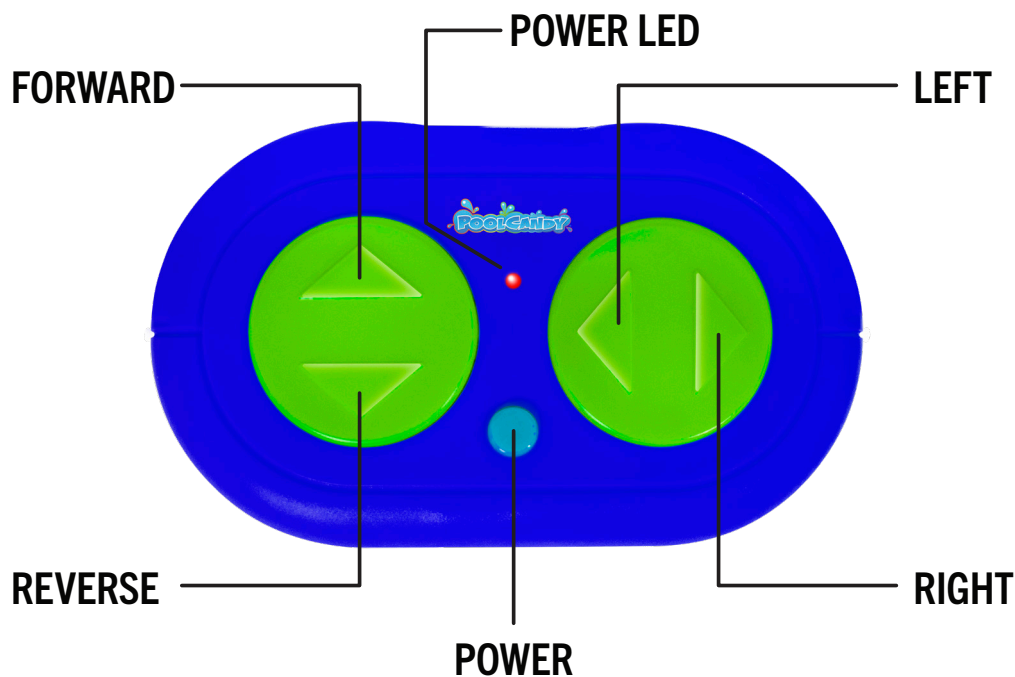


The Remote Control is very easy to operate. Either the parent can operate it with the child in the vehicle float, or the remote control can be attached to the float via the green clip, and the child can push the buttons.

To go FORWARD, push the FORWARD button.
To go REVERSE, push the REVERSE button.
To turn RIGHT, push the RIGHT button.
To turn LEFT, push the LEFT button.

NOTE: To prevent overheating, the Baby Splash Runner may automatically shut down for cooling after long continuous play. The cooling process may take up to 40 minutes.


Inflate float unit fully through these the two nozzle locations:

On the back of
the back rest

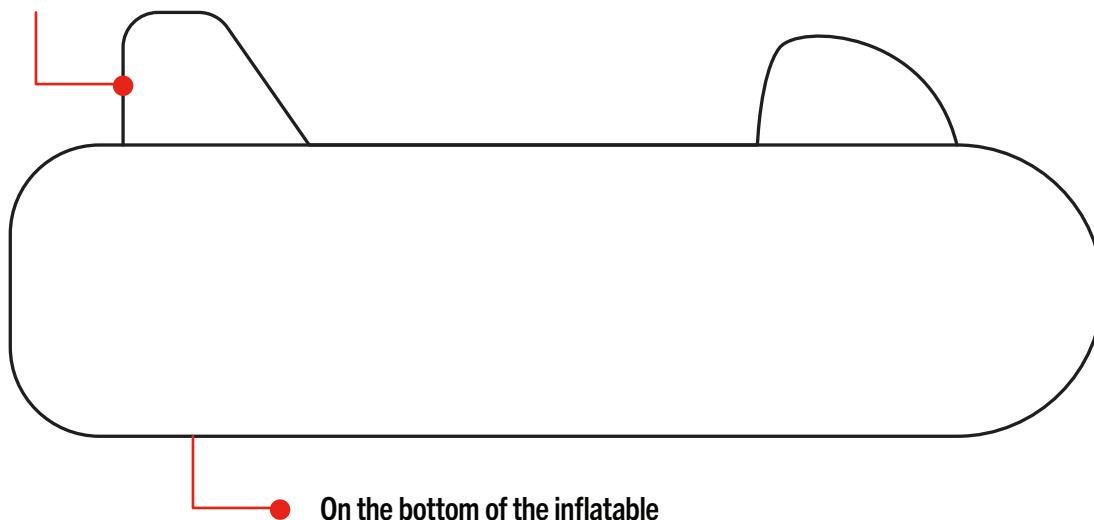


NOTE: DO NOT OVERINFLATE to avoid leaks or damage to the vehicle float.



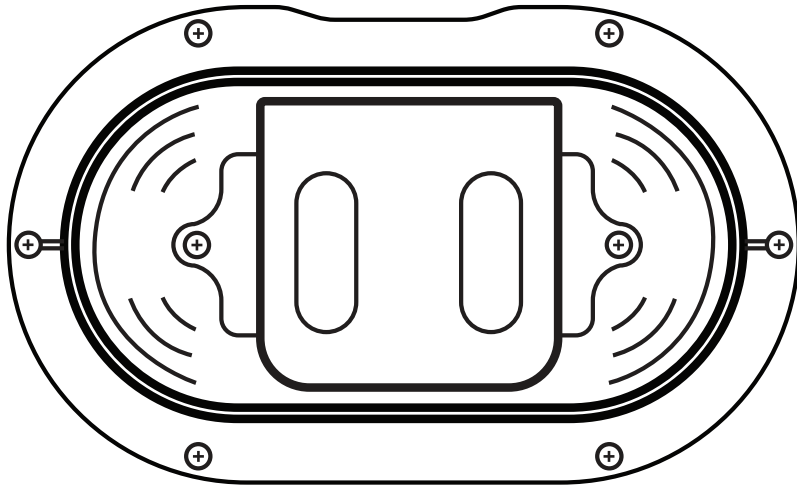

1. Use included screwdriver to remove the 2 Philips-head screws on the red clip on the back of the remote control.
NOTE: Do not remove the other screws on the blue part of the remote control housing.

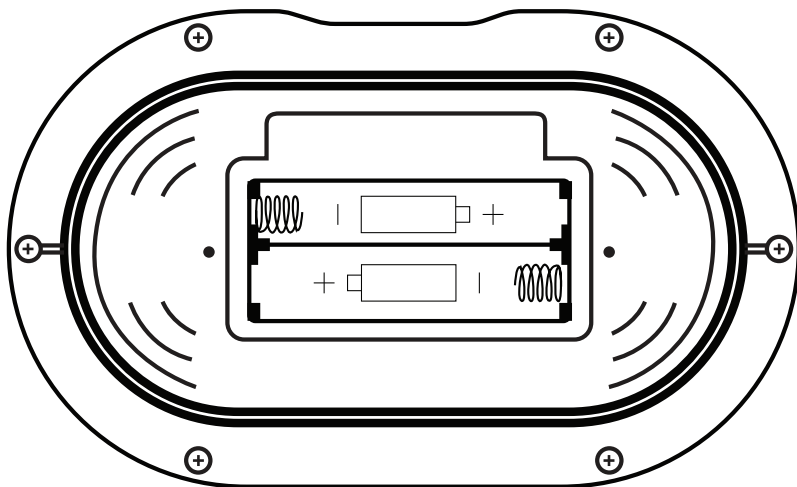

2. Add 2 x AAA batteries into the battery compartment according to their polarity.

3. Place green cover back onto battery compartment and reattach the 2 Philips-head screws. Make sure it is tight, but take care not to over-tighten and strip the screws.


The Remote Control is waterproof and even floats in the pool.
Clip it to the inside of the float when your toddler is ready to drive!

1.



1. Lay out the unit in front of you to work on

2.

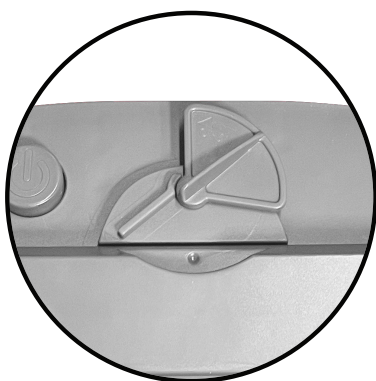

2. Turn compartment holder lock to the right

3.



3. Remove battery compartment cover

4.




4. Using included Philip-head screwdriver*, remove the six Philips screws from the battery holder cover. Then remove, the battery holder cover to reveal the battery holder underneath.

* The screwdriver is a tool only.
It is not a part of product.

5.




5. Remove battery holder to insert batteries

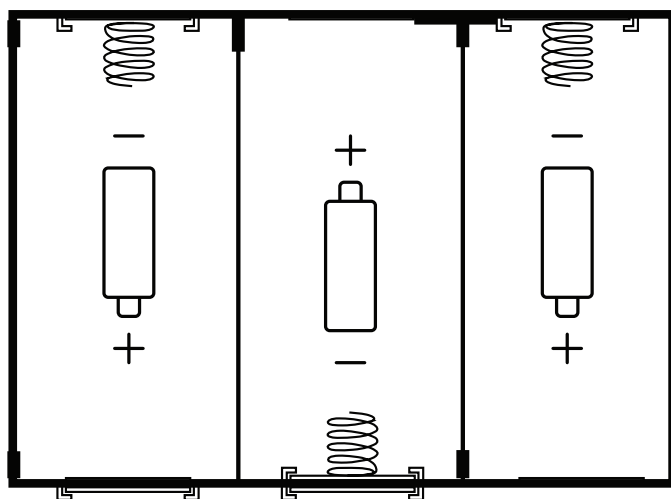

6. Insert 6x D-cell batteries according to their polarity into the battery holder. Each side of the holder accommodates 3 D-cell batteries.

Once the batteries have been inserted, place battery holder back into the battery compartment, and close the compartment following the instructions in reverse.

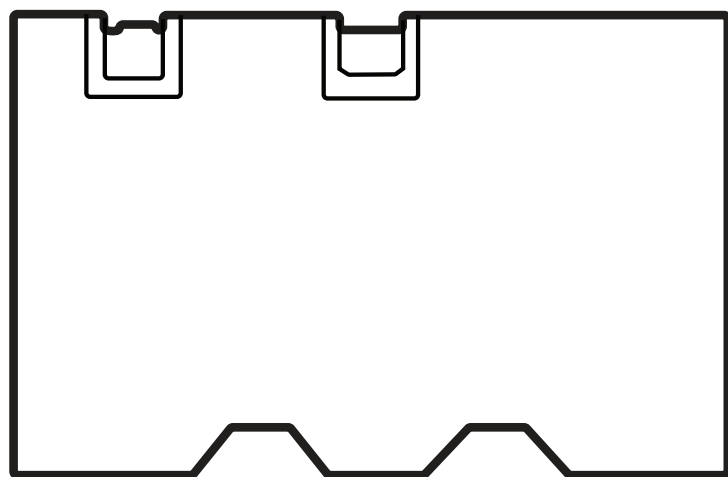

Do not mix Old and New batteries. Do not mix Alkaline, Standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.



FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the received antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

SAFETY INSTRUCTIONS and CAUTIONS

SAFETY INSTRUCTIONS

- Constant, competent adult supervision of children and other young users is required at all times.
- Never use this product as a lifesaving device.
- This product is designed for only one child at a time.
- This product is designed for pool use and should not be used in large bodies of water.
- Do not jump onto or off of the product.
- Do not dive onto or off of the product.
- Never drive into or over swimmers.
- Keep hands, hair, and loose objects such as clothing away from the propellers.
- If an object becomes lodged in the propeller, make sure the batteries are removed before attempting to dislodge.
- Always use caution and common sense.



Limited 30-Day Warranty

B&D Group, LLC, warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 30 days from the date of purchase. If any such defect is discovered within the warranty period, B&D Group, LLC. will repair or replace the unit free of charge upon receipt of the unit, shipping postage prepaid and insured to the factory address received from Customer Service. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of any panels voids all warranties. This warranty does not cover cost of repairs made or attempted outside the factory. Any applicable implied warranties, including warranties of merchantability and fitness are hereby limited to 30 days from the date of purchase. Expressed or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States would be communicated from Customer Service. Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter detailing the complaint or issue, along with your daytime telephone number, name and address inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to Service@BandDGroup.com, specifying the model number and the problem.

PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING. WE CANNOT STORE YOUR UNIT.

Care, Maintenance & Storage

1. Inspect your inflatable prior to each use.
2. Keep your inflatable away from sharp objects. Large cuts or snags may not be repairable and will not be covered by your warranty.
3. In case of incidental damage to your inflatable, a repair kit has been included. Please follow repair instructions carefully as shown on the patch.
4. To clean your inflatable, use soap and water with a wash cloth.
5. To store your inflatable, make sure it is deflated and completely dry. Store your inflatable in a clean, dry place at room temperature.
6. Avoid rough handling like bumping or dropping.
7. Avoid extreme temperatures. For best results, use between 50° and 100°F (10° and 38° C).

BATTERY INFORMATION

- Baby Splash Runner uses 6 x D-cell batteries. Batteries not included.

1. Do not mix Alkaline, Standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.
2. Do not mix old and new batteries.
3. Remove exhausted batteries from the unit.
4. Do not short circuit battery terminals.
5. Do not dispose of batteries in a fire.

 **WARNING:**
ADULT SUPERVISION REQUIRED WHILE
PRODUCT IS IN USE.

 **WARNING:**
ADULT ASSEMBLY REQUIRED.

 **WARNING:**
THIS IS NOT A LIFESAVING DEVICE. DO NOT LEAVE CHILD
UNATTENDED WHILE DEVICE IS IN USE. ONLY TO BE USED IN WATER IN
WHICH THE CHILD IS WITHIN ITS DEPTH AND UNDER ADULT

