# FROSTBYIE

## ANIMATE

### THE SNOWMAN


**IMPORTANT:** FROSTBYTE MAKES SILENT FACES, WHEN THERE IS NO AUDIO PLEASE NOTE THAT THE UNIT IS NOT BROKEN.


- 1. Power adapter not included, all USB power adapters are compatible (ie: mobile phone charger).
- 2. Please do not open Frostbyte in order to avoid damaging the unit.
- 3. Maintain adequate ventilation, do not cover the Frostbyte with objects such as cloth or other materials.
- 4. Please keep Frostbyte away from direct rain, water or snow, indoor / covered porch setting is OK.
- 5. Please disconnect/remove power source (USB cable) when not using for extended periods of time.
- 6. Please do not disconnect the USB cable when Frostbyte is ON. Switch OFF and then disconnect the USB cable.
- 7. Do NOT drop or shake the unit.
- 8. Please ensure that Frostbyte is placed in temperatures within 20°F 100°F

#### **READ BEFORE USE:**


SWITCH UNIT TO ON. NOTE THAT FROSTBYTE WILL START SPEAKING AFTER 5 SECONDS AFTER BEING SWITCHED TO ON POSITION.

#### **SETUP:**

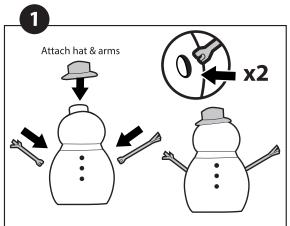

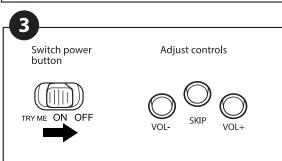

\*Note: 30 minutes of video will continue on a loop until turned off manually, there is no timer on Frostbyte The Snowman.

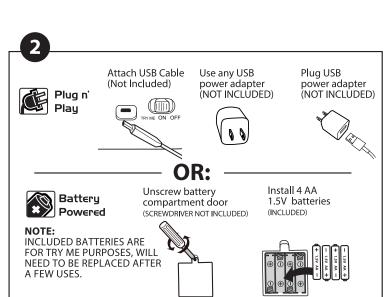

#### STILL MODE:

Give Frostbyte a decorative look by entering into still mode. Frostbyte will not run any animation but instead will maintain a still face. Press and hold the + & - buttons simultaneously for 3 seconds to enter into still mode. To exit press any button to resume animations.

#### TRY ME MODE:

Move the main switch to "TRY ME", 8 sec of random animation is played when any of the button is pressed (Vol -/ Skip / Vol+)

#### PLAY MODE:

Move the main switch to "ON", video is played in loop. Skip to play next track. Vol-/ Vol  $\pm$  to adjust sound level.



#### Connect with us:



pinterest.com/mindscope



youtube.com/mindscope



facebook.com/mindscopeproducts



Instagram.com/mindscopeproducts