

EDUTAB SMART WATCH



USER MANUAL

SAFETY AND WARNINGS:


- PRECAUTIONS:**
Misuse of batteries can lead to them bursting, causing a fire or chemical burns. please read the precautions below.
- Do not disassemble
 - Do not crush and do not expose the battery to any shock or force such as hammering, dropping or stepping on it.
 - Do not expose to high temperatures or place near a heat source. Do not leave in direct sunlight for any length of time.
 - Do not dispose of in fire.
 - Do not handle damaged or leaking battery. Keep battery out of reach of children. Keep battery dry.
 - If you ever notice any signs of damage, cease use, and contact supplier support at www.jupitercreations.com
 - If you find time between charges is considerable shortened with no change in usage, the battery could be nearing the end of its life.
 - Dispose of the item at a suitable waste station, as the battery cannot be added to normal waste.
 - Keep the rubber cover of the micro USB port closed lightly while it is not in use. In order to prevent dust or water from getting into the port.
 - Keep the watch clean by wiping it with a slightly damp cloth.
 - Do not drop the watch on a hard surface or expose it to moisture or immerse it in water.
 - Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by:
 - 1) Blowing the lens.
 - 2) Gently wiping the lens with a dry cloth.
 - Charging should only be completed by an adult.

WARNING:

- A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors and patterns.
- While the Smart Watch does not contribute to any additional risks, we do recommend that parents supervise their children while they play games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and go see a doctor. Please note that focusing on at close range and handling a game controller for prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15 minute break for every hour of play.

PRODUCT SPECIFICATION:

Display: 1.54" IPS touch screen.
Photo Resolution: 240*240
Video Resolution: 240*240
Storage Capacity: 32MB
File Format: Photo: JPEG ; Video: AVI
Battery: 400 mAh- Li- on polymer battery

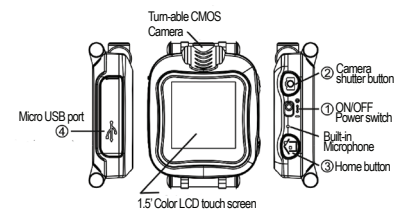

- ① **ON/OFF SWITCH:** Switch the Smart Watch ON or OFF. When the switch is over the "I" symbol it is ON. When the switch is over the "O" symbol it is OFF.
- ② **CAMERA.SHUTTER BUTTON:** Press to take a photo or record a video.
- ③ **HOME BUTTON:** Press and hold for 3 seconds to turn LCD screen on or off. Press to switch between main and sub menus.
- ④ **USB PORT:** Use to connect the Smart Watch to a computer or USB charging port to recharge the battery, or to upload photos & video to your computer.

OVERVIEW:

This Smart watch is a great wearable gadget for children! In addition to showing time, you can also take photos, shoot video, record your voice, and play games.

When the watch's switch is off, it will not be possible to charge the watch or use any of the activities. Please note, it is not necessary to turn off the power switch during daily use.

The watch may come with a small amount of charge, but we recommend a full charge before use. A full charge will take about 3 hours.

CONTENTS:

-x1 Smart Watch -x1 Micro USB cable -x1 User Guide.

OPERATION:

Long press the Home button on the right side of the device to turn on the watch.

CHARGING THE BATTERY:

- Connect the Smart Watch to a computer with the included micro USB cable to charge the battery.
- Lift up the rubber cover of the Micro USB port on the side of the watch. Insert the micro USB cable into the device. The small end of the chord goes in the watch and the large USB end goes into a space USB port on the computer.
- Once connection is successful, the watch will show the battery charging symbol displayed on the screen for 1 second followed by the data transfer symbol. The battery will continue to charge while connected and you can open PC to find folder smart watch to transfer data at the same time.
- Monitor the watch regularly throughout the charging process.
- When the battery is fully charged, a full battery symbol will be displayed on the screen.
- Disconnect the watch from the computer.

NOTE: Charging the battery should only be done by an adult or under adult supervision. It will take approximately 3 hours to fully charge the battery.. The actual charging time depends on the power supply, the remaining charge and the ambient temperature of the charging environment. If your watch needs longer than 3 hours to fully charge, please try charging from a different USB power source.

BATTERY LIFE:

The time the battery lasts between charges depends on the usage. Like other electronic devices, more frequent usage will mean the battery life will drain more quickly. Some functions will be more demanding on the battery, such as taking pictures and video. The expected battery life is shown below based on the assumption that the screen is turned off when not in use.

CONDITION	BATTERY TIME
Low usage	2 weeks
Typical usage	2-3 days
Heavy usage	1 day

To preserve battery life, the screen will automatically shut off after a short period of time when in clock mode. The auto screen off time can be adjusted in: Settings/Advanced/Auto Screen Off.

HOW TO OPERATE YOUR WATCH:

- Make sure the power switch is in the "on" position and the battery is charged before use.
- Press the home button to wake the watch up. Press and hold the home button for 3 seconds to wake up the watch from standby.
- When the clock is displayed on screen, press the home button to go to the home menu.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after recharging the watch.
- When the battery level is low, only the clock display function is available. We recommend recharging the battery as soon as possible before further use.

CLOCK DISPLAY

When the home button is pressed, the clock will be displayed. Tap the center of the screen to switch the clock face between analog and digital. Swipe left or right on the screen to see more clock faces.



Top row: Digital clock faces. Bottom row: Analog clock faces.



HOME MENU:

Press the home button to display the home menu. The functions below are available.

1. Camera
2. Video
3. Gallery
4. Voice recorder
5. Time Teacher
6. Alarm
- 7.Timer
8. Stopwatch
9. Calculator
10. Calendar
11. Settings
12. Games."

* GAMES:

1. Brick Breaker
2. Basketball shot master
3. Ultimate racing.
4. Bee war
5. Foodle war
6. Princess dress up

Swipe left or right to scroll through the menu pages. Tap a icon to enter the activity. To change the menu layout to large icons, go to: Settings > Menu Layout.

FUNCTIONS:

1.Camera:

The camera can be moved 90 degrees Up and Down. Move the camera with your fingers up and down to take selfie photos and videos. Press the Shutter button to enter Camera.

When moving the camera angle, the image will show upside down. To revert the image on the screen press the camera icon on the top left corner.

Tap the photo gallery button on the bottom right hand side to view your pictures.

2. Video:

Open the video function on the main menu. Press the video button on the screen to begin video recording. Press the same button again to end video. The video will automatically save when completed.

When moving the camera angle, the image will show upside down. To revert the image on the screen press the camera icon on the top left corner.

Tap the video gallery button on the bottom right hand side to view videos. The latest file will be shown first. Tap the arrow icons or swipe the screen to see previous or next video. To delete a file tap the "trash" icon on the screen and follow the prompts.

3. Voice Recorder:

Open the voice recorder function on the main menu.

Press the red circle button on the screen to start voice recording.

Press red square button to stop recording. Recording will be automatically saved.

Press Play button to play your recording.

Use the arrows to select previous or next recording.

4. Time Teacher:

The time teacher is a friendly Panda who can say the time for you. Tap the HOUR or MIN (minutes) icon to select the time you want panda to say. Tap (+) to increase by hour/minute. Tap (-) to decrease by an hour/ minute. Tap the clock or the Panda to tell the time.

5. Alarm:

Open the alarm function from the menu. Here you can set an alarm.

Tap the clock icon on screen to change the alarm time.

Tap the check mark icon on screen to turn alarm on/off. To set up the alarm, select hour and minute by swiping up or down on the hours and minutes. Tap < ok > to confirm time chosen.

NOTE: If battery level is too low, the alarm will need to be set again.

6. Timer:

Open the Timer function from the menu. You can set countdown timer here.

Tap the play icon to start timer.

While the timer is running, tap the pause button to stop the countdown, then tap the play button again to resume.

Tap the refresh button to stop countdown and reset the timer.



7. Stopwatch:

Open the Stopwatch function from the menu.

Tap the play icon to start stopwatch.

While the stopwatch is running tap the pause button to stop timer, then tap the play button again to resume.

Tap the refresh button to stop timer and reset the stopwatch to zero.

8. Calculator:

Open the calculator function on the menu. Use the calculator for basic mathematical calculations. Don't use this to cheat on tests.

9. Calendar:

Open the calendar function on the menu. Use the calendar to view the date. If the date shown is incorrect, go to the settings menu to reset the date and information.

10. Settings:

In settings, swipe left or right on the screen to scroll through the different sub-menus. Here you can adjust the following items:

- Volume
- Date
- Parental Controls
- Advanced Settings:
 - Storage location
 - On screen display language (English / Spanish / French)

11. Games:

Open the games function on the home menu. You will be able to play six games. Use the arrows or swip left/right to scroll through the different games. Tap on the screen to start that game.

See below for different GAME rules and instructions.

1) BRICK BREAKER

Objective: Clear all the bricks with the ball to get points. Score as many points as you can.

Instructions: Use the bar on the bottom to hit the ball towards the bricks. Tap on the right or the left of your bar to move right or left. Do not let the ball pass your bar or you will lose. White bricks give a special 3-ball bonus. Blue bricks need to be hit 2 times to be cleared.

2) BASKETBALL SHOT MASTER

Objective: Score as many points as possible before time runs out.

Instructions: Tap on the basketball to shoot. Wait until the backboard is in the center to shoot for a score. Keep shooting until the timer runs out.

3) ULTIMATE RACING

Objective: Drive the patrol car without hitting any other cars. Evertime you pass a car, your score goes up. If you hit a car you lose. Score as many points as possible.

Instructions: Swipe the car left or right to avoid hitting obstacles.

4) BEE WAR (space invaders)

Objective: Shoot and clear all the bees to advance to the next level. Score as many points as you can.

Instructions: Tap left or right of your ship to move left or right. Ship will constantly fire. Avoid the bees. You have 3 lives. If a bee hits you, you lose a life. Purple bees need to be hit twice.

5) FOODIE WAR

Objective: Match the desserts with the same color order of the dessert in the window.

6) PRINCESS DRESS UP

Objective: Dress the princess

Instructions: Click the second small icon at the top. Garment options will appear in turn: Dress, clothes, skirt, shoes, hair and accessories. Choose different styles for the princess to wear in front of the mirror.

TIPS:

- When you touch the screen, ensure your entire finger is pressing the screen and hold for a second.
- Do not use fingernails.
- To view photos, videos or voice audio on your laptop/computer, connect the watch using the included Micro USB cable. Photos, videos and voice audios can be found in the "photos", "videos" and "Audios" folders.

TROUBLESHOOTING:

Please check the troubleshooting steps outlined below, and if you are still having issues, contact support at www.jupitercreations.com.

Problem	Solutions
Watch is not turning on	<ul style="list-style-type: none"> • Hold the home button for 3 seconds to turn off, then hold the home button again to turn back on. • Next to the USB port, there is a small hole for resetting. With adult supervision, insert the end of an unboxed paper clip to press the internal button and manually perform a hard reset. Remove the unboxed paper clip once completed, then hold the home button for 3 seconds to power on. • If it still doesn't work, try to re-charge the battery and try again. Refer to battery charging section for details.
The watch is not charging	<ul style="list-style-type: none"> • Try to charge the watch with a different micro USB cable. • Check if the computer's USB port or adapter you are using to charge the device (not supplied) is working with other electronic devices. • If still not working, perform the hard reset method as described above.
Screen display is abnormal	<ul style="list-style-type: none"> • Hold the home button for 3 seconds to turn off, then wait 30 seconds. Hold the home button again to turn back on.
Cannot connect to computer.	<ul style="list-style-type: none"> • Check the connections on the micro USB cable between the watch and the computer. Ensure cable is securely connected at both ends. • Hold the home button for 3 seconds to turn off, then wait 30 seconds. Hold the home button again to turn back on. • Unplug from the computer and re-connect.
Picture taken is not clear	<ul style="list-style-type: none"> • Make sure the lighting conditions of the environment and subject you are shooting is good and well lit. • Check to see if the camera lens is clean. If you find some dust or dirt on it, please try blowing on the lens, and gently wiping the lens with a dry cloth.
Not enough / storage space	<ul style="list-style-type: none"> • If you have to run out of memory, you will need to delete some of your files. These may include photos, videos, voice recordings. You can transfer these to your computer before deleting them from the watch. • Alternatively, to delete all data, head to setting > advanced > storage location, and clear the memory

SYSTEM REQUIREMENTS:

PC Requirements:
PC with 486/66 MHz microprocessor or Pentium Processor.
Operating System: Microsoft Windows XP; Windows Vista or Windows 7.
50 MB hard disk space available.
USB Port: 2.0.
Microsoft Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

MAC Computer requirements:

Mac OS x 10.0 or above.
50 MB hard disk space available.
USB port: 2.0
Mac, Apple, Mac OS are trademarks of Apple, Inc registered in the United States and other countries.

NOTICE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This product conforms to safety requirements of ASTM F963.
This product conforms to PROP 65.
This product conforms to the EMC-Requirements as laid down by the council directive 89/336/EEC

This is an electrical/electronic product and MUST not be disposed of in a normal waste bin. When you wish to dispose of it, please discard at a collection point for electrical/electronic scrap.



PH-OGMT01-1E (Rev.1) Printed in China