

Instructions

Safety warning

Please read the instruction before use.

This instruction describes the precautions to prevent injury or damage to the person who uses it.
Please understand the contents to use this product safely.

Warning

- Keep this product out of reach of infants and children.
- Do not use open flames or smoke in the tent.

Attention

- Do not disassemble or modify this product.
- Be sure to fix it with nails when using the tent.
- Do not use in unstable places or conditions.
- Do not install it on solid rock or sharp objects. Please check the surrounding environment before use.
- Please make sure the assembly is completed before use.
- Be careful not get your hands caught when assembling and folding.
- Please do not use in extreme weather conditions.
- Please do not use excessive force when assembling and folding.
- Keep away from high temperature, high humidity or fire.
- Please do not use or store it in rainy or humid places, otherwise it may cause rust, faded or corroded.
- Please do not place heavy objects on the tent.
- Wipe off all dust before storing.

※ Depending on the rainfall, there may be a risk of flooding, so please be careful when using in rainy weather.

※ We are not responsible for all problems caused by improper use.

Package content

Assembly image



Assembly method

Be careful not to get your fingers caught

① Unfold the pole of the tent.



② Hold two sides of the center axis of the tent and lift it to open the tent.



③ After expanding, press it down and make it stable.



④ Cover the top with the roof cover, then hook the four corners to the tent frame to fix it.



④ Drive the peg into the ground and fix the tent.



⑥ If you use rope to fix it, it can be more stable.




Storage method

① After use, wipe off the dirt or wash the tent, and then fold it in the reverse order of the "assembly method" above.


② Hold two sides of the center axis of the tent, fold it inward, and put it down.



③ Hold the upper half of the pole of the tent and pull the lower half outwards to open the middle locking part. Then fold it to the inside.

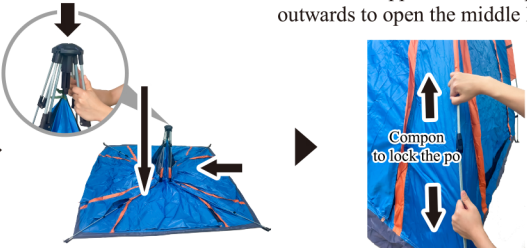

④ Put away around the central axis and roll it up. After removing the internal air, put in the storage bag.

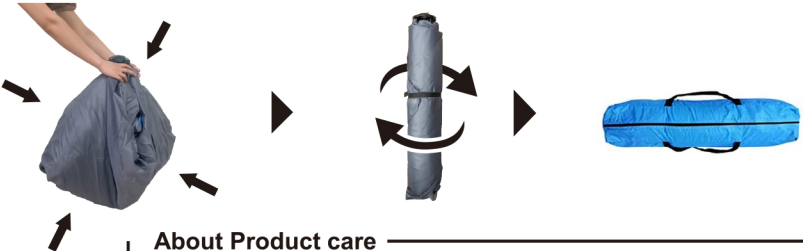

Be careful not to get your fingers caught

※ Design and specification are subject to changes without prior notice.

About Product care

- Please clean the tent with a clean cloth or water
- ※ Please avoid using the washing machine.
- ※ Do not rub the surface with hard particulate cleaners or scrubbers.
- ※ Do not use gasoline or thinner. May cause discoloration, deformation or damage.
- ※ After washing with water, let it dry naturally in the shade. Do not use the dryer.

Made in China