


# Instructions

## Assembly method

 **Be careful not to get your fingers caught**

① Unfold the pole of the tent.



② Hold two sides of the center axis of the tent and lift it to open the tent.




③ After expanding, press it down and make it stable.



④ Cover the top with the roof cover, then hook the six corners to the tent frame to fix it.



⑤ Drive the peg into the ground and fix the tent.

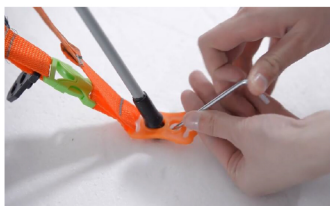

⑥ If you use rope to fix it, it can be more stable.



Fixed point


## Storage method

① After use, wipe off the dirt or wash the tent, and then fold it in the reverse order of the "assembly method" above.

② Hold two sides of the center axis of the tent, fold it inward, and put it down.



③ Hold the upper half of the pole of the tent and pull the lower half outwards to open the middle locking part. Then fold it to the inside.

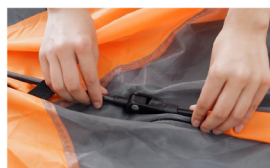

④ Put away around the central axis and roll it up. After removing the internal air, put in the storage bag.



**Be careful not to get your fingers caught**

※ Design and specification are subject to changes without prior notice.

### About Product care

Please clean the tent with a clean cloth or water

※ Please avoid using the washing machine.

※ Do not rub the surface with hard particulate cleaners or scrubbers.

※ Do not use gasoline or thinner. May cause discoloration, deformation or damage.

※ After washing with water, let it dry naturally in the shade. Do not use the dryer.

85%Polyester,15%Cotton  
Name:Pop-up camping tent

MADE IN CHINA