



INDOOR/OUTDOOR

 


15+ FOOT RC RANGE



EASY  
EXPERIENCE LEVEL

## SPINOSAURUS INSTRUCTION MANUAL

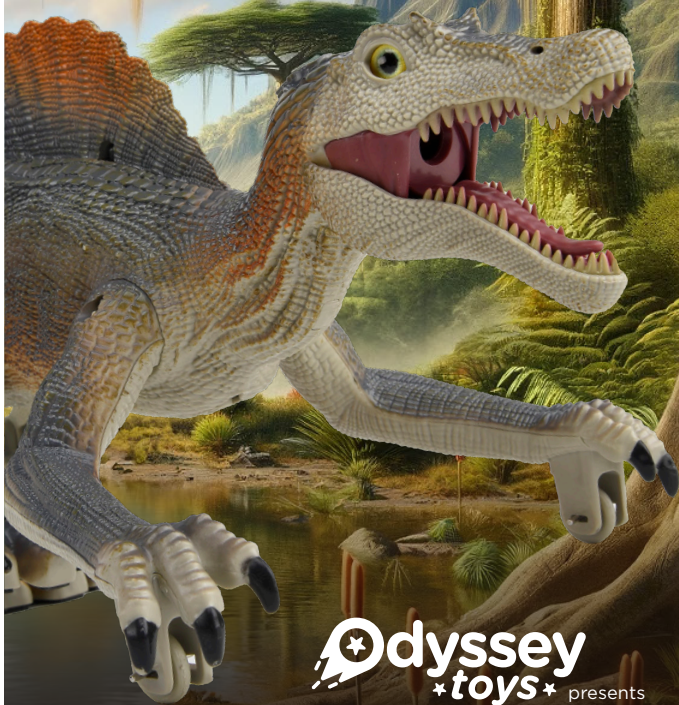

 **Odyssey**  
\*toys\* presents



# Smithsonian

# Cautions and Information

## CAUTIONS AND WARNINGS

- Suitable for ages 6 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away when powered on.
- If product will be stored and unused for an extended period of time, please remove the batteries.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types.
- Remove exhausted or drained batteries.

## CARE AND MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

## FCC STATEMENT:

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

 
MANUFACTURED FOR ODYSSEY TOYS  
**MADE IN CHINA**



# Batteries

## INSTALLING THE SPINOSAURUS' BATTERIES


1. Locate the battery compartment on the base of your Spinosaurus.
2. Using a phillips screwdriver, remove the screw securing the cover and open.
3. Install 4xAAA batteries into the battery holder taking care to match the correct polarity (+/-).
4. Replace the battery holder, install the cover and replace the screw.

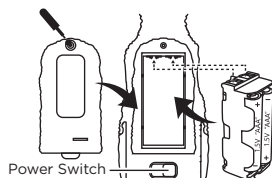

Uses 4x1.5V AAA  
non-rechargeable batteries  
()(NOT INCLUDED)


## INSTALLING REMOTE BATTERIES

 1. Locate the battery compartment on the back of the remote.
2. Using a phillips screwdriver, remove the screw securing the cover and open.
3. Install 2xAA batteries taking care to match the correct polarity (+/-).
4. Replace the cover and install the screw.

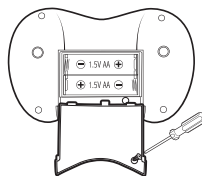

Uses 2x1.5V AA  
non-rechargeable batteries  
(NOT INCLUDED)

## USING YOUR REMOTE

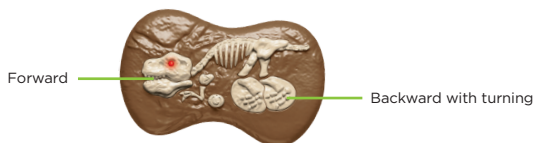 

Tip: The Spinosaurus uses an Infra Red remote. Make sure you are pointing the remote towards the Spinosaurus for reliable control.



Please do not return this product to the store.

For Customer Service please email:  
Care@OdysseyToys.com

Please note the units model number and name in your email:  
Model no. ODY-20SI • Spinosaurus

[www.odysseytoys.com/support](http://www.odysseytoys.com/support)

1-(305)-933-4480

Hours of operation: 10:00am - 5:00pm EST

#### **60 DAY LIMITED WARRANTY**

Odyssey Marketing / Odyssey Toys warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy.

ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number, you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

**\*\* THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.\*\***

©2024 Odyssey Toys LLC.