



LEXIBOOK® 2

Tablet Junior 2



www.lexibook.com

Mode d'emploi

LEXIBOOK®

MFC280FR



Welcome!

Congratulations on your purchase! You've just purchased your new Lexibook® tablet. We invite you to read this user guide carefully to make the most of all the functions offered by your Lexibook® tablet, as well as the detailed instructions and safety tips.

One tablet, thousands of possibilities

Thanks to Wi-Fi access and its touch screen, you can easily use your tablet wherever you want, whenever you want!

Reading digital books, watching videos, sending e-mails, listening to music, surfing the Internet, playing video games, enriching your general knowledge... these are just some of the possibilities offered by your tablet.

What's more, your tablet can be updated automatically with the OTA function (Over The Air) in just a few clicks, without you having to worry about a thing.

Learn, have fun, relax

The tablet comes with applications already installed and ready to use! Thanks to Lexibook®, you have free access to a wide range of digital books, games and videos.

Finally, the Lexibook® Market, specially designed by Lexibook® to suit the whole family, lets you download and install many other applications on your tablet.

Note: Product updates are carried out regularly. Consequently, the illustrations and contents of this manual are for guidance only and may differ from your specific situation.





Table of contents

Welcome!	2
Table of contents	3
Safety measures	4
Safety instructions	5
Epilepsy warning	7
Package contents	7
1. Discover your tablet	8
Tablet presentation	8
Switching the tablet on and off	8
How to configure Lexibook® Parental Controls	9
How to activate the tablet's Wi-Fi function	9
The Settings menu on the Lexibook® tablet	15
Connecting headphones/earphones	16
How to activate Bluetooth® on your tablet	17
Using a memory card	22
Touch navigation	25
Rotate the screen	26
Using the virtual keyboard	26
Inserting a micro USB plug	28
Charging the battery	28
Using the battery	29
2. Lexibook® tablet home screen	30
The taskbar	30
Profile selection home	31
Lexibook® tablet applications	36
3. The applications supplied with your Lexibook® tablet	41
My Knowledge" menu	41
My Internet" menu	43
My Multimedia" menu	44
My Games" menu	46
My Applications" menu	46
Lexibook® Protect internet browser	47
Lexibook® Market	55
Lexibook® Market Premium	69
BD Comics by izneo	82
Deezer®	83
4. Technical data	84
Tablet specifications	84
Maintenance and warranty	84
Declaration of conformity	86



Safety measures



MISE EN GARDE
RISQUE D'ÉLECTROCUTION
NE PAS OUVRIR



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). CONTAINS NO USER-SERVICEABLE PARTS. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The symbols on the back of the product mean:



DANGEROUS VOLTAGE :

The lightning bolt and arrowhead symbols in a triangle alert the user to the presence of uninsulated "dangerous voltage" inside the device, constituting an electrocution hazard.



ATTENTION:

The exclamation mark inside the triangle alerts the user to the presence of important operating and maintenance instructions accompanying the product.

WARNINGS:

- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture.
- Do not expose the product to drops of water or splashes, and do not place any object filled with liquid, such as a vase, on the device.
- The power socket is used as a disconnecting device and must always be easily accessible.
- To completely disconnect the device from the power supply, the power plug must be disconnected from the electrical socket.



Safety instructions

WARNING: THIS PRODUCT IS NOT A TOY, ADULT SUPERVISION IS RECOMMENDED.

1. Read these instructions.
2. Keep these instructions.
3. Follow all instructions.
4. Heed the warnings.
5. Do not use this product on your knees for more than 30 minutes without taking at least a 5-minute break.
6. Do not use this device near water.
7. Clean only with a soft cloth.
8. Does not block any ventilation openings. Install according to instructions.
9. To prevent overheating, do not leave the device plugged in or switched on in an unventilated housing, such as a bag.
10. Do not install this unit near heat sources such as baseboard heaters, stoves or other appliances (including amplifiers).
11. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two prongs, one of which is wider than the other. A grounding-type plug has two flat prongs and a third round prong for grounding. The wider pin and the third pin are important safety features designed to protect you. If you are unable to insert the plug fully into the wall socket, ask an adult to contact an electrician to replace the obsolete wall socket.
12. The power supply cable must be laid in such a way that it cannot be stepped on or crushed, especially at the plug point, where it is plugged in and where it exits the unit.
13. Use only spare parts/accessories specified by the manufacturer.
14. Unplug this device during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, or dropped.
16. Do not overload the socket. Only use the power source as indicated.
17. Use spare parts specified by the manufacturer.
18. After servicing or repairing this product, ask your service technician to perform a safety check.
19. Keep the device away from metal objects (coins, keys, etc.). Do not leave





- near magnetic fields that could cause data loss or damage the device.
20. Do not drop. Do not expose it to shock, friction or impact. When transporting the device, place it in a protective case.
 21. Protects the device from moisture and rain. If it gets wet, wipe it dry immediately.
 22. Don't touch the power cord when your hands are wet, and don't pull on the charger to unplug it.
 23. To avoid data loss, remember to make a backup (computer or paper) of the information stored in the device.
 24. To avoid interference, do not use the device near other electronic devices, pacemakers or medical equipment.
 25. Switch off the device in areas where there is a risk of explosion, and when traveling by air.
 26. Do not use near flammable or explosive sources.
 27. Do not expose the device to direct sunlight or any other extreme source of heat or cold.
 28. Do not attempt to disassemble the unit, as this will invalidate the warranty.
 29. Do not bring sharp objects into direct contact with the surface, and do not spray cleaning products directly onto the screen.
 30. Do not exert strong pressure on the screen or place objects on it. This could damage the screen.
 31. The socket-outlet must be installed close to the equipment and must be easily accessible.





Epilepsy warning

Read it before playing any video game!

Some people are susceptible to epileptic seizures or loss of consciousness at the sight of certain types of flashing lights or elements common in our everyday environment. These people are at risk of seizures when they watch certain TV images or play certain video games. These phenomena can appear even though the subject has no medical antecedents or has never been confronted with an epileptic seizure. If you or a member of your family has ever experienced epilepsy-related symptoms (seizures or loss of consciousness) in the presence of "light" stimulation, consult your doctor before use. We advise parents to pay close attention to their children when they play video games. If you experience any of the following symptoms: dizziness, blurred vision, eye or muscle twitching, loss of consciousness, impaired orientation, involuntary movements or convulsions, stop playing immediately and consult a doctor.

Precautions to be taken in all cases when using a video game :

- Don't stand too close to the screen.
- Preferably use video games on a small screen.
- Avoid playing if you're tired or sleep-deprived.
- Make sure you're playing in a well-lit room.
- During use, take ten- to fifteen-minute breaks every hour.

WARNING: Prolonged use of the tablet could damage the user's health.

Package contents

When unpacking, make sure the following parts are included:

- 1 x Lexibook® Tablet Junior 2
- 1 x Power adapter
- 1 x USB cable
- 1 x Instruction manual
- 1 x Vidéostore gift card to download one hour of videos
- 1 x Gift card to download the "Mon 1^{er} Imagier Interactif" application
- 1 x Digital comics gift card for a free month's subscription

WARNING: All packaging materials, such as tape, plastic sheeting, string and labels, are not part of this product and should be discarded.


Note: To protect and care for your tablet, you can use accessories such as screen protectors. Visit the following link to find out more about Lexibook® accessories: <http://www.lexibook.com/fr/Netbooks-Tablettes/Tablettes-Kids-Pad#/Accessoires-pour-ordinateurs.html>





1. Discover your Lexibook® tablet

Introducing the Lexibook® tablet

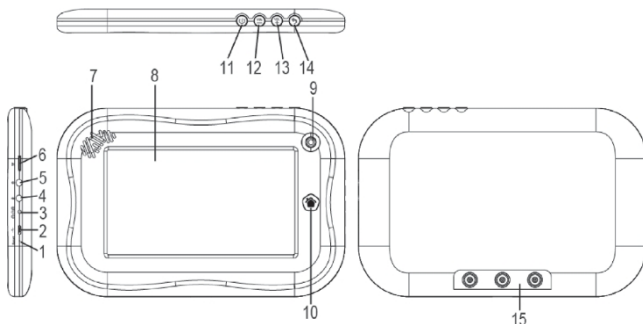

1. Reset button
2. Micro USB port
3. Power supply input
4. Microphone input (3.5mm)
5. Headphone input (3.5mm)
6. Speaker
7. Micro SD card reader
8. Touch screen

9. Camera
10. Home page button
11. Start/Stop button
12. Volume button -
13. Volume + button
14. Back button
15. Connector for protective and support cover MFA66

Switching the tablet on and off

1. To switch on your Lexibook® tablet, press and hold the "On/Off" button (11) on the top of the device for 3 seconds.
2. Waits for the Android operating system to start up™.
3. After a few seconds of waiting, the home screen appears.
4. To switch off your Lexibook® tablet, close all running applications and press the "On/Off" button (11) for 3 seconds.
5. Click on "OK".



Note: The device locks automatically after a few minutes of inactivity. To unlock it, press the "On/Off" button (11). A closed padlock surrounded by a circle comes to life on the screen. Slide it to the right, over the open padlock that appears, to access the home screen.

Note: You can briefly press the "On/Off" button to put your tablet to sleep.

How to set up Lexibook® parental controls

When using the tablet for the first time, we recommend that you create a password to restrict access to advanced settings (such as Wi-Fi, sound and display). **By default, there is no password.**

1. To create a password, select the ladybug icon at the top right of the screen.





2. Leave the **"Old Password"** box empty. Using the keyboard, enter a password in the **"New Password"** box. Confirm the password, then click on **"OK"**.




3. To change a password, enter the old password in the **"Old Password"** box. Click on **"Old Password"**. Then enter a new password in the **"New Password"** box, confirm it and click **"OK"**.





4. To access the tablet's advanced settings, select the icon
Press "**Settings**" on the top right-hand side of the screen. Enter the password, then press "**OK**".

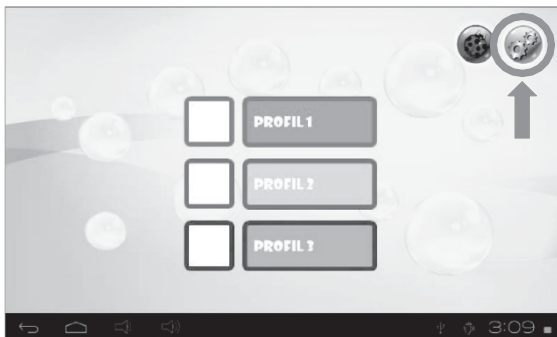


Activate the tablet's Wi-Fi function

1. From the Home screen, press the "**Settings**" touch button in the top right-hand corner.



 2. Press the Wi-Fi "No" switch.

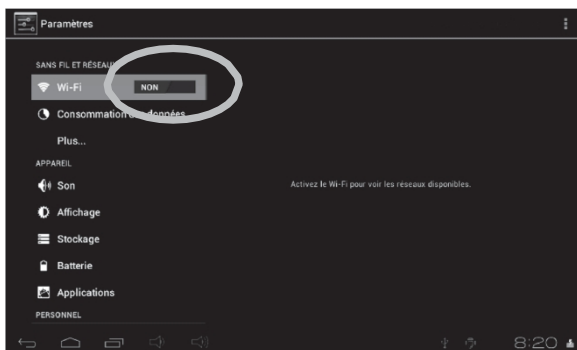



3. Wait for Wi-Fi to turn on. This may take 5 to 10 seconds.



4. The list of Wi-Fi networks appears on the right-hand side of the screen. Now select the Wi-Fi network you wish to connect to. The network name depends on the Wi-Fi modem or router you have. If you're not sure, check the relevant instruction manuals or contact your network provider.

Notes : The network list updates automatically every few seconds.

The ONDE symbol  to the right of each network indicates the strength of the Wi-Fi signal (more white bars indicate better reception).

The padlock symbol  to the right of each network indicates whether or not it is a protected Wi-Fi network.



5. Enter the Wi-Fi network password. The password depends on the Wi-Fi modem or router. If you are unsure, check the relevant instruction manuals or contact your network provider.



6. Press the **"Connect"** button to connect to the Wi-Fi network. This may take between 5 and 20 seconds. If the connection does not work, make sure the password is correct and that you are within range of the Wi-Fi network.



7. Once connected, the message **"Connected"** appears below the Wi-Fi network activated.






The Settings menu on the Lexibook® tablet

• Access the "Settings" menu



On the home page, press the  button in the top right-hand corner, then enter the password and press "OK".

• Your tablet's main parameters

WIRELESS AND NETWORKS	
Wi-Fi	To configure a Wi-Fi network.
Bluetooth®	To configure a Bluetooth connection® and access its advanced settings.
Data consumption	To monitor the device's data consumption.
APPARATUS	
Sound	To adjust volume and various sound notifications.
Display	Adjusts brightness, screen background, sleep and display options.
Screenshot	To access screen capture settings (take photos of your tablet screen with a single click).
Storage	To access micro SD card settings and information about the tablet's memory.
Battery	Displays battery information (consumption...).
Applications	To manage the tablet's various applications, including deactivating or uninstalling them.
PERSONNEL	
Security	To set the tablet's security options (passwords, etc.). Be sure to write down your passwords so as not to risk blocking your tablet.
Language and input	To configure regional options, including tablet and keyboard language.



Save and reset	To save and reset tablet data. Caution: any reset without prior backup will result in the loss of data stored on the tablet.
ACCOUNTS	
Email	Create and manage e-mail accounts on the tablet.
SYSTEM	
Date and time	To set the tablet clock.
Accessibility	To configure accessibility tools for people with special needs.
About the tablet	Display tablet software information.

Connecting headphones

A headphone socket is located on the right-hand side of the unit (5). This socket is suitable for all headphones/earphones fitted with a 3.5mm jack plug. Use of headphones/earphones deactivates the loudspeaker.

CAUTION: Prolonged exposure to high sound volumes, particularly when wearing headphones or earphones, can lead to temporary or permanent hearing loss. For this reason, turn down the volume before plugging in headphones or earphones.

How to activate the tablet's Bluetooth®


The *Bluetooth* word mark and logos® are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Lexibook® is under license. Other trademarks and trade names are those of their respective owners.

2013 Bluetooth SIG, Inc.

1. On the home page, select the **"Settings"** icon in the top right-hand corner, then enter the password and press **"OK"**.



2. Press the Bluetooth **"No"** switch®.

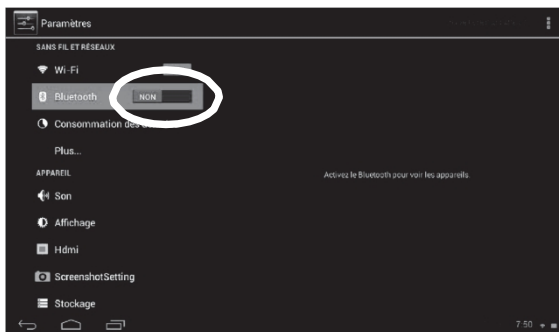


3. Wait for the Bluetooth® to light up. This may take 5 to 10 seconds.




4. Switch on the Bluetooth device® . Make sure you have activated Bluetooth search mode® . For further information on device settings, please refer to your Bluetooth device's user manual® .

 
5. Once Bluetooth® is activated, the list of Bluetooth devices® appears on the right-hand side of the screen. Select the desired Bluetooth device® . This may take between 5 and 20 seconds.

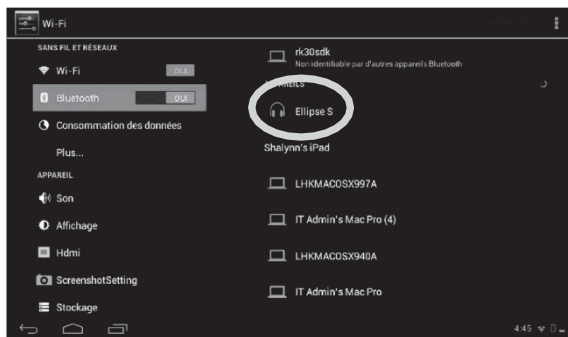

 
6. If the association with the Bluetooth device® does not work, a message indicating a communication problem appears on the screen. Make sure you have switched on the Bluetooth device® and that it is in search mode.

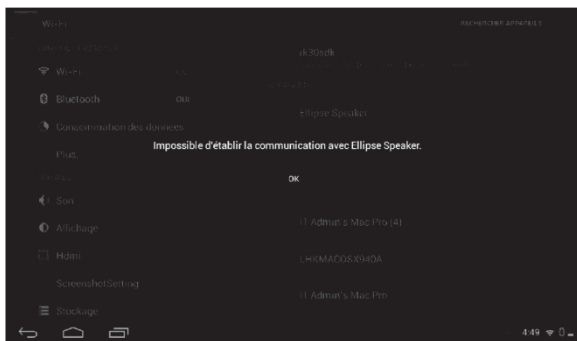

 
7. The tablet first associates with the Bluetooth device®, then automatically connects with it.

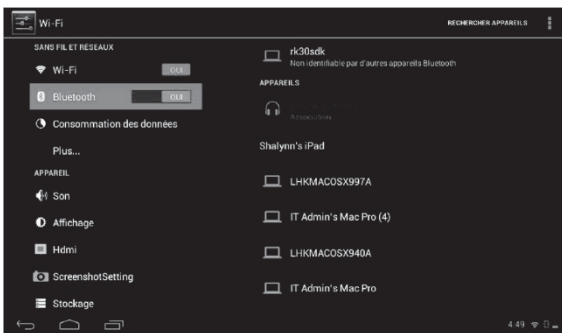

 
8. Once the Bluetooth device® is connected, the message "**Connected**" appears in the list of Bluetooth devices® under "**Associated devices**". To disconnect the Bluetooth device® from the tablet (while remaining associated), press the Bluetooth device name®.

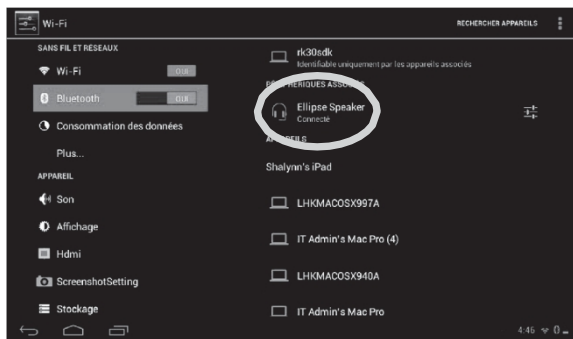

 
9. To modify the Bluetooth® settings of the device in question, press the "**Settings**" icon on the right.

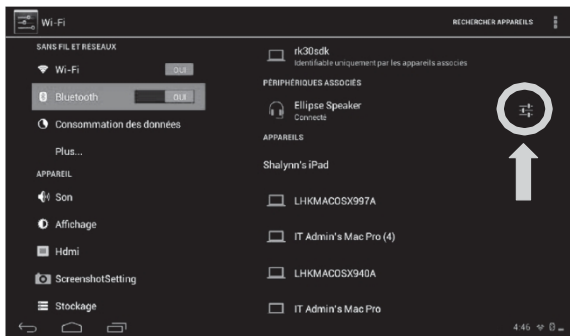

 10. Press the **"Rename"** option to change the name of the Bluetooth device®.

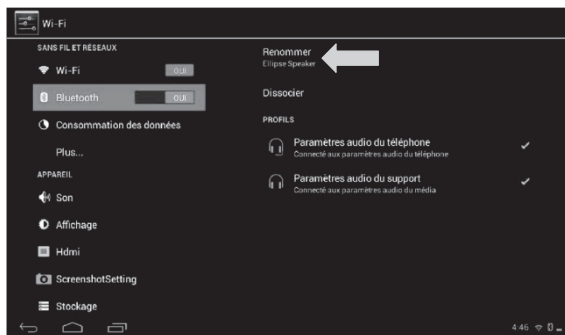

11. Press the **"Dissociate"** button to disconnect and dissociate the® Bluetooth device from the tablet. To reconnect it to the tablet, the device must be associated with the tablet once again.

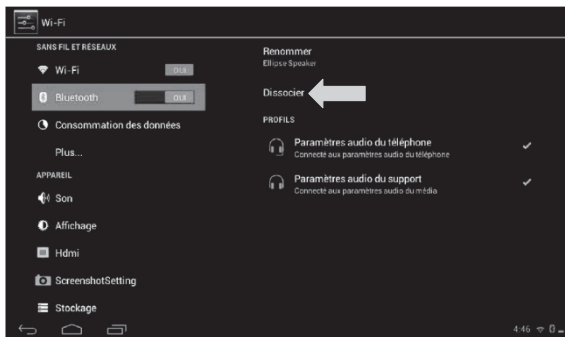

12. The **"Profiles"** options display additional settings for the Bluetooth device® (if available).

Using a memory card


To store additional files or to have more space on your tablet, you can purchase a micro SD / TransFlash memory card (not included), then insert it into your tablet. You can also delete files included in your tablet, such as videos, songs and e-books.

Please note: once you've deleted the files on your tablet, you won't be able to recover them.

Please make a backup copy before deleting them.

• Compatible memory cards

The device is compatible with micro SD / TransFlash (TF) memory cards of up to 32GB capacity.

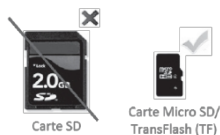

• Inserting a memory card

1. Insert a micro SD / TransFlash (TF) memory card into the device's built-in card reader (right-hand side), observing the direction of insertion (metal card connectors facing upwards).
2. Push the card into the card reader until it locks and you hear a "click".

 
- Remove memory card

Note: BEFORE removing the memory card from the player, you must deactivate it.

1. In the Settings menu, select "Storage" and then click on "Uninstall SD card".



2. Press "OK" to confirm, then wait for deactivation.

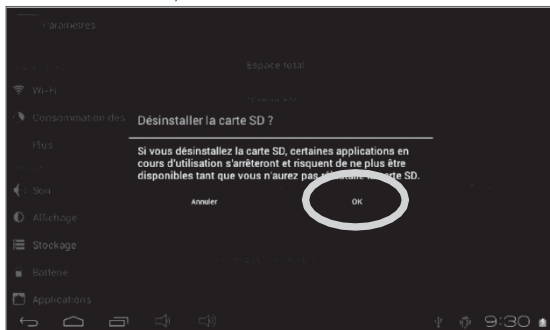

3. You can now remove the card. Press and release the card to remove it from the reader.
4. Then grasp the card and gently remove it from the tablet's card reader.

Notes : *Never remove the memory card without first deactivating it.
Never remove the memory card while the device is transferring or reading data. You risk losing data and/or damaging the memory card.*

• Format memory card

1. In the Settings menu, select "Storage" and then click on "Delete SD card".



2. Confirm twice by clicking on the "Delete SD card" button and "Erase everything".



Note: The "Erase SD card" function **permanently** deletes all the contents of the SD card inserted in the tablet.



Touch navigation

The touch screen makes navigation fast and easy. Move your finger across the surface of the touchscreen to select different menus or applications and navigate your Lexibook® tablet.

- To select or launch a menu or application, press the touchscreen once with your finger.
- To move an element, hold your finger on the element and drag it to the desired location.

• Navigation with Explorer

When you use Explorer to browse your files, you go directly to the selected file. To scroll through your image files and browse your photos, use the "Gallery" application, accessible from the applications menu.

• Gallery navigation

Using the Gallery to browse your images, you can scroll through your image files. Images imported to your Lexibook® tablet via USB or micro SD / TransFlash (TF) card are automatically added to the Gallery.

• Touchscreen precautions :

The following precautions should be taken when using the touchscreen:

- Ensure that the touchscreen does not come into contact with dirt, liquids or grease.
- Do not touch the touchscreen with dirty hands or sharp objects.
- Do not place heavy objects on the touchscreen.
- In some cases, the touchpad may become inoperative. In this case, restart the device or reset the system.

Note: *To further protect the touchscreen, the device is supplied with a protective film. Already installed on the screen, this protective film must be removed the first time it is used.*



Rotate screen

Your tablet is equipped with a built-in motion sensor. Pages can be displayed in portrait (vertical) or landscape (horizontal) mode.

To change the orientation of the page displayed on the screen, simply rotate your tablet. This automatically adjusts the size and orientation of the page you're viewing. Please note: some applications do not have this function.

Notes : For page rotation to be automatic when you rotate your tablet, the "Auto screen rotation" option ("Settings / Display" menu) must be activated.

Use the virtual keyboard

 
Your tablet is equipped with a virtual keyboard that lets you type text, enter e-mail addresses or perform Internet searches.

• Bring up the keyboard


1. Press the text entry field.

Note: The "text entry field" is where you type your text, such as a search bar.

2. The virtual keyboard appears below the input field.

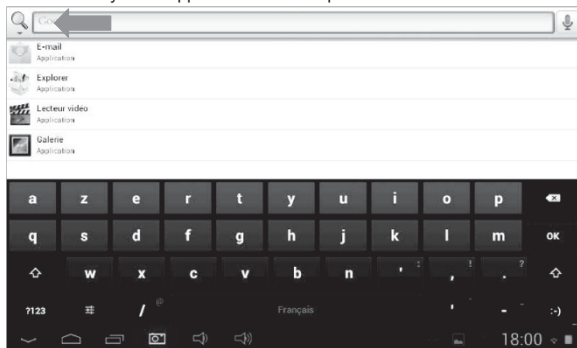

3. Type your text using the virtual keyboard.
4. Press the "OK" key on the keyboard to finish and launch the search.

5. Press the HIDE KEYBOARD touch button  or outside the keyboard to hide the keyboard.

Notes :

 
To make text entry easier, you can connect a Lexibook® keyboard to your tablet.
Keyboard keys may vary according to the application used.

• **Typing special characters**

Some special characters, such as those with accents (à, è, é, ù...), do not appear on the keyboard. To display these characters :

1. Hold down the key closest to the character you wish to type.

Example: Hold down the "e" key for the "é" character.

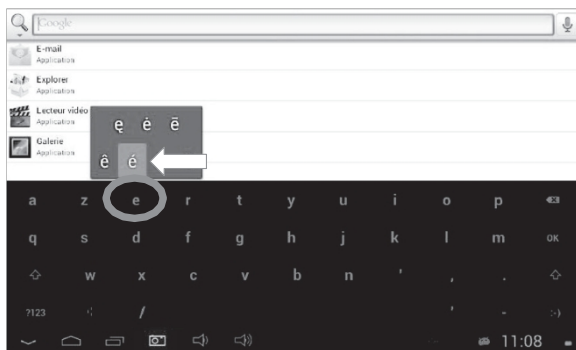

2. A menu of available special characters appears.
3. Slide your finger over the character you wish to type, then release the key.

• **Entering numbers**


To type numbers, you can use the  key to bring up the numeric keypad.



Insert micro USB plug

WARNING: Ask your parents or an adult for help before plugging the micro USB side of the cable into your tablet. Don't install it on your own. The micro USB plug is fragile, so don't force it in - you could break it.

Insert the micro USB plug into the micro USB port, observing the direction of insertion (pins/longer side up) as shown in the photos below.

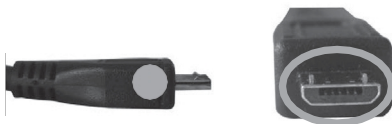

Notice to parents:

Please ensure that your child inserts the plug on the correct side.

Charging the battery

IMPORTANT: The battery must be charged for at least 8 to 12 hours before first use.

Your tablet is equipped with an internal rechargeable battery. You can recharge the battery using the AC adapter (supplied).

• Charging via AC adapter

1. Connect the plug of the AC adapter (supplied) to the power input of your Lexibook® tablet, and the other end of the AC adapter to an electrical outlet.

Note: You can use the device while it's charging. It may take longer to fully charge the battery.

2. The battery charge icon remains lit during charging, indicating charging progress.
3. When the battery is fully charged, you can disconnect the AC adapter from the device and then from the wall socket.

Note: The battery can be recharged while the device is on, in standby or off.



Using the battery

Notes :

- Use only the AC adapter supplied with the unit. Do not use other power supplies or electrical devices.
- Whenever possible, keep the AC adapter connected to the device and to a power outlet to recharge the battery.
- Always wait at least 5 seconds after switching off the unit before restarting it. Switching the unit off and on again immediately can damage electrical circuits.
- The electrical outlet to which the unit is connected must be installed close to the equipment and must always be easily accessible.

Battery life depends largely on how you use it. This may affect its performance.

The lithium battery must only be used with this device. Do not disassemble the battery. Do not dispose of the battery in fire or water. To avoid the risk of fire, burns or damage to the battery, ensure that no metal objects come into contact with the battery terminals. Handle damaged or leaking batteries with great care. In the event of contact with electrolyte, wash with soap and water. In case of eye contact, rinse with water for 15 minutes and seek medical advice. Do not charge the battery if the ambient temperature exceeds 45° C. To dispose of the battery, contact your local dealer and ask for information about local regulations on battery disposal or recycling. To recharge the battery, use only the adapter supplied.

WARNING: Strong electromagnetic interference or electrostatic discharge may cause malfunction or data loss. If the unit does not operate correctly, reset the unit or unplug the AC adapter from the wall socket, then plug it back in.





2. The home screen of the Lexibook® tablet


The taskbar


The taskbar is located at the bottom of the screen. It includes :



- **Status icons:** Icons that provide information (battery charge level, Wi-Fi connection status, etc.).
- **Tactile keys:** keys for direct access to certain menus or functions on the tablet.

• Home screen touch buttons


Back" touch button  to return to the previous screen.

Exit" touch button  to exit the current application and return to the home screen.

Recent" touch button  for quick access to recently used applications.

Options" touch button  to access options for the current application (if available).

Volume -" touch button  to lower the volume of the unit.

Volume +" touch button  to increase the volume of the device.

Settings" touch button  to access device settings.



 
Profile selection

home page


Up to three profiles can be created on the tablet.

To create a new profile

1. Click on the white square to the left of "Profile".

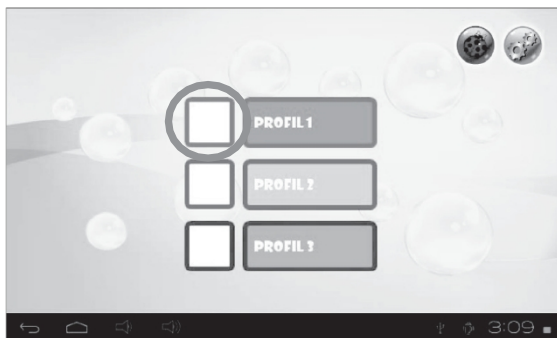

2. Click on the "Your Name" input field, then type a name.

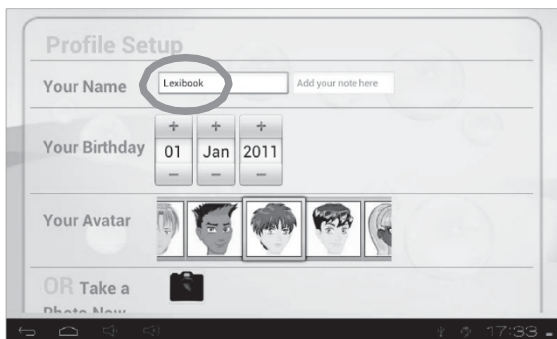


3. You can add a personal message in the box on the right.



The screenshot shows the 'Profile Setup' screen. The 'Your Name' field contains 'Lexibook' and 'Junior Tablet'. The 'Your Birthday' field shows '01 Jan 2011'. The 'Your Avatar' field shows five avatars. The 'OR Take a Photo Now' button is visible. A red circle highlights the 'Junior Tablet' text in the 'Your Name' field.

4. Use the "+" and "-" buttons to set the date of birth (month, day and year).

The screenshot shows the 'Profile Setup' screen. The 'Your Name' field contains 'Lexibook' and 'Add your note here'. The 'Your Birthday' field shows '22 Aug 1987'. The 'Your Avatar' field shows five avatars. The 'OR Take a Photo Now' button is visible. A red circle highlights the '22 Aug 1987' text in the 'Your Birthday' field.

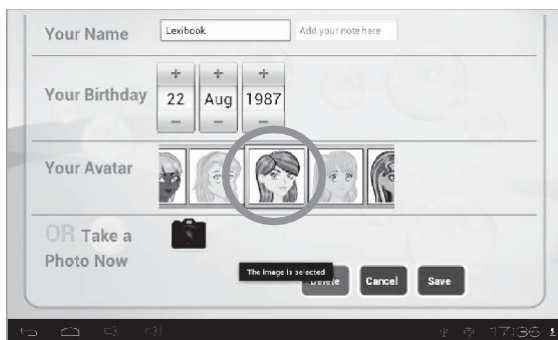 
5. Choose an avatar by sliding your finger left or right, then confirm by clicking on the chosen avatar.



6. To take your own photo with the tablet's camera, select the  icon. Press the  button to take a photo. Press the **Done** (OK) to confirm.




7. Adjust the image until you have a picture you like, then press "**Crop**" to save the image.

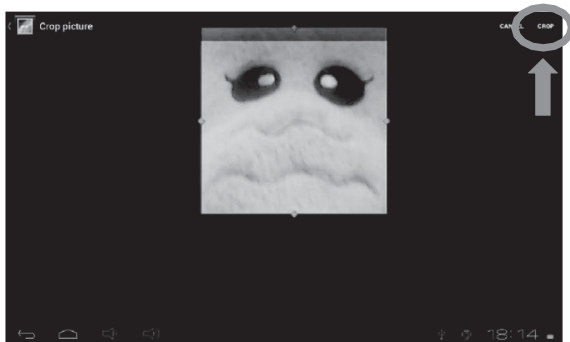

To modify a profile

Note: to modify a profile, you must first have created one.

1. Click on a profile name for two seconds, then press "**Edit**". Or simply click on the profile image.

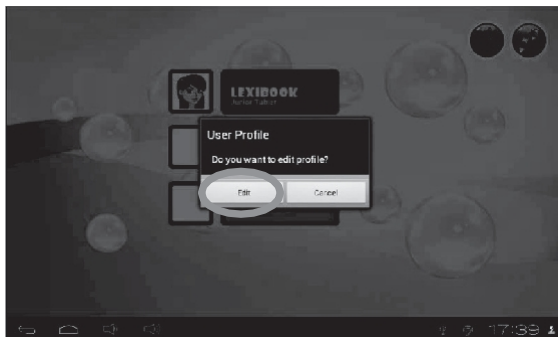

2. Update the information to be modified. Then press the **"Save"** button to confirm.

Your Name Lexitook Junior Tablet

Your Birthday 22 Aug 1987

Your Avatar

 
OR Take a Photo Now

Delete Cancel Save

To delete a profile

Note: to delete a profile, you must first have created one.

1. Press on a profile image.

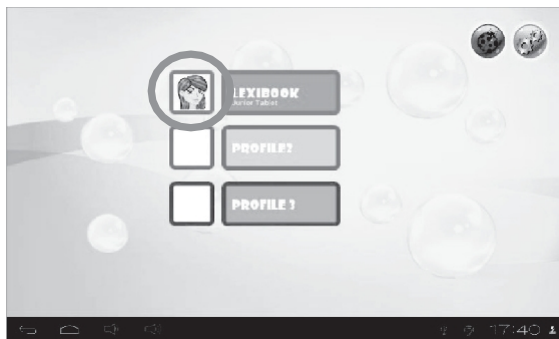



2. Press the **"Delete"** button at the bottom of the screen, then press **"OK"**.

Lexibook® tablet applications

- **Applications accessible from the five Mes Connaissances home menus**

All the tablet's educational applications can be found in this menu.

My Internet

All the tablet's Internet applications can be found in this menu.

My Multimedia

All the tablet's multimedia applications can be found in this menu.

My Games

All the tablet's games can be found in this menu.

My Applications

You can add your own applications to this menu.

Select a profile to launch the quick access page. To access one of the five menus, press the desired menu icon. Once in the desired menu, slide your finger left or right to access another menu.



For more information on applications, please refer to **the** section "**Applications supplied with the tablet**".

• **Open applications from the home screen**

1. Select an application by pressing the corresponding icon.

2. Click on the "Exit" button  or

home page. Click on the  or the previous page.



 
on to return to the screen.




buttons to return to


• Add applications to the "My Apps" menu

1. Select a profile, then the "My Applications" menu.

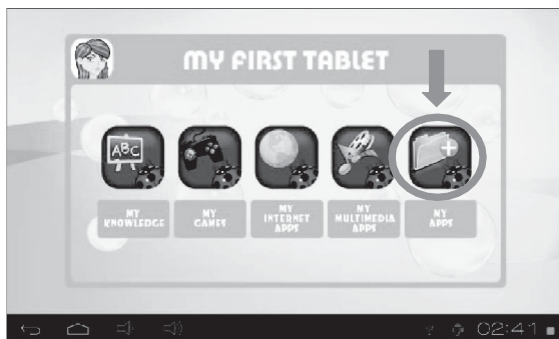

 2. Click on the "+" icon at the top of the screen.

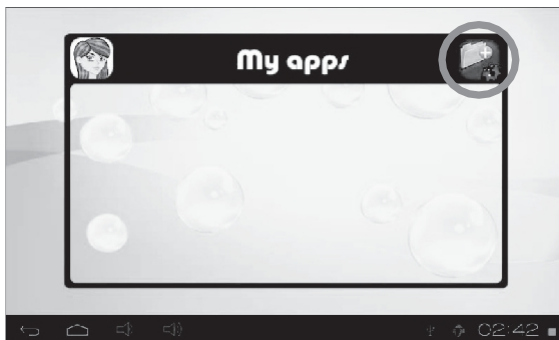


3. Drag the menu from top to bottom, then select the applications you wish to add to the menu. A green tick will appear next to the chosen application. Press the confirmation button .




Note: when you add an application with "Explorer", it will automatically be added to the list of accessible applications.

• Remove applications from the "My Apps" menu

 
1. Select a profile, then the "My Applications" menu.

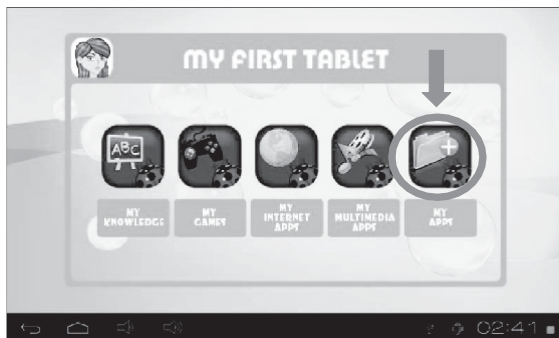

 2. Click on the "+" icon at the top of the screen.

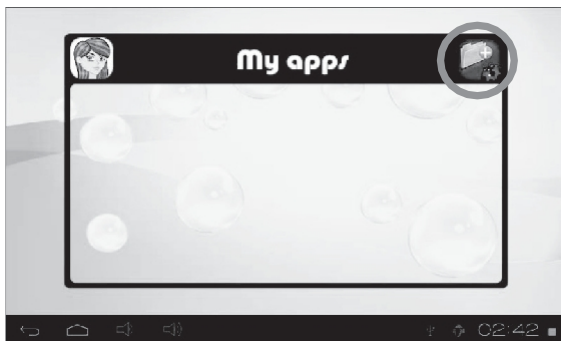

 3. Drag the menu from top to bottom, then deselect the applications to be removed from the menu. The green tick will disappear. Press the confirmation button

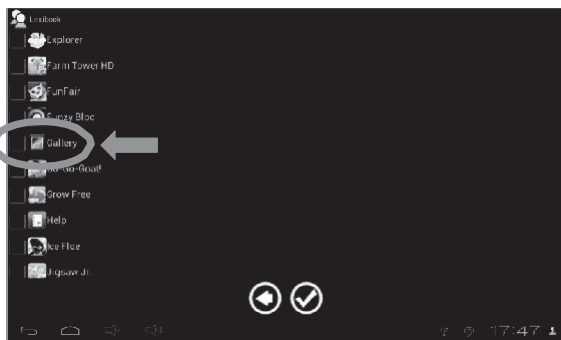

Note: only the "My Applications" menu can be modified. The four other menus ("My Knowledge", "My Games", "My Internet" and "My Multimedia") cannot be modified.



3. The applications supplied with your Lexibook® tablet

Note: Lexibook® cannot guarantee the content or services accessible via the Lexibook® tablet. Furthermore, it cannot be held responsible for any loss of data, deterioration or alteration of the device linked to the downloading or updating of applications or software on the device. Furthermore, it cannot be held responsible for any expense, cost or financial loss, in any form whatsoever, resulting from a purchase made on the Internet using this tablet.

Note: Most of the applications listed below require an Internet connection. Before launching an application, check that your tablet is connected to a wireless Internet network (see "Activating the Wi-Fi function").







My Knowledge" menu



	Power Academy Click on this icon to access 500 interactive lessons and quizzes to enrich your general knowledge.
	My Hobbies Click on this icon to access 52 creative activities for the home: indoor and outdoor games, recipes, science experiments and crafts.
	My Lexibook® Translator Click on this icon to launch the "My Lexibook® Translator" application and access an intuitive translator in 15 languages with a database of 10,000 words!
	I'm learning Click on this icon to access six "I'm learning" activities.











	<p>The three little stories</p> <p>Click on these three icons to access the three little stories: Little Red Riding Hood, Goldilocks and The 3 Little Pigs.</p>
	<p>Mon Premier Imagier</p> <p>Discover words with your friends Lili, Djiba, Enzo, Léa and Téo!</p> <p>Thanks to the Yayé® series from Lexibook®, your child can learn or review important kindergarten concepts.</p> <p><i>Mon Premier Imagier is an interactive picture book that introduces your child to the world around him. With 60 questions about home, the city, leisure activities and vacations, children can discover and learn about everyday objects in just one click!</i></p>
	<p>My Interactive Travel</p> <p>Click on this icon to access the "My Interactive Journey" application and discover the world like an explorer. Discover the worlds of home, school and more.</p>
	<p>Calculator</p> <p>Click on this icon to launch the "Calculator" application. This calculator lets you perform advanced mathematical operations.</p>
	<p>Clock</p> <p>Click on this icon to access the "Clock" application. You can customize and program different alarms.</p>
	<p>Help</p> <p>Click on this icon to access the full user guide for your Lexibook® tablet.</p>





My Internet" menu



	<p>Lexibook® Protect</p> <p>Click on this icon to launch the "Lexibook® Protect" application and surf the Internet. This browser has a filter</p> <p>The Lexibook® Protect is a parental control system that can block up to nine categories of websites. For more information, see the Lexibook® Protect section.</p>
	<p>Lexibook® Market</p> <p>Click on this icon to launch the Lexibook® application. Market". Thanks to this download platform, you can quickly and easily find a n d install thousands of applications on your Lexibook® tablet. Educational games, puzzles, action games, photo software... each application is rigorously selected by Lexibook and is suitable for all ages.</p> <p>The Lexibook® Market is a secure, convenient download platform for the whole family! For more information, see the "Lexibook® Market" section.</p> <p>Note: <i>In the interests of quality, Lexibook® constantly strives to improve its products. To benefit from the latest version of the Lexibook® Market and download updates, go to the following address: http://www.lexibook.com/lexibook-market-app.html. This link c a n also be accessed from the "LXB Update" icon on your tablet.</i></p>
	<p>Lexibook® Market Premium</p> <p>Click on this icon to launch the "Lexibook® Market+" application.</p>
	<p>E-mail</p> <p>Click on this icon to launch the "E-mail" application and gain direct access to your personal electronic mailbox. This application, compatible with most electronic messaging systems, lets you view, send and receive e-mails with ease.</p>
	<p>Weather in France</p> <p>Click on this icon to access the weather forecast for the whole of France!</p>
	<p>LXB Update</p> <p>Click on this icon to download the latest version of Lexibook® Market and benefit from the latest updates and improvements.</p>

My Multimedia" menu



Multimedia

Click on this icon to access the following applications:



Music

Click on this icon to launch the audio player and listen to music.



EXCLUSIVE! 20 songs by Susie Tallman to help you learn English.



Gallery

Click on this icon to launch the "Galerie" application. This application allows you to view the images archived on your Lexibook® tablet.



Video player

Click on this icon to launch the "Video Player" application and play video files.



EXCLUSIVE! 5 videos from Susie Tallman to help you learn English.



Lexibook® Videostore

Click on this icon to launch the "Lexibook® Videostore" application and access your favorite cartoons. You can watch the cartoons online or download them onto a micro SD card (not supplied). For more information, see "The Lexibook® Videostore" section.











Note: To conserve space on your tablet's internal memory, we strongly recommend that you insert a micro SD card (not supplied) into your tablet before downloading an episode.



BD Comics by izneo




Click on this icon to launch the "BD Comics by izneo" application and access nearly 3,000 comics from 25 different publishers' catalogs!



	Marmikid Click on this icon to access a wide range of r e c i p e s .
	Camera Click on this icon to take photos or videos with the built-in camera.
	Explorer Click on this icon to open your Lexibook® tablet's explorer and access the contents of your micro SD / TransFlash (TF) card and the tablet's internal memory.
	Deezer® Click on this icon to launch the Deezer® application and listen to music online. For more information, see the "Deezer®" section.
	Aviary Click on this icon to launch the photo editor. You can customize your own photos and even add dozens of fun effects to photos taken with the camera!
	Tape recorder Click on this icon to launch the "Tape recorder" application and record audio messages. Press  to start recording,  to end, and  to listen. The file is automatically saved in the main folder of the internal memory. Note: The microphone is located near the bottom right edge of the front of the tablet.
	hubiC This application lets you store data in a 25 GB space that's completely secure. You decide how and with whom you want to share these files.



My Games" menu

	<p>My Games</p> <p>Click on the "My Games" folder to access the 25 games available on your tablet.</p>
	<p>Anuman Games</p> <p>Click on the Anuman Games icons to access the 3 exclusive games:</p> <p>Aladdin and the Wonder Lamp</p> <p>Search for food to survive, dodge merchants, find the Cave of Wonders in the desert, harness the powers of the Genie of the Lamp and unravel the mysterious secret of the Palace!</p> <p>Alice in Wonderland</p> <p>Visit unusual places in pursuit of Mr. Rabbit, shrink or grow to discover mysterious passages, talk to strange characters to find your way back, and let yourself be carried away by dreams!</p> <p>My Puzzles with Garfield!</p> <p>Take part in his adventures through numerous puzzles and discover where Garfield has put his paws! Funny, clever and a big sleeper, Garfield has won over generations of children and adults alike.</p>
	

My Applications" menu

This menu displays icons for the applications of your choice. To find out how to add and/or remove icons from this menu, please refer to section "Tablet applications".






The Lexibook® Protect web browser


The Lexibook® Protect browser is an Internet browser that can block up to nine categories of websites, and whose filters are regularly updated. In addition, the Lexibook® Protect browser includes a function that blocks all websites except those that have been manually approved. Please follow this guide to configure the Lexibook® Protect browser.

It is the responsibility of parents to ensure the safety of their children. The Lexibook® Protect browser cannot, under any circumstances, replace adult supervision and assistance when a child is using the Internet. Thanks to the Lexibook® Protect browser, access to content that may offend children is limited. However, Lexibook® cannot guarantee the exclusion of all websites containing inappropriate content.

1. When using the Lexibook® Protect browser for the first time, a window opens automatically. Please create and confirm the main password, which will allow access to the browser settings. Then select "OK".

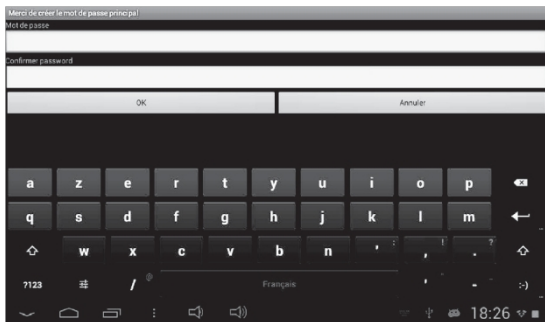


2. The settings screen appears. Check the desired options and then select **"Back"** to return to the browser. For more information on browser settings, follow steps 9 to 11.

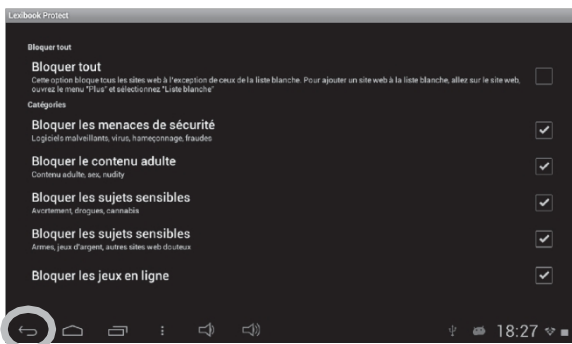


3. Browser settings can also be accessed from the browser's address bar. Select the **"Settings"** button at the top right of the screen.



 4. Enter the master password created in step 1 and select **"OK"**.

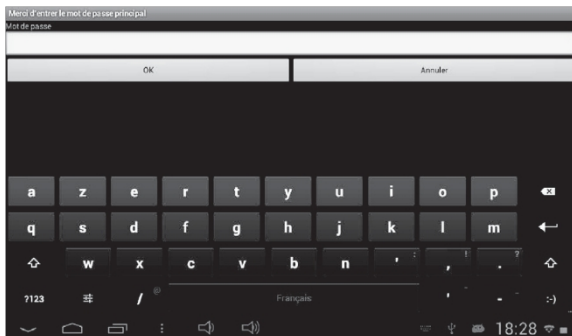


5. The settings screen appears. Check the desired options and then select **"Back"** to return to the browser. For more information on browser settings, follow steps 9 to 11.

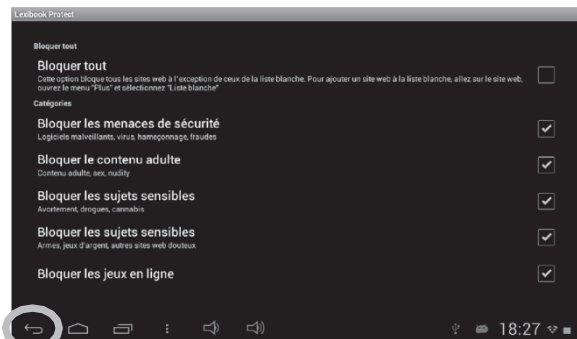


6. Once the master password has been created (step 1), it is also possible to access the parameters from the options bar. Select **"Options"** at the bottom of the screen, then **"Admin. mode"**.




7. Enter the master password and select **"OK"**.

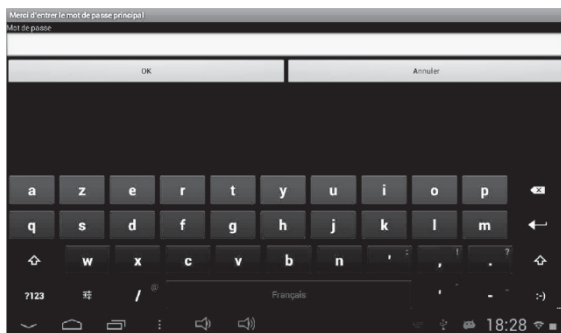

8. The **"Settings"**, **"More options"** and **"Exit admin. mode"** buttons appear on the screen. The **"Exit admin. mode"** button returns you to the browser.

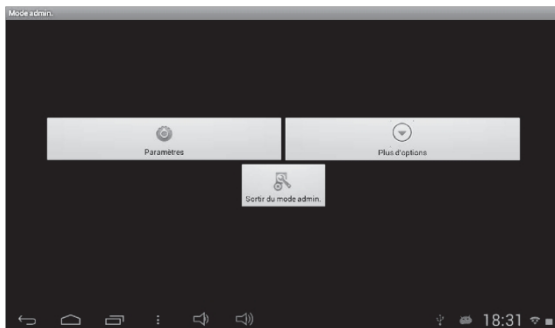


9. In the **"Settings"** menu, the **"Block all"** option blocks all websites except those that have been manually added to the whitelist (list of permitted websites). When this option is activated, the **"Categories"** and **"Blacklist"** options are not available. To add websites to the whitelist, please follow step 14.

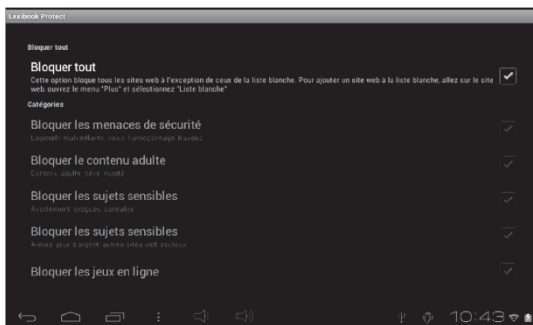




 
10. Still in the **"Settings"** menu, the **"Categories"** section lets you block up to nine categories of website. Check the desired categories.

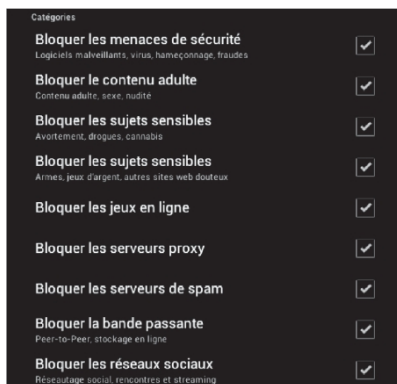


11. Still in the **"Settings"** menu, the **"Black & White List"** section lets you delete previously added websites from the black or white list. To add websites to the black or whitelist, please follow steps 13 and 14. The **"Other"** section lets you change the browser's home page, modify the master password and activate or deactivate Google's SafeSearch filter. For even more effective filtering, we recommend that you do not disable the Google SafeSearch filter.

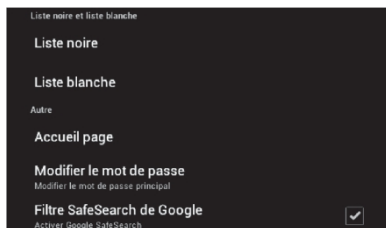

12. The **"More options"** menu allows you to add websites to the blacklist or whitelist and delete browsing history. To add websites to the black or whitelist, please follow steps 13 and 14.

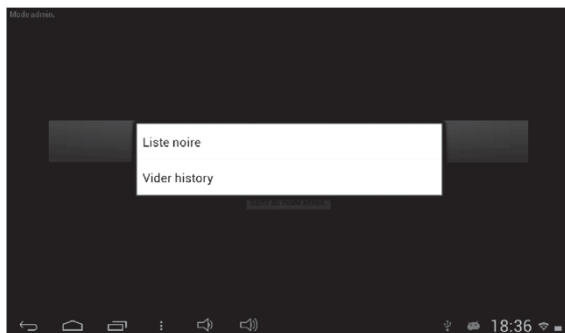


 13. To add a website to the blacklist, go to the website in question (e.g. "www.google.co.uk") and select **"Blacklist"** from the menu. Click on **"More options"** (step 12). The website is immediately blocked. To remove the website from the blacklist, select it from the **"Blacklist"** option in the **"Settings"** (step 11).

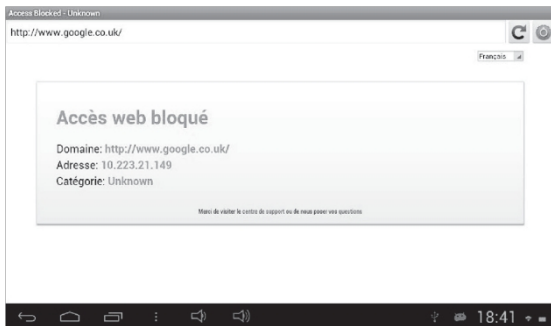

14. To add a website to the whitelist, it must first be blacklisted. Go to the website in question (e.g. "www.google.co.uk") and select "**Whitelist**" from the menu.

 "More options". The website is immediately unblocked. To remove the website from the whitelist, select it from the **"Whitelist"** option in the menu. Click on **"Settings"** (step 11).

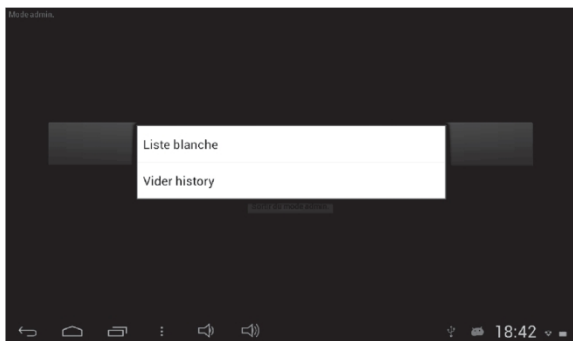

15. To bookmark a website, click on the grey star at the top right of the screen, in the browser's address bar. The star lights up (★→★) and the website is automatically added to the **"Favorites"** menu. To remove a website click on the star again.





16. In the **"Favorites"** menu, a short press on a favorite opens it. A long press on a favorite gives access to a submenu that lets you open it, modify its name and web address, and delete it.



Lexibook® Market

Lexibook® Market is a secure and practical download platform for the whole family!

The Lexibook® Market lets you easily find and install applications on your Lexibook® tablet.

Lexibook® Market is :

- Thousands of applications selected by Lexibook® to suit the whole family.
- Applications (paid and free) to download in seconds.
- Regular updates to take advantage of new applications.
- Not only must-have applications, but also a host of educational and teaching applications (games, puzzles, coloring pages, etc.).

 
Important information:

Ask your parents for help and permission BEFORE buying and downloading paid applications on your tablet.


Lexibook® cannot be held responsible for any expense, cost or financial loss, in any form whatsoever, resulting from a purchase made on the Internet using this tablet.

• Create a Lexibook® Market account


1. On the home screen, click on the Lexibook® Market icon to launch the application.
2. Press the **"Options"** button on the taskbar at the bottom of the screen.

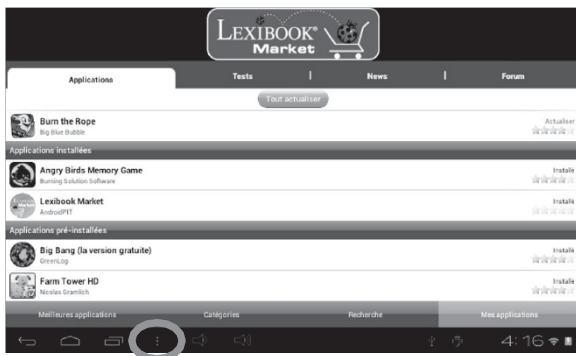

Then click on **"Account statement"**.

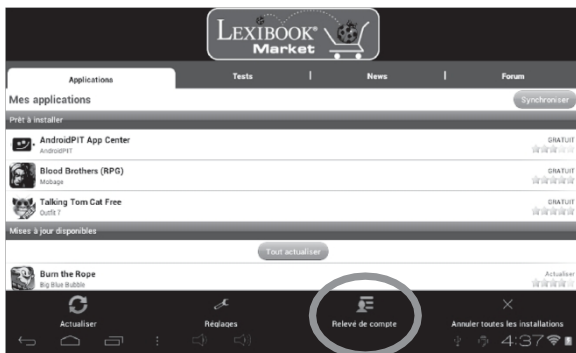


3. Select "I wish to register".

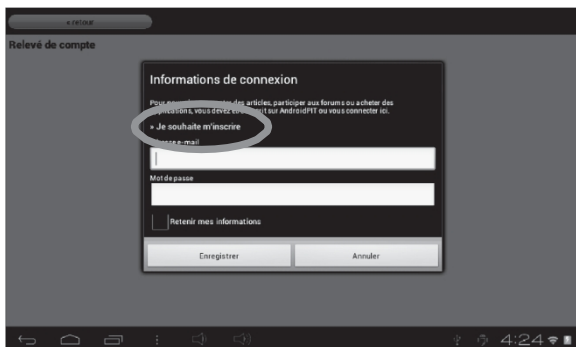

4. Two windows, "General terms of use" and "Data protection declaration", appear one after the other on the screen. Press **"Accept"** each time.



 5. Fill in the registration form, entering your e-mail address, a password and your name, then validate by clicking on
Click on **"Send"**.

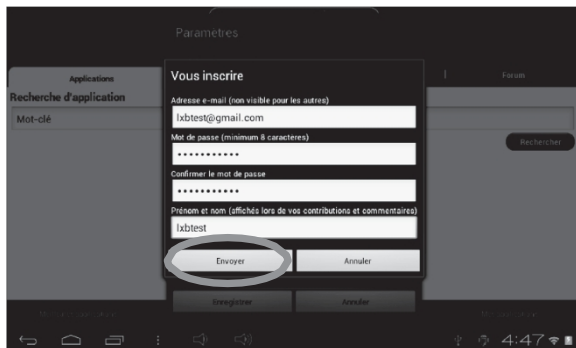

• Connect to Lexibook® Market

1. On the home screen, click on the Lexibook® Market icon to launch the application.
2. Press the **"Options"** button on the taskbar at the bottom of the screen, then **"Account statement"**.



3. Enter your e-mail address and password, then press
Click on **"Register"**. Check the **"Remember me"** box so you don't have to enter your details every time you log on to Lexibook® Market.




• Search for applications on Lexibook® Market

Applications are classified by category and can be accessed via the Lexibook® Market "Categories".

The following three categories are available:

- Applications for your device
- Games for your device
- Other applications

Click on **"Categories"** to display the sub-categories.

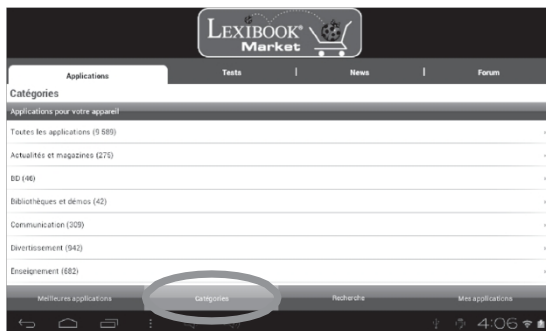


You can also search for applications on the Lexibook® Market using the search engine :

1. Access the "Search" bar at the bottom of the page.




 2. Click on the search engine's input field to bring up the virtual keyboard. Type in the keyword(s) corresponding to your search, press the "Enter" key on the keyboard, then click on "Search" to validate and launch the search.

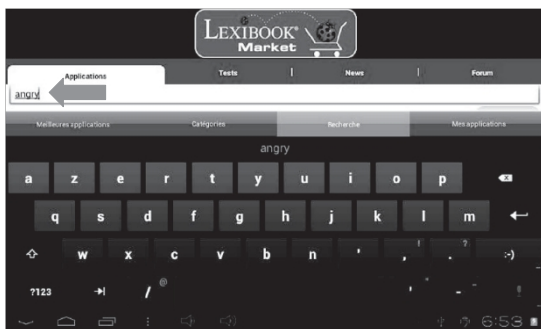


• Installing an application on the tablet

1. In the Lexibook® Market, click on the application you want to download.
2. Be patient during download.

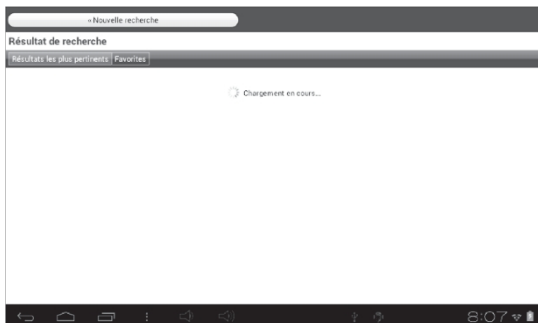

 3. Click on "Install" to start the installation.

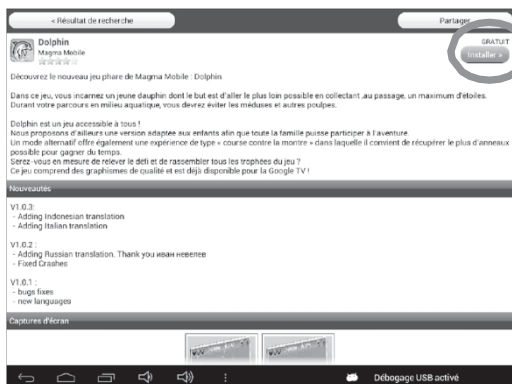

4. Once the application has been installed, a confirmation window appears. Select **"Open"** to use the application immediately.



 
5. The application is then available in the applications menu.




• Buy an application

1. First, log in to your account. Then follow the steps in the previous section: **"Connecting to Lexibook® Market"**.


2. On the page of the application you wish to purchase, press **"Buy"** after checking the application's price.

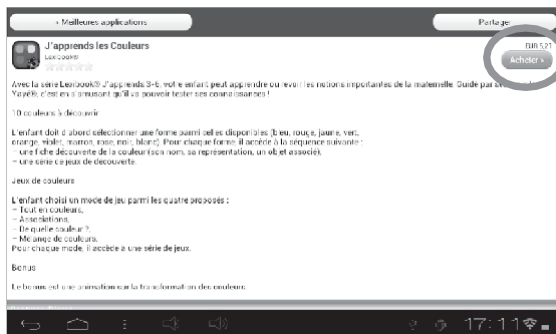


3. If you haven't created an account yet, a window will appear on the screen. Press **"Yes"** to enter the information you need for payment.

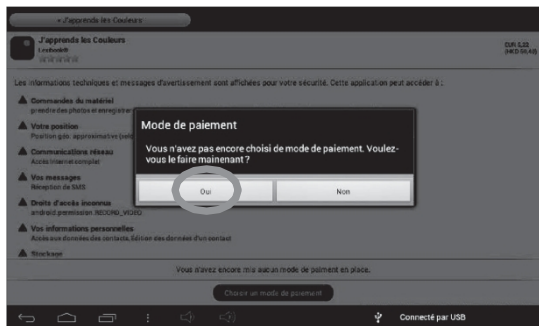


4. First select the currency. Then press **"Next"**.

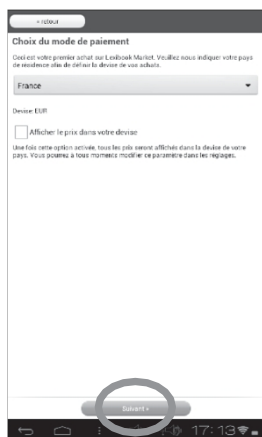

 5. Select your preferred payment method, then press **"Next"**.

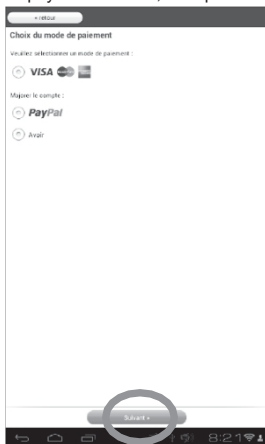

6. a) If you choose to pay by "Paypal", select "Mobile browser on this device", then press "Next". You will then be redirected to the website "Paypal". Follow the instructions.

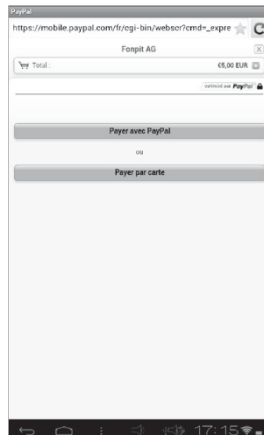


6. b) If you choose to pay with your credit card, you will be redirected to the website "Wirecard". Follow the instructions.



• Find purchased applications

If you uninstall a previously purchased application, you can reinstall it without having to pay for it again.

 1. Connect to Lexibook® Market by logging in (see "**Connecting to Lexibook® Market**").
2. In the search screen (see "**Searching for applications on the Lexibook® Market**"), type the name of the previously downloaded application.
3. If you have previously purchased the application, the word "**Purchased**" appears in the top right-hand corner of the screen.

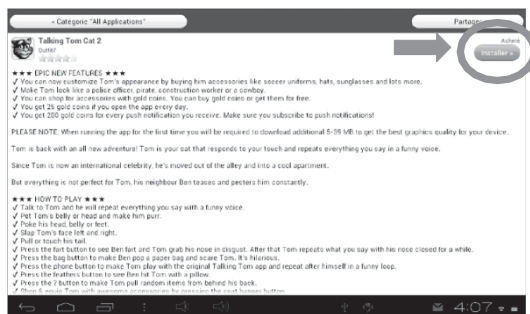


4. To reinstall the application, click on "**Install**". No payment is required.

• Changing the Lexibook® Market language

By default, Lexibook® Market is displayed in the language of your tablet. If this is not the case, or if you wish to display Lexibook® Market in another language, please follow the steps below.


1. From the Lexibook® Market home screen, press the touch button Click on **"Options"**, then on the **"Settings"** button represented by a wrench at bottom left.

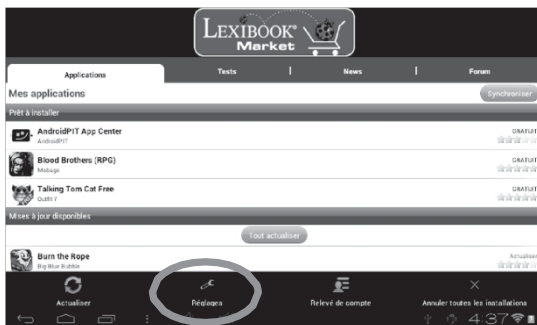


2. In the menu that appears, click on the down arrow of the **"Language"**.



 3. From the drop-down menu that appears, select the desired language. To do so, slide a finger up or down the screen.

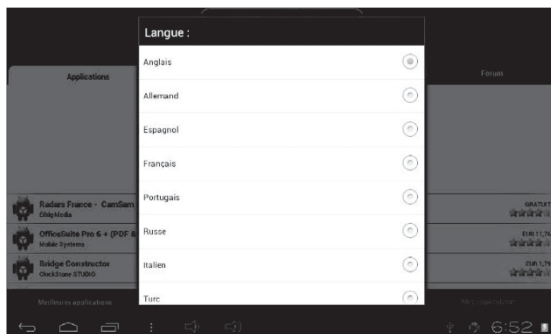

 4. Finally, click the "Save" button at bottom left. Lexibook® Market is now displayed in the new language. To display Lexibook® Market in another language, repeat steps 1 to 4, selecting the desired language in step 3.

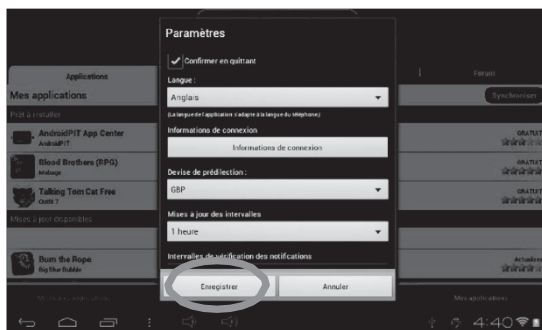



Notes


Lexibook® constantly strives to improve the quality of its products. To benefit from the latest version of the "Lexibook® Market" and download updates, consult the following link: <http://www.lexibook.com/lexibook-market-app.html>. This link can also be accessed directly from the "LXB Update" link on your tablet. Help us make the Lexibook® Market even better! Don't hesitate to contact Lexibook® Consumer Services if you notice any inappropriate applications.

Lexibook® Market Premium

Discover the brand-new secure download platform: Lexibook® Market Premium.

• Create a Lexibook® Market Premium account


1. On the home screen, click on the Lexibook® Market Premium icon to launch the application.
2. A window with the terms and conditions of use appears on the screen when you open the application for the first time. Read the message carefully before pressing "OK".

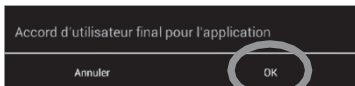

3. Click on the "Registration" button.



4. Enter your email address, then click on "Quick registration" or on "Normal registration".

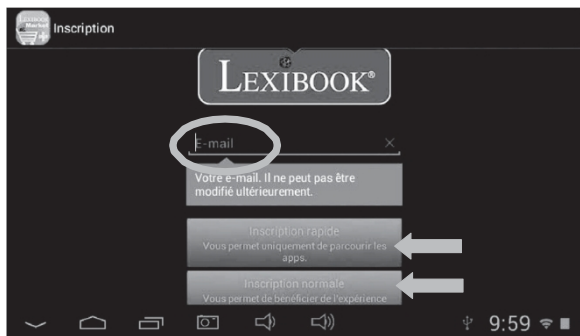


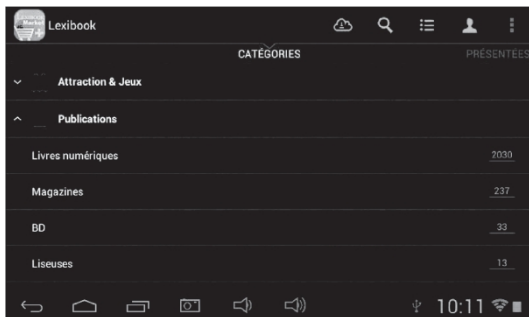
- **Connect to Lexibook® Market Premium**

1. On the home screen, click on the Lexibook® Market icon to launch the application.
2. Enter your username, then your password. By default, the **"Save username and password"** is selected. If you wish to log in manually each time, you can deselect this option.




- **Search for applications on Lexibook® Market Premium**

1. Slide your finger to the right to access the "Categories" page, or simply press this button . Press the down arrows to display the sub-categories.



You can also search for applications on the Lexibook® Market Premium using the search engine :


2. Click on the **"Search"** button at the top of the page.

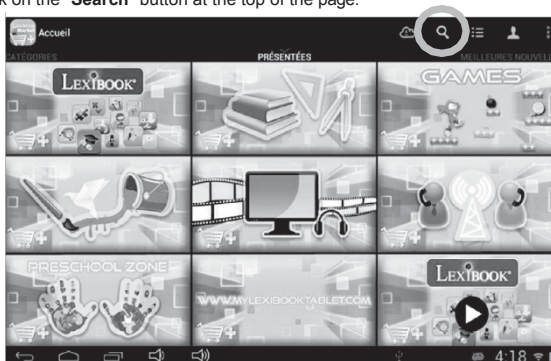

3. Type in the keyword(s) corresponding to your search, then press the **"OK"** key on the keyboard to validate and launch the search.




 4. Depending on your tablet model, you can also use voice search to find applications. Press the microphone next to the input field. Speak the name of the application of your choice, then wait for the corresponding applications to download.

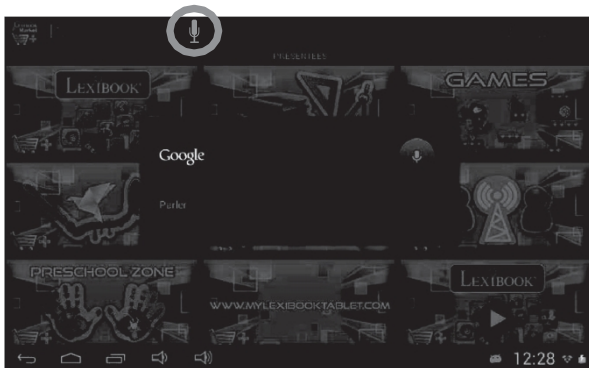


• Installing an application on the tablet

1. In Lexibook® Market Premium, click on the application you want to download.
2. Be patient during download.
3. Click on **"Install"** to start the installation.

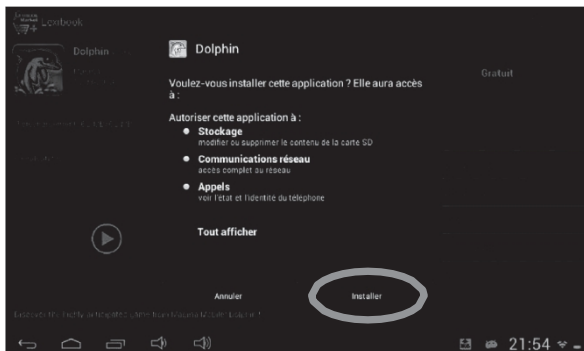

4. Once the application has been installed, a confirmation window appears. Select Press "**Open**" to use the application immediately, or "**OK**" to confirm.

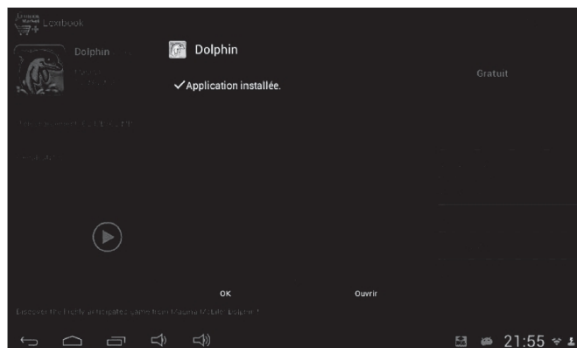


5. The application is then available in the applications menu.



• **Add credit to account**

 1. Click on the **"My account"** button at the top right of the page.

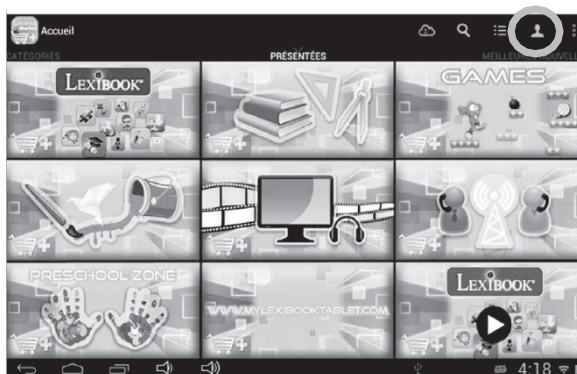

2. Then click on **"Replenish your wallet"**.



3. Type the amount you wish to add to your wallet, then choose the payment method. Press the **"Add funds"** button to access the payment page.




4. Choose your country, enter your personal details and press **"Continue"**.



- Buy an application

1. First, log in to your account. Then follow the steps in the previous section: "Connecting to Lexibook® Market Premium".
2. On the page of the application you wish to purchase, press "Buy" after checking the application's price.

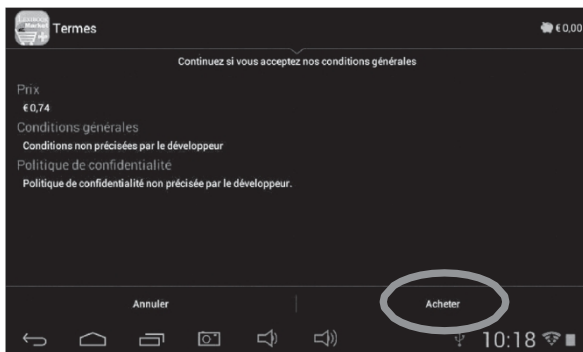

3. Enter your credit card details, then your email address. Click on "Continue".



4. Enter the billing address, then press "Continue".

Acheter

Payez par carte Continuer avec PayPal

Informations de facturation

Prénoms Nom

Ligne d'adresse 1

Ville

Code postal

Ouvrir un compte Personnel (obligatoire)

Adresse email

Mot de passe

Confirmation du mot de passe

☐ En cochant la case :

- Je confirme que PayPal peut me communiquer les informations sur mon compte PayPal par voie électronique. Je dispose d'un accès à un ordinateur et à Internet, je suis en mesure de recevoir, ouvrir, imprimer et enregistrer mes emails et je suis en mesure de lire et d'enregistrer les pages Web et les fichiers PDF que PayPal m'envoie ou met à ma disposition par un autre moyen.
- J'accepte les Conditions d'utilisation de PayPal.
- J'accepte le Statement sur la sécurité de la sauvegarde de PayPal, autorise PayPal à divulguer des informations et permet l'utilisation de multiples de niveau de

5. Once the receipt appears on the screen, you can download the application.

Acheter

Thank you for buying!

your application is available for collection within SAM's StorageLocker.

Download now


Transaction ID: 162422

Transaction	Transaction ID
Date	16/02/22
Type	Purchase
Owner	ibtract
Status	received
Created	Monday, April 11, 2013 - 08:55
Updated	Monday, April 11, 2013 - 08:55
Amount	USD 0.09
Payer	ibtract
Method	PayPal (web-based payment)
Product	1 x \$0.09

• Find purchased applications

If you uninstall a previously purchased application, you can reinstall it without having to pay for it again.

 1. Connect to Lexibook® Market by logging in (see "**Connecting to Lexibook® Market**").
2. In the search screen (see "**Searching for applications on the Lexibook® Market**"), type the name of the previously downloaded application.
3. If you have already purchased the application, "**You already own this application**" appears on the screen.

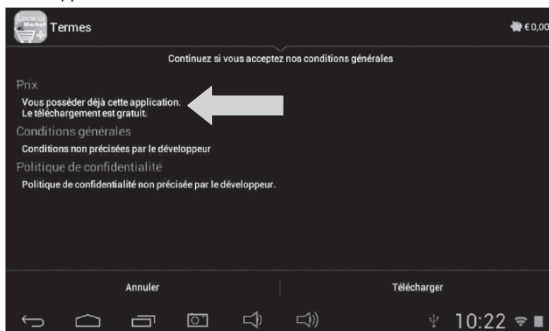


4. To reinstall the application, click on "**Download**". No payment is required.


• Changing the language of Lexibook® Market Premium

By default, Lexibook® Market is displayed in the language of your tablet. If this is not the case, or if you wish to display Lexibook® Market in another language, please follow the steps below.

 
1. From the Lexibook® Market Premium home screen, press the touch-sensitive **"Options"** button, then click on the **"Preferences"** button.

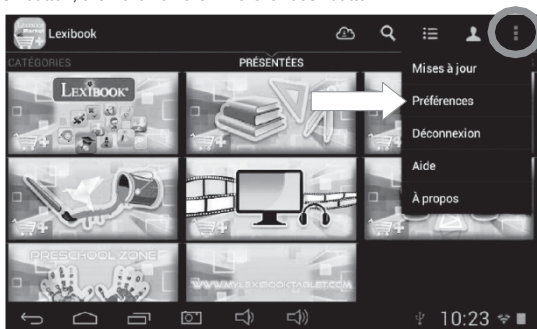

 2. Select the **"Target language"** option to set the language of your choice.

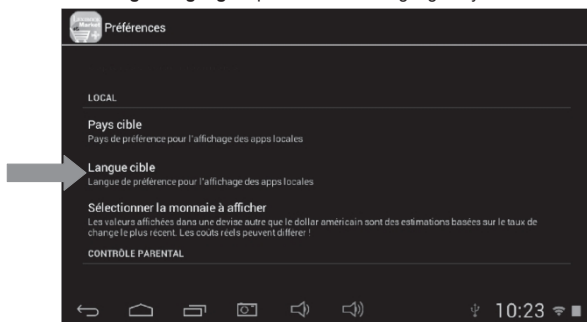

 3. From the drop-down menu that appears, select the desired language. To do so, slide a finger up or down the screen.

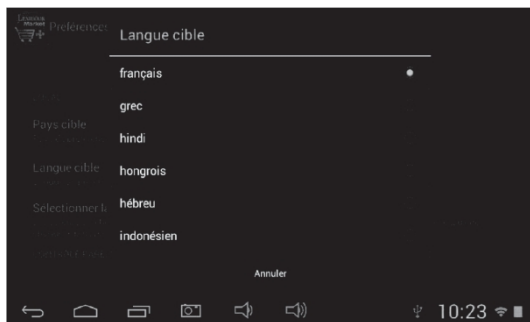

4. To display Lexibook® Market Premium in another language, repeat steps 1 to 3, selecting the desired language in step 3.

Notes :

Lexibook® constantly strives to improve the quality of its products. To benefit from the latest version of the "Lexibook® Market" and download updates, consult the following link: <http://www.lexibook.com/lexibook-market-app.html>. This link can also be accessed directly from the "LXB Update" link on your tablet. Help us make the Lexibook® Market even better! Don't hesitate to contact Lexibook® Consumer Services if you notice any inappropriate applications.



BD Comics by izneo

How can I take advantage of my first month's free subscription?

1. Register on the <http://bdcomics.izneo.com> website from a computer.
2. Click on the "Comic book subscription" image, then on "I subscribe".
3. Enter your promotional code in the field provided, then choose your payment card.
4. Check the terms and conditions, then confirm your registration.
5. Enter your bank details* to complete the registration: you're subscribed!
6. Once you've subscribed, you can choose up to 15 comics from the Subscription catalog at <http://bdcomics.izneo.com>, and read them for free for a month!
7. Read your comics on <http://bdcomics.izneo.com>, or in the free BD comics by izneo app, by synchronizing your comic library on your tablet.

Notes : You need to enter a credit card number to benefit from the 30 free days on your tablet. Ask your parents for authorization. No direct debits will be made from your bank account for the duration of the offer. Once the promotional offer has expired, the current month's subscription fee will be automatically debited from your card. You can cancel your subscription at any time via the "My Profile" section.

* To subscribe, your credit card must be entered.



Deezer®

Lexibook® and Deezer® offer you 30 days of free music! All your music just a click away...

"Deezer® is an on-demand music listening site that lets you access your favorite artists, songs and albums, as well as create and share **playlists**, thanks to a catalog of over 10 million titles from all musical genres. The concept is simple: offer free, legal listening to all types of music, from rock to hip hop, jazz, electro and world **m u s i c . . .**

... and accessible from your Lexibook® tablet

With your Lexibook® tablet, you get unlimited access for 30 days to "Deezer®! From your tablet, you can access the Deezer® application and a vast selection of music. Listening is free, and access to thousands of theme radio stations is unlimited! After 15 days, you can choose to subscribe to the Deezer Premium+ offer, which gives you a further 15 days of listening. Once you've subscribed, you'll be automatically debited the subscription fee set by Deezer®.

How can I benefit from the Lexibook® Discovery offer?

1. Click on the "Deezer®" icon on your tablet's home screen to launch the application.
2. Create a Deezer® account by following the on-screen instructions.
3. Once you've registered, you can access your free Deezer® account. To take advantage of the 30-day free trial, go to <http://www.deezer.com/lexibook> and follow the instructions.

Note: You'll need to enter a credit card number to benefit from the 30 free days on your tablet. Ask your parents for authorization. No debit will be made from your bank account for the duration of the Lexibook® Discovery offer. If you wish to continue to benefit from the Deezer Premium+ offer on your Lexibook® tablet, the bank account will be debited with the subscription fee set by Deezer®.





4. Information

Tablet specifications

Screen	17.78 cm capacitive touchscreen
Screen resolution 800	x 480 pixels
Operating system Google	Android™ 4.2
Processor	1 GHz
Internal memory 4	GB - compatible with micro SD cards up to 32 GB
Random access memory	DDRIII 1 GB
Wifi	integrated 802.11 b/g/n
Audio	Built-in mono speaker
Connections	1 micro USB 2.0 port, 1 reader micro SD card slot, 1 headphone jack, 1 microphone jack, 1 power input, Bluetooth®
Image formats	JPEG, BMP, GIF
Music formats	MP3
Battery	Lithium (included) - 4000mAh, 3.7V
Specifications	Power supply: 100V - 240V ~ 50 / 60Hz 0.4A
adapter	Output: 5V — 2A
Operating time	6 hours (average)
Dimensions	237 x 155 x 20 mm
Weight	650 g
Language	French

Maintenance and warranty

To avoid fire or electric shock, switch off the unit when cleaning. Clean the unit by wiping it with a dust cloth as you would a piece of furniture, excluding any detergent. Clean and wipe the screen with care. This product is covered by our one-year warranty. For any warranty or after-sales service claims, please contact your retailer with your proof of purchase. Our warranty covers material or assembly defects attributable to the manufacturer, to the exclusion of any deterioration resulting from non-compliance with the instructions for use or any untimely intervention on the item (such as disassembly, exposure to heat or humidity, etc.). The warranty does not cover screen breakage or damage caused by the use of an adapter other than the one supplied.

In the interests of continuous improvement, we may make changes to the following colors and details of the product shown on the packaging.

Note: Please keep this manual as it contains important information. The contents of this manual are subject to change without notice. No part of this manual may be reproduced without the written consent of the manufacturer.





Please read carefully! Please keep this manual as it contains important information on how to use all your tablet's functions, including, depending on the model, code activation of certain product functions.

If you create a scheme or password to protect access to your tablet, it is your responsibility to keep it and write it down carefully in an accessible place that you will remember. If you forget your password, our technicians will have to re-establish access to your tablet. This service is subject to an estimate on request, and to invoicing once the estimate has been accepted. Furthermore, in the event of a reset, the user risks losing all data on the tablet.

Catalogue number: MFC280FR

Designed and developed in Europe - Made in China

2013 LEXIBOOK®

LEXIBOOK SA

2, avenue de Scandinavie

91953 Courtabœuf Cedex

France

Customer service: 0 892 23 27 26 (0.34€ / min) www.lexibook.com



AVERTISSEMENT : A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.



Ce produit n'est pas un jouet.



Afin d'éviter d'endommager l'audition, ne pas écouter à plein volume durant de longues périodes. S'assurer que le volume du lecteur soit réglé à un niveau bas ou s'assurer d'éteindre le lecteur avant de partir. Comprendre parfaitement le mode d'emploi avant toute utilisation.

Informations sur la protection de l'environnement :

Tout appareil électrique usé est une matière recyclable et ne devrait pas faire partie des ordures ménagères! Nous vous demandons de bien vouloir nous soutenir en contribuant activement au management des ressources et à la protection de l'environnement en déposant cet appareil dans des sites de collecte (si existants).



Declaration of conformity

We, Lexibook® S.A.

2, avenue de Scandinavie
91953 Courtabœuf Cedex - France

declare under our sole responsibility that the product :

Designation: Tablet Reference /
type: MFC280FR

Complies with the following standards and/or norms:

EN 55022: 2010
EN 61000-3-2 : 2006 +A1:2009+A2:2009
EN 61000-3-3 : 2008
EN 55024: 2010
EN 300 328 V1.7.1
EN 301 489-1 V1.9.2
EN 301 489-17 V2.2.1
EN60950-1: 2006+A11:2009+A1:2010+A12:2011
EN50332-2: 2003
EN62311: 2008

We hereby declare that the product designated above is in conformity with the directives of the European Union, in particular the EMC Directive 2004/108/EC and the Low Voltage Directive 2006/95/EC and RTTE 1999/5/EC.



Yiu Wai Man
Head of product research and development Hong
Kong, 07/10/2013

C €0890