

Pacific Accents™

RetroEssence™

Battery Powered LED Vintage Lights

READ AND FOLLOW ALL INSTRUCTIONS BEFORE OPERATING YOUR LIGHT. SAVE THIS MANUAL FOR FUTURE REFERENCE.

BATTERY INSTALLATION

1. Remove the bulb and lamp fixture from the packaging carefully so as not to damage them. Make sure the cable is fully unwound and there are no snags or knots in the cable.
2. Carefully unscrew the cover of the battery compartment and remove it. Insert 4 AA batteries as indicated by the polarity graphic in each battery location.
3. Place battery cover over battery compartment and screw it back on. Make sure the rubber washer is in place to ensure it is water tight.
4. Insert the bulb by putting the socket in the lamp fixture and turning in the direction of the arrows located on the rim of the socket.

NOTE: This lamp works ONLY with 4 AA batteries, (not included). For best results, use alkaline batteries.

OPERATION:

IMPORTANT: *Your light can be activated manually via a push button located on the battery compartment or with the remote control. The remote control includes features not available manually.*

MANUAL OPERATION:

This lamp includes a daily timer function. When the lights are activated, they turn on and will turn off automatically after either 4 or 6 hours of illumination. The next day, if the setting has not been changed, the light will turn on automatically at the same time and turn off automatically after either 4 or 6 hours.

1. Press the button located on the bottom of the battery compartment once to activate the 4 Hour Daily Timer.
2. Press the button a second time to activate the 6 hour daily timer.
3. Press the button a third time to deactivate the light and timer settings. This button should be used first to reset the timer.

REMOTE OPERATION:

1. Before first use, remove the isolator strip protruding from the battery compartment.
2. The remote control must be pointed in the direction of the light to function.
3. To activate the 4 hour daily timer, select the 4H ON button.
4. To activate the 6 hour daily timer, select the 6H ON button.
5. To deactivate the light and timer settings, press the OFF button.
6. The remote also has a dimmer function. To decrease the brightness of the light, press the (-) button repeatedly - each time the button is pressed the light intensity will decrease. To increase the brightness of the light, press the (+) button repeatedly - each time the button is pressed the light intensity will increase.
7. Your remote requires 1 CR2025 lithium cell battery. Should your remote not function properly, change the battery according to the directions located on the rear of the remote.

LIGHT PLACEMENT

Your lights battery pack has a plastic hook which allows it to be hung in any number of locations. When hanging, be sure to keep it a safe distance from walls, trees or other hard surfaces that may cause the bulb to break if bumped.

BATTERY LIFE

Your bulb should stay illuminated for 120 hours using alkaline batteries. After 60 hours, your light's brightness will diminish daily until the batteries are no longer functioning. You should change batteries when the light will not stay illuminated for the full cycle of the selected timer mode.

IMPORTANT

- Do not leave within reach of children or pets.
- DO NOT attempt to put other bulb types in the light fixture – the fixture can ONLY be used with the bulb included in your product.
- DO NOT attempt to put your bulb in other light fixtures – the bulb can ONLY be used with the fixture included with your product.
- Do not place your light near a heat source.
- Do not immerse the product in water.
- Do not move the device if it is on.
- Turn off the power supply during installation and after use.
- Do not use the light with wet hands.
- Bring your lights indoors in case of storms or high winds to prevent damage.
- Remove the batteries from the product before storing.
- Never cut or pierce the product.
- Never connect directly to outlets or other power sources.

PRECAUTIONS

The flexible external cable or cord of this product cannot be replaced if damaged.

Do not electrically connect light or bulb with another electrical string, plug or device.

Close supervision is necessary when the appliance is used by or near children or the disabled. Do not let children use it as a toy.

Indoor and outdoor use (IP44).

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

*Flipo Group
613 First Street
La Salle, IL 61301*

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

