

Pacific Accents™

INDOOR • OUTDOOR • BATTERY POWERED


C7 STRING LIGHTS

Thanks for purchasing another Flipo® product intended to make life a little easier. FLIPO® offers a wide variety of unique products of the highest quality. To ensure the maximum performance of your product, please read and save these instructions.

Figure A



Figure B

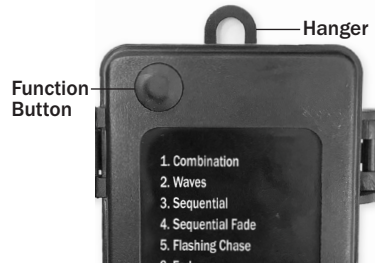

Battery Installation:

Remove the lights from the packaging with care so as not to damage the wires. Make sure that the cord is completely unraveled and that there are no snags in it. To access the battery compartment located in the electronics box, open the clips located on the side of the box (**Figure A**). Install 3 C sized batteries according to the polarity diagram located in the battery compartment. Close the lid and return the clips to the locked position. For best results, use alkaline batteries. ALWAYS remove batteries when the lights will not be in use for a prolonged period.

Set-Up:

Your lights are water and weather resistant – they can be exposed to precipitation but should not be covered in snow or sit in standing water. Choose the location you would like to place your lights and position the electronics box accordingly – it can be set on a flat surface or hung by a screw or nail from hanger located at the top of the box (**Figure B**). Each of the C7 bulbs has a small clip that can be used to assist in hanging your lights.

Timer & Illumination Functions:

This light set includes a daily timer. When the lights are activated, they will illuminate and then automatically turn off after 6 hours. The following day, if the setting has not been modified, the lights will automatically turn on at the same time and will automatically turn off after 6 hours.

1. At the desired time you would like the lights to illuminate, press the FUNCTION button located in the top left corner (**Figure B**), to switch the lights on.
2. When activated, the FUNCTION (**Figure B**), button can be used to change the lights flashing pattern. There are a total of 8 patterns – Combination (all functions sequentially), Waves, Sequential, Sequential Fade, Flashing Chase, Fade, Twinkling & Steady On.
3. Once Illuminated, push the FUNCTION button to select a flashing pattern. When you find a pattern you like, stop pushing the button – the lights will continue to illuminate in the chosen pattern.

4. To reset the timer when the lights are NOT illuminated, simply press the FUNCTION button at the desired time once and follow steps 2 & 3 above.
5. To reset the timer when the lights ARE illuminated, sequence to OFF by pressing the FUNCTION button until the lights are no longer illuminated. Follow steps 1, 2 & 3 above to reset.
6. To switch the lights off while illuminated, sequence to OFF by pressing the FUNCTION button until the lights are no longer illuminated.

CAUTION:

1. NEVER disassemble or otherwise alter or change the product.
2. NEVER try to plug your lights into an outlet or into another set of lights.
3. Do not completely cover the LED with decorations and other flammable materials. Ensure adequate airflow around each LED.
4. Remove batteries from the product before extended storage.
5. Do not damage the insulation of cable or LED holder.
6. Do not secure the wiring of the product with staples or nails.
7. Do not close doors or windows on the wiring as this may damage the wiring insulation.
8. Do not lay the cable under carpet or other places it might be stepped on.
9. Ensure that cables are fully unwound and situated where they will not become damaged or present a tripping hazard.
10. Do not connect this light set electrically to any other light set.
11. Do not unscrew or twist LEDs.
12. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries, cause batteries to leak or damage the product.
13. Do not mix old and new batteries.
14. For best results, use alkaline batteries.
15. Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
16. Do not dispose of batteries in fire.
17. Weather Resistant - DO NOT allow your lights to be covered in snow or sit in standing water.
18. Batteries should be recycled or disposed of as per manufacturer's recommendations.
19. For decorative purposes only. Not suitable for use as a toy by children.

30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

*Flipo Group
613 First Street
La Salle, IL 61301*

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.



Manufactured by Flipo Group Limited La Salle, IL

Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com • Fax: (815) 223-9266

MADE IN CHINA