

# **Ergonomic Computer/Tablet Stand Instructions**

Computer Stand
Instructional Video
Scan This QR Code



### Step 1:

- Take the pole, line up three holes on the pole with the metal base.
- Use the first set of 3 screws in the first packet to tighten.
- Take out Larger Allen Wrench to tighten all the screws.

# Step 2:

- Adjust clamp on pole to the desired height on the pole.
- Take aluminum short arm and place it first through the pole.
- Take aluminum hydraulic arm and place it on top of aluminum short arm.

### Step 3:

• Line up either the computer holder or tablet holder on the hydraulic arm with the 4 screws + 4 nuts with the Allen wrench to tighten and secure the holder.

### Step 4:

• Take another black clamp, put it over the pole, and adjust to the desired height.

#### Step 5:

• Take the two black arms, place the one without the hole on top followed by the arm with the hole on top.

#### Step 6

- Take the wireless phone charger, and run the cable through the top of the arm with the hole. Make sure to pull it all the way through and place it on top of the hole in the arm.
- When fully secure, run the wires under the black arms where they can be tucked and hidden.
- Take the Beuler Fast Charger USB and plug it into the 3.0 charger in the outlet.

### Step 7:

- Take 2 plastic covers with the one large screw.
- Place the plastic cover with the hole on the back of the plastic on top of the hydraulic arm
- Put the screw under the hydraulic arm and tighten it with a Phillips Screw-driver.
- Take the second plastic cover and snap it on to the top of the second arm.

### Step 8:

• Take the wire guide and snap it in with the wire on the pole to make it look like a cleaner install.

### Tips for balancing:

- · Place desired device on stand
- · Adjust top of hydraulic arm with Allen wrench
- To counter balance weight of laptop/tablet, turn it counter clockwise

# Tricks for adjusting Laptop stand to get it level:

 Make sure end of hydraulic arm is facing towards you and angled towards you.

### **Stand Placement:**

- Place stands under furniture, beds, chair legs, couches etc.
- To ensure the stand is fully stable, place a chair leg on top of the metal base.
- We recommend placing the post in front of a chair arm or to the left/right of desired location.

To watch video on computers go to

www.tinyurl.com/bdd6bfm6



### **WIRELESS PHONE CHARGER**

### **Using Your Fast Wireless Charger**

- Plug in the USB charger into the included AC adaptor
- Place you phone on the center of the wireless charger

### **LED Indicator Status**

- Standby state: LED light is off
- Connection to power: LED lights flash twice to indicate power is ok
- · Charging: LED light stays on
- · Fully Charged: LED stays on

### **Specifications**

- Input: 5vdc
- Charging Efficiency: more than 75%
- Charging distance: 3-10mm
- Note charger may not work on some thicker cases
- Frequency: 110-205 KHz
- Wireless Charging power: 15W/10W

Standard: Qi

# **Important Safety Instruction**

- Avoid dropping
- · Do not try to disassemble modify or repair
- Do not expose to liquids
- Do not place too close to magnetic cards or chip cards to avoid magnetic strip failures
- Maximum operating temperature should not exceed 140F

## Compatibility

Compatible with most wireless charging cellphones including Android and IOS phones


Note: Thicker phone protection cases may interfere or create too much distance between the phone and the charging surface and may cause charger not to work or charge at a slower rate.


### Warranty

1 year limited warranty from date of purchase






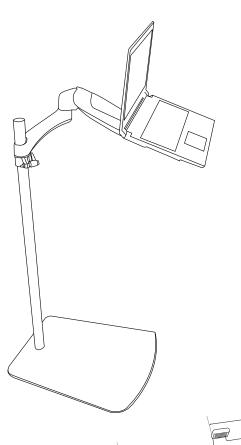


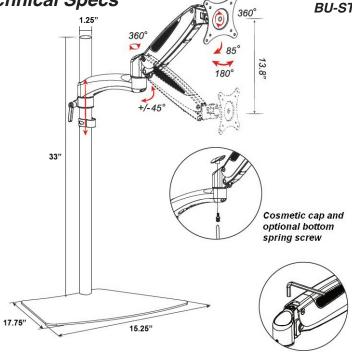

Note: Turn Screw clockwise to reduce lifting force for lighter ( Laptop or iPad) loads and counter clockwise to increase lifting force for heavier(Larger Laptop and iPad) loads.

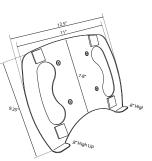

Laptop Mount

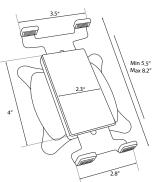

**Tablet Mount** 

