

CARE & MAINTENANCE

Battery replacement instruction:

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Always purchase the correct size and grade of battery suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment please check the internet or your local phone directory for local recycling centers and / or follow local government regulations.

WARRANTY

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of two years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at La Crosse Clock Company option without charge.

La Crosse Clock Company, Warranty Department
2830 South 26th Street. La Crosse, WI 54601

Warranty: www.lacrossetechnology.com/pages/warranty

Patents: www.lacrossetechnology.com/pages/patents

⚠ WARNING: This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

Made in China - Printed in China

LA CROSSE
CLOCK CO.

15.75-Inch Margaritaville

Indoor/Outdoor Wall Clock



Model: 433-3841MV6T


DC: 020924

POWER UP

1. Pull up on the Square Cover to access the movement.
2. Insert 1 fresh AA alkaline battery, according to polarity, into the snug Battery Compartment.
3. Rotate the Time Set Wheel to set the time.
4. Replace the Square Cover over the movement and press down to lock it back in place.
5. Mount on a wall and enjoy!

The quartz movement will keep the clock running accurately. If the clock does not operate, or steadily loses time, replace the battery.

Learn more from our video: bit.ly/wallclock_setup

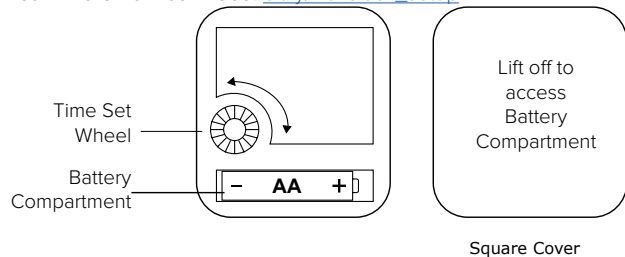

MOUNTING

Indoor: Mount the clock on a wall with the hanger on the back of the clock.

Outdoor: Choose a location with an overhang to protect the clock from the overhead sun or standing snow or rain. A shaded location will prevent inaccurate temperature readings. Mount the clock on a wall with the hanging hole on the back of the clock.

THERMOMETER

- The Margaritaville Clock has a analog sensor that measures surrounding temperature.
- The temperature information is displayed in degrees Fahrenheit
- The thermometer is precalibrated and self adjusting and does not require a battery to operate.

SPECIFICATIONS

Battery Requirements: 1 AA (IEC, LR6, 1.5V) required in the Battery Compartment (Alkaline recommended)

Battery Life: 12+ months

Temperature Range: 0°F to 100°F

