 


# SHARPER IMAGE®

## ADJUSTABLE LAPTOP DESK BY SHARPER IMAGE

Item No. 210197

User Guide

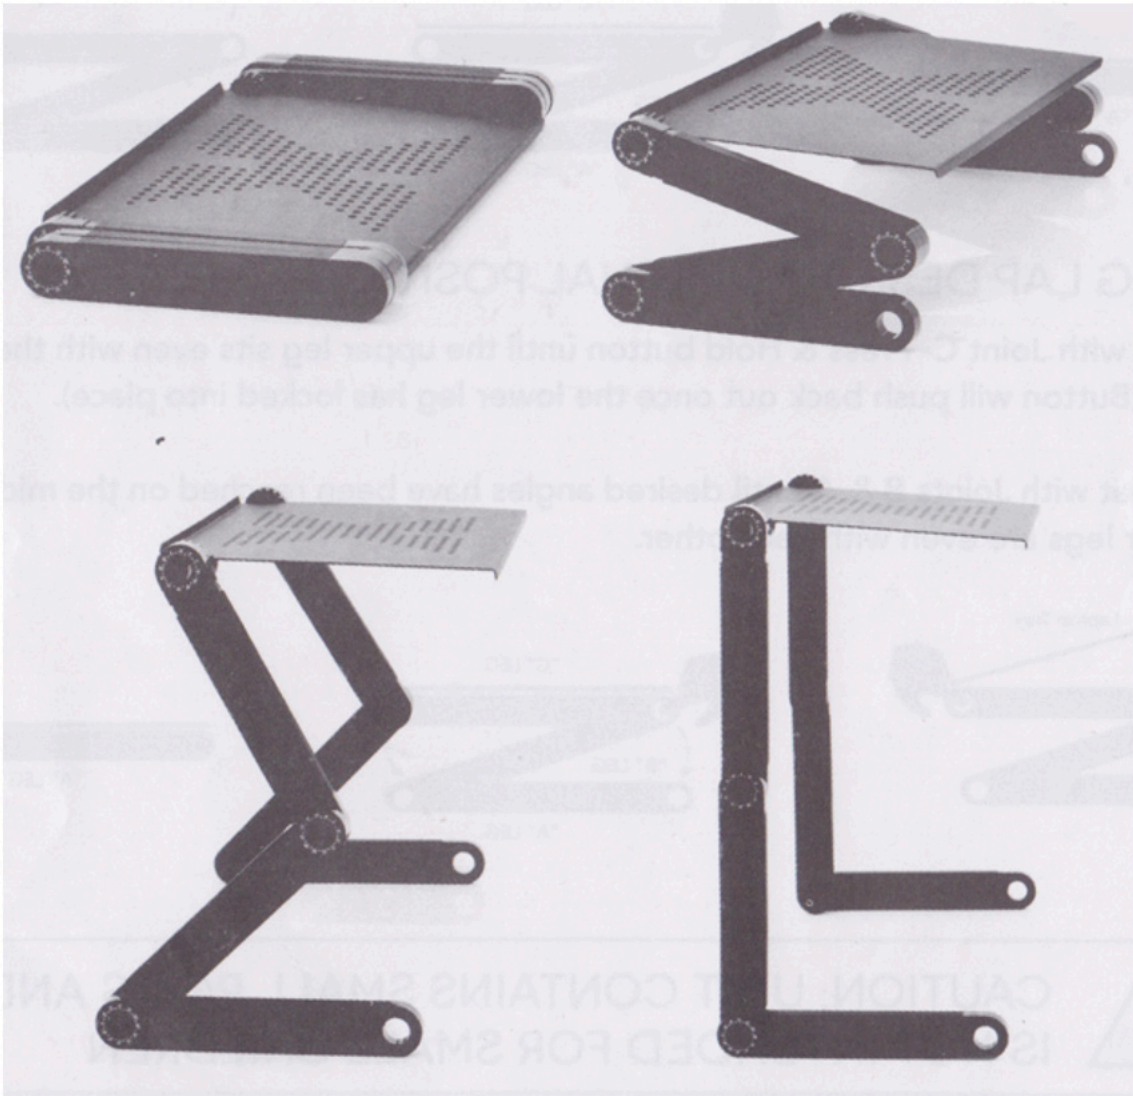

Thank you for purchasing the Adjustable Laptop Desk. Please read this manual thoroughly before operating this device.

## INSTRUCTIONS FOR USE

**NOTE:** There is a small Mouse Tray that clips to the side of the desk.

### Unfolding the Laptop Desk

#### • Adjust Joint A:

 
- Press and hold the button on Joint A and rotate to the desired angle.
- Ensure each button dial is set to the same number.
- The button will push back out once the lower leg is locked into place.

#### • Adjust Joints B & C:

- Repeat the process with Joints B and C until the desired angles are reached on the middle and upper legs.
- Ensure the button dial is the same number for both Joint B buttons and the same for Joint C buttons.
- The button will push back out once the lower leg is locked into place.

#### • Ensure Evenness:

- To ensure the lap desk is even, make sure that the buttons for each joint are locked at the same number.

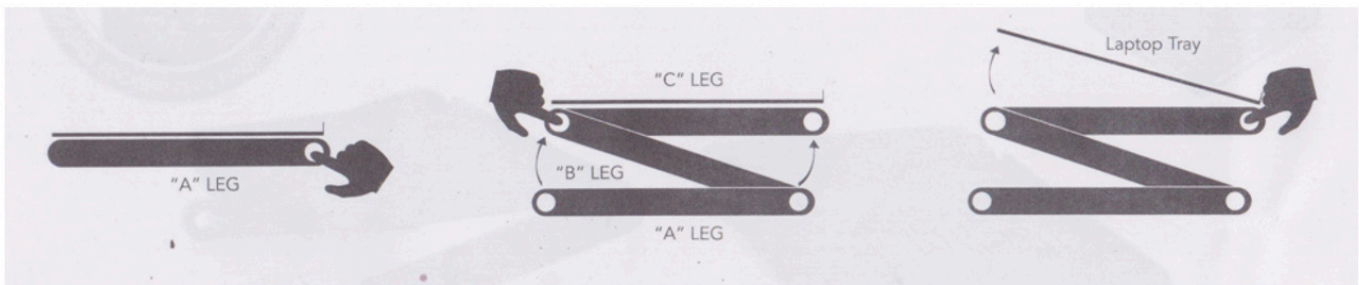


## FOLDING THE LAPTOP DESK TO ORIGINAL POSITION

#### • Adjust Joint C:

- Press and hold the button on Joint C until the upper leg sits even with the laptop tray.
- The button will push back out once the lower leg is locked into place.

#### • Adjust Joints B & A:

 - Repeat the process with Joints B and A until the desired angles are reached and the middle and lower legs are even with each other.

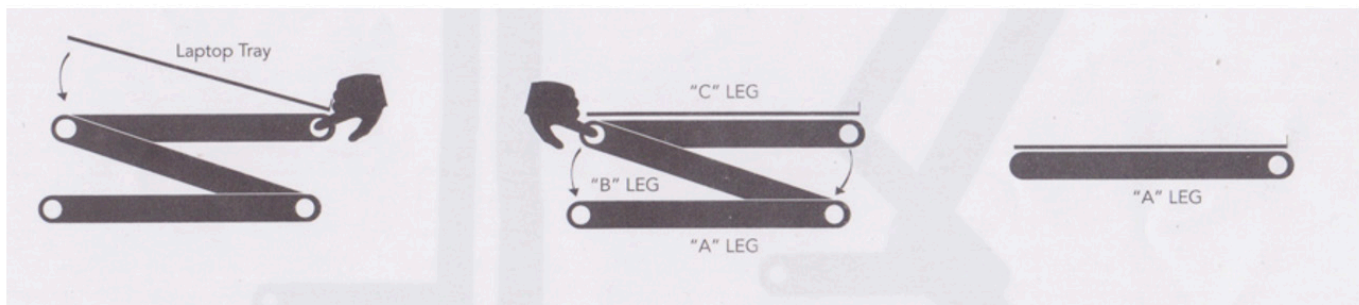

## SAFETY GUIDELINES

- Do not place a laptop or other items on the desk until all legs are locked into place and the top is level.
- Ensure all joint angles are set with matching number dials for the corresponding joints.
- Do not exceed 33 lbs.
- Always adjust and set up starting from the lower leg, then the middle leg, and finally the laptop tray.
- When folding down, follow the order: laptop tray, middle leg, and then lower leg.
- If adjustments can't be made, ensure the button is pressed in all the way.
- Package contains small parts and is not intended for small children

## WARRANTY AND CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.