

Thank you for purchasing **LapLok**, the world's first convenient, retrofitting laptop and tablet security product, designed for the work-from-anywhere world. **LapLok** secures your laptop or tablet to any table or flat surface. It's portable, convenient, and secure, with a loud alarm to drive away potential thieves.

CONTENTS

1 piece LapLok	1 piece Parking Tab
1 piece Alcohol Wipe	4 pieces Laptop Rubber Feet
1 piece Protective Bag	1 piece Carabiner
1 piece Primer Ampule	1 piece LapLok Warning Sticker
2 pieces 2032 Batteries (installed)	1 Adhesive with nozzle
1 piece Arm Mount	

OVERVIEW



HELP AND SUPPORT

Need help? Contact **LapLok's** customer service line at 1-855 - 5LAPLOK (1 855 552-7565) or TechnicalSupport@LapLok.com

Enjoying your **LapLok**? Share photos of yourself using **LapLok** on social media and tag us!

OTHER MAINTENANCE TIPS

- Put your **LapLok** in its **Protective Bag** when not in use.
- Do not expose your **LapLok** to water or extreme temperatures.
- Do not leave your **LapLok** unattended for extended periods of time. Although the **LapLok** is extremely secure, all anti-theft devices can eventually be compromised with enough time.
- Care for your **LapLok** like you would other valuable electronics. It is good to periodically clean the rubber pads and/or do not use **LapLok** on extremely dirty surfaces
- When deciding on your **Lock/Unlock Code**, choose a 3-5 digit number that is easy for you to remember and store it somewhere you won't forget, such as your laptop, phone and/or the inside of the lever.
- Change your **Lock/Unlock Code** every so often for better security hygiene.

SAFETY PRECAUTIONS


- Before attaching **LapLok**, ensure that the table surface is suitable for a laptop. We do not recommend using **LapLok** on table linens as the grip is not sufficient.
- Position **LapLok** on the table edge, ensuring it avoids walkway obstruction or tripping hazards.
- Avoid injury by always making sure your fingers are not in the way when attaching your **LapLok** to a table.
- Do not ingest **Primer** and/or **Adhesive** or let it contact your skin during use. In case of any accident, immediately rinse the affected area with plenty of soap & water. If skin irritation, redness, or any other adverse reaction occurs, seek medical advice.
- Keep **Primer** and **Adhesive** away from open flames. These materials are flammable and should be used and stored in a well-ventilated area, away from any sources of ignition. If **Primer** is inhaled accidentally, move to an area with fresh air and ensure proper ventilation. If respiratory discomfort or difficulty persists, seek medical attention promptly.
- The included **Primer** or **Adhesive** should be just enough to use for the **Parking Tab**, **Mounting Arm**, and **laptop Rubber Feet**. Discard any remaining primer with caution. Keep **Primer** or **Adhesive** away from children & pets.
- Follow the manufacturer's instructions for proper **LapLok** use.

NOTE: *Primer may contain chemicals or substances that have properties that can penetrate the skin and cause skin irritation, allergic reactions, respiratory discomfort, or other adverse effects.*




LAPLOK™
Instruction Manual


LAPLOK PARTS/LABELS

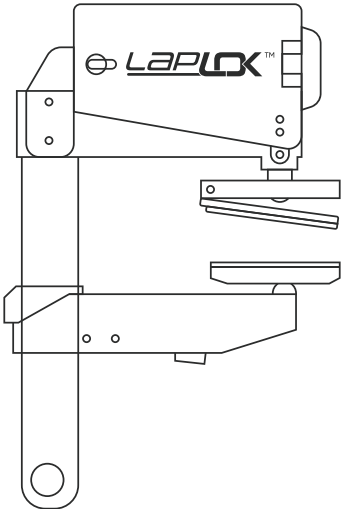


LAPLOK SIDE VIEW


 
 
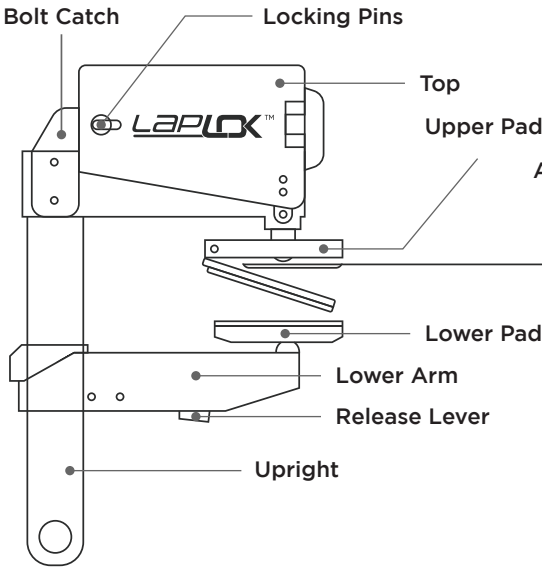


 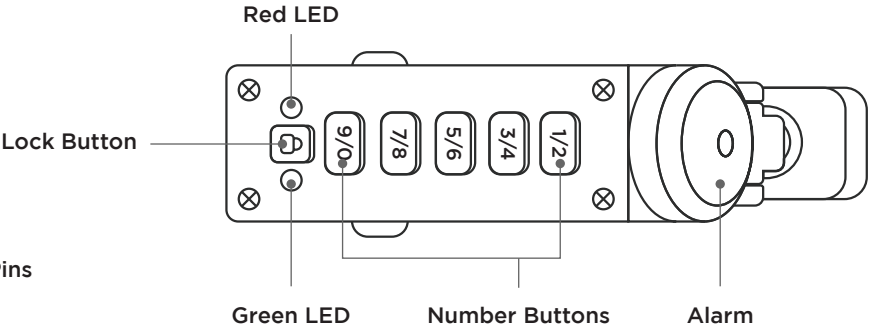



 


LAPLOK TOP VIEW

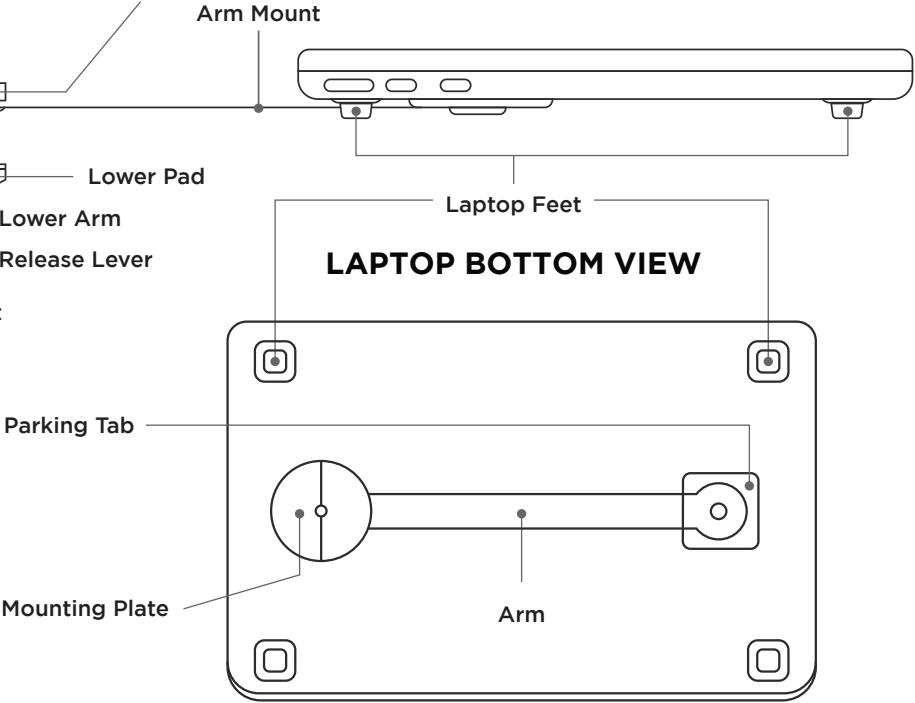

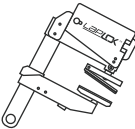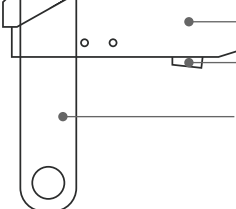LAPTOP BOTTOM VIEW



			
1 pc LapLok	1 pc Arm Mount	1 pc Parking Tab	
			
1 pc Carabiner	1 pc Alcohol Wipe	4 pcs Laptop Rubber Feet	
			
1 pc Primer Ampule	1 pc LapLok Warning Sticker	1 pc Protective Bag	1 pc Adhesive with Nozzle

HOW TO USE YOUR LAPLOK



For complete video instructions scan the QR code



STEP 1: Register Your Lock/Unlock Code

1. Go to <https://reset.LapLok.com/> or scan the QR code to bring you to the registration page.
2. Input your name, e-mail address, phone number, and **5-Digit Device Serial Number** found at the bottom of your **LapLok**.
3. A **4-Digit Verification Code** will be sent to the phone number and e-mail you entered.
4. Enter the **4-Digit Verification Code** into the **LapLok** website's registration page.
5. Choose and enter a **3-5 Digit Lock/Unlock Code** you would like to use with your **LapLok** per instructions on Step 4.
6. Write your **3-5 Digit Lock/Unlock Code** on the inside of the lever.

NOTE: Save your **Lock/Unlock Code** somewhere safe. See "Other Maintenance Tips" for details.



STEP 2: Battery Activation

Batteries are already installed in the **LapLok** you received.

1. Pull back the **Locking Pins** to unlock and raise the **Top**
2. Underneath the **Top**, locate and activate the **Switch**, turning it to the 'ON' position.
3. Close the **LapLok** by pulling back the **Locking Pins**, then release them into the **Bolt Catch**.
4. To test if the **Batteries** are working, press the **Lock Button** once. When you see the **RED LED** blink twice, this indicates that battery is now activated.

NOTE: Under normal use conditions, **Batteries** should last about 5 years. If you need to replace them in the future, kindly refer to the 'Replacing the Batteries' section.



STEP 3: Attach the Mounting Plate, Arm, Parking Tab, and Laptop Rubber Feet

1. Decide where on the bottom of your laptop you would like to attach the **Mounting Plate** so it would be easy to rotate the 8" **Mounting Arm** out to attach it to your **LapLok**. The entire **Mounting Plate and Arm** should lie flat on the bottom of the laptop and should not be on top of any bumps, ridges, vents, or compartments. It should not be placed outside the edge of the laptop. If you aren't sure about the location, try taping it on as a test first.

Tip: For a right-handed person, it is recommended that you place it on the lower left side on the bottom of the laptop, so it is easily accessible from the side.

2. Use the included **Alcohol Wipe** to clean the location where you would like to place the **Mounting Plate**.
3. Squeeze the **Primer Ampule** tube on the black circle that say 'CRUSH' until the glass on the inside breaks and use an applicator to cover the area for **Mounting Plate** installation. Wait 30 seconds for it to dry.

Warning: Do not touch **Primer** with your skin. Do not ingest it. See "Safety Precautions" for details. You will also use the **Alcohol Wipe** and **Primer** for the **Parking Tab**.

4. Peel the paper backing off the **Mounting Plate** then stick onto the primed location, pressing down firmly for 30 seconds. Then wait 24 hours for the adhesive to dry. A complete cure takes 3 days.

NOTE: You can use your laptop during the curing period, but do not apply force on the **Mounting Arm** until fully dry.

Warning: The adhesive is permanent, so try to place it in the correct location the first time.

5. Determine where the **Parking Tab** will hold the end of 8" **Mounting Arm**, clean the area with an **Alcohol Wipe**, use the **Primer** and let it dry, remove paper tape, and glue **Parking Tab** to the laptop to prevent it from rotating when not in use. Press down on it firmly.
6. To install the provided **Rubber Feet**, clean the 4 corners of the laptop with the included **Alcohol Wipe** then apply the **Primer** to the area. Remove the paper backing of the sticker from the **Rubber Feet**, apply small amount of the included **Adhesive**, and press down firmly on the primed location for 30 seconds.

NOTE: This step is optional but adding the **Rubber Feet** will prevent laptop wobble.

7. During the drying period of the attached components, we recommend to consider affixing the **LapLok Warning Sticker** as a theft deterrent warning to the lower right or left-hand corner of your laptop.



STEP 4: Initial Lock/Unlock Code Setting

The default **Lock/Unlock Code** is preset to 1-1-1

1. To change the default **Lock/Unlock Code** to your newly registered **LapLok**, press the **Lock Button** then press 1-1-1. When the **Green LED** blinks 5 times, this indicates that the **LapLok** is unlocked.
2. Press and hold the **Lock Button** for 3 seconds. When you see that the **Green LED** blink twice, this indicates that the **Lock/Unlock Code** can be changed.
3. Within 10 seconds, enter your new registered **Lock/Unlock Code**, then press the **Lock Button**.
4. **Green LED** blinks 3 times for successful **Lock/Unlock code** change.

NOTE: **Red LED** will blink 5 times indicating your **LapLok** is locked. Additionally, the user has 10 seconds to enter their **Lock/Unlock Code**. If the **Lock/Unlock Code** is not entered in that time frame or is incorrect, **Red & Green LEDs** will blink alternately indicating the error.



STEP 5: Lock Your LapLok to a Table

LapLok works on tables up to 2" thick

1. Press the **Release Lever** and move the **Lower Arm** downward on the **Upright** until there is enough room between the **Upper and Lower Pads** to slide it over the edge of the table.
2. Pull back the **Locking Pins** to unlock and raise the **Top**.
3. Slide your **LapLok** over the edge of the table.
4. Slide the **Mounting Arm** into the mouth of the **Upper Pad**.
5. Move the **Lower Arm** upwards on the **Upright** until the **Lower Pad** is tight against the bottom of the table and the **Upright** is firmly against the edge of the table.

NOTE: This step is critical to your **LapLok** being effective in preventing theft.

6. Close the **LapLok** while pulling back the **Locking Pins**, then release the **Locking Pins** into the **Bolt Catch**.
7. Arm your **LapLok** by pressing the **Lock Button** and enter your **Lock/Unlock Code** and the **Red LED** will blink indicating it is armed.

NOTE: Once **LapLok** has been secured to the table, you can use the provided **Carabiner** to fasten your bags onto the hole located at the end of the **Upright**.



STEP 6: Unlock Your LapLok from the Table

1. To unlock your **LapLok**, press the **Lock Button**, enter your **Lock/Unlock Code** and the **Green LED** will blink showing it is unlocked.

NOTE: If the user enters the **Lock/Unlock code** incorrectly, **Red & Green LEDs** will blink alternately indicating the error. After 20 failed unlock attempts, the alarm will sound for 30 seconds.

2. Pull back the **Locking Pin** and lift the **Top**.
3. Press the **Release Lever** and pull the **Lower Arm** down.
4. Pull the **Mounting Arm** out of the mouth of the **Upper Pad**. Your laptop and **LapLok** are now free from the table.

HOW TO ADJUST THE SETTINGS



ADJUSTING THE ALARM VOLUME

A key **LapLok** feature is to detect movement and sound the alarm to deter theft when someone tries to move it. Setting the alarm is an optional setting.

1. Press the **Lock Button** then press and hold the **(1) Button** for 3 seconds. When you see the **Green LED** blink twice, this indicates that you can now adjust the alarm volume.
2. Within 10 seconds, press both **(1/2) Buttons for high**, both **(3/4) Buttons for medium**, both **(5/6) Buttons for low**, or both **(7/8) Buttons for no sound**.
3. **Green LED** will blink twice when successfully changed.

NOTE: If **LapLok** removal is attempted while locked, a 30-second alarm will be triggered & both **LEDs** will blink. Entering your **Lock/Unlock Code** will turn off the alarm and unlock your **LapLok**.



CHANGING THE LOCK/UNLOCK CODE

1. First, ensure your **LapLok** is unarmed, as the **Lock/Unlock Code** can only be changed when unarmed.
2. Press and hold the **Lock Button**. When you see the **Green LED** blink twice, this indicates that the **Lock/Unlock Code** can be changed.
3. Within 10 seconds, enter your new **Lock/Unlock Code**, then press the **Lock Button**.
4. **Green LED** will blink 3 times for successful **Lock/Unlock Code** change. If the change is unsuccessful, the **Red LED** will blink 3 times.
5. Register your new **Lock/Unlock Code** at <https://reset.techlok.com/>.

NOTE: Make sure to save your new **Lock/Unlock Code**. See "Other Maintenance Tips" for details.



FORGOTTEN LAPLOK'S LOCK/UNLOCK CODE

1. Go to <https://reset.LapLok.com/> or scan the QR code in Step 1 to get to the registration page.
2. Log in to your **LapLok** profile.
3. After logging in, you will receive a unique device-specific code to your registered e-mail address or phone number.

NOTE: Unregistered users must first register to log in to their profile. For unregistered users, there will be a 15-minute delay between sending and receiving the device-specific code to reduce the chance of fraud.

4. On your **LapLok**, enter the unique device-specific code you just received.
5. If the unique device-specific code you entered into your **LapLok** matches the code stored at the factory, your **LapLok's Lock/Unlock Code** will reset to 1-1-1. When you see the **Green LED** blink 3 times, that means a successful **Lock/Unlock Code** reset.

NOTE: When the **LapLok** is locked, entering unique device-specific code also unlocks the device.

6. You can now create a new **Lock/Unlock Code** using the instructions in the "Changing the Lock/Unlock Code" section.

TROUBLESHOOTING & CARE OF YOUR LAPLOK



REMOVING THE MOUNTING PLATE AND ARM

1. To remove the **Mounting Plate and Arm**, use a butter knife, single-edge razor blade, or similar tool as a lever to pry them off. This design is intended to prevent theft.
2. Do the same to remove the **Parking Tab**.



REPLACING THE BATTERIES

LapLok uses two **CR 2032 Batteries** that should last about five years in normal use conditions. We estimate normal usage to be three hours per week with the siren sounding 2 times a year. The usage of **LapLok** will determine the longevity of the **Battery** life.

When your **LapLok** needs new **Batteries**, the **Red LED** will blink 5 times. The **Batteries** will last about two weeks before they become too weak to arm your **LapLok**.

1. To replace the **Batteries**, unscrew the four **Screws** on the top, lift the **Top**, and unscrew the **Screw** on the bottom near the **Switch** at the bottom.
2. Open the **Top** and carefully remove the old **Batteries** and put in new ones.
3. Put the **Top** back to the **LapLok** and re-insert all the **Screws**.
4. To test if the batteries are working, reactivate your **LapLok** by activating the **Switch** on then press the **Lock Button** once. The **Red LED** will blink twice if the battery replacement was successful.
5. If they are not, ensure that the new **Batteries** were correctly inserted.