

WALL MOUNTED STEREO

Item No. 210332

User Guide

Thank you for purchasing the Wall Mounted Stereo. Please read this manual thoroughly before operating this device.

SAFETY INFORMATION

- Always read the safety instructions carefully and keep this user manual for future reference.
- Place this equipment on a reliable, flat surface before setting it up.
- When using the power plug as the disconnect device, ensure it remains easily accessible.
- Do not expose the device to dripping or splashing liquids, and do not place objects filled with liquids, such as vases, on the device.
- Do not expose batteries [battery pack or installed batteries] to excessive heat, such as direct sunlight or fire.

WARNING

- To prevent the risk of electric shock, do not open the cover or back of the device.
- Do not block the ventilation holes. Ensure there is adequate space above and around the device for proper ventilation.
- Do not place the device in an unventilated cabinet or on top of a unit that emits heat.

LASER SAFETY INFORMATION

This player employs a Class 1 laser system. Please follow these instructions to ensure safe operation:

- 1. Shut Down:** Ensure the device is turned off before opening the player lid.
 - 2. Do Not Open:** Do not attempt to open or dismantle the device.
 - 3. Service:** To avoid any danger, have service work performed only by the manufacturer or an authorized service workshop.
 - 4. Laser Radiation:** Be aware that visible laser radiation is present when the device is open.
 - 5. Remote Controls and Adjustments:** Use only the specified remote controls and follow the procedures outlined in this manual to avoid hazardous radiation exposure.
- By adhering to these safety instructions, you can operate the laser system safely and prevent any potential risks associated with laser radiation.

Front View



- Play/Pause []:

- ### B. LCD and Remote Sensor


Side View



C. Earphone Jack

- **AUX-IN Jack:** This is a 3.5 mm auxiliary input jack used to connect external audio devices.
- **FM Antenna** []: Used to receive audio signals for the FM radio mode.

D. DC Power Socket

- DC 5V 2A Power Socket []: Connect the unit to a DC power supply using this socket.

E. USB Interface

- USB Interface []: Connect USB storage devices to play media files directly.

These descriptions provide detailed information on the various ports and connections available on the device, ensuring proper usage and setup


INSTALLATION

For Tabletop Use

1. **Attach the Stand:** Ensure the stand is securely attached to the main unit for stable tabletop use.

For Wall Mounting

1. **Remove the Stand:** Detach the stand from the main unit.
2. **Mark the Wall:** Ensure the marks on the wall are level before drilling.
3. **Drill Holes:** Drill holes at the marked points.
4. **Follow the Illustration:** Refer to the illustration below for correct placement and mounting instructions.

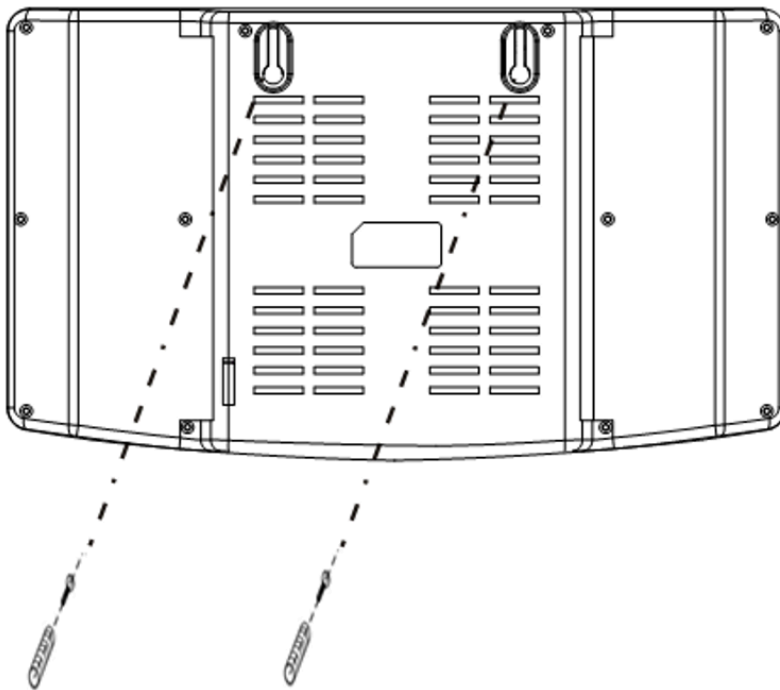

By following these steps, you can safely and securely install the unit on a tabletop or mount it on the wall.

REMOTE CONTROL INSTRUCTIONS



BUTTON FUNCTIONS

- **Power** []: Press to turn the unit on or off.
- **Play/Pause** [/AUTO]:
 - Media Play Mode: Press to play or pause playback.
 - Tuner Mode: Press to start auto searching for stations.
- **Stop** []: Press to stop playback in media play mode.
- **Memory** [REM]: In FM radio mode, press to store the current station into memory.
- **Previous/Channel Down** [CH-]:
 - Media Play Mode: Press briefly to skip to the previous track.
 - FM Radio Mode: Press to select the previous channel.
- **Next Track/Channel Up** [CH+]:
 - Media Play Mode: Press briefly to skip to the next track.
 - FM Radio Mode: Press to select the next channel.
- **Equalizer** [EQ]: Press to turn on the equalization function and select the desired audio mode.
- **Tune Down** [TUN-]:
 - FM Radio Mode: Press briefly to step down frequency. Press and hold to seek the previous frequency automatically.
- **Tune Up** [TUN+]:
 - FM Radio Mode: Press briefly to step up frequency. Press and hold to seek the next frequency automatically.
- **Numeric Buttons** [1-5+]: Press to input numbers to select a track or channel.
- **Mute** [MUTE]: Press to mute or resume the sound.
- **Volume** [VOL+/VOL-]: Press to adjust the volume level.
- **Random** [RAN]: In CD mode, press to play tracks in random order.
- **Repeat** [REPEAT]: In media play mode, press to select repeat options [repeat one, repeat folder, repeat all].
- **Mode** [MODE]: Press to switch between different modes such as CD, USB, AUX, FM radio and Bluetooth.

INSERTING THE BATTERY

1. **Open the Battery Compartment Cover:** Locate the battery compartment on the remote control and open the cover.
2. **Insert the Battery:** Insert a new button cell lithium battery [CR2025, not included] ensuring the positive [+] and negative [-] poles are correctly aligned.
3. **Close the Cover:** Securely close the battery compartment cover.

USING THE REMOTE CONTROL



- **Best Results:** Point the remote control towards the signal receiver on the front panel of the player.
- **Distance and Angle:** Maintain a distance within 5 meters and an angle of 60 degrees or less for optimal performance.
- **Storage:** Remove the battery if you are storing the remote or not using the player for an extended period.

By following these instructions, you can effectively use and maintain your remote control for optimal performance and longevity.

NOTE: Low batteries can leak and cause damage to the remote control. Remove the battery from the battery compartment as soon as it is low. If the remote control is not going to be used for a long period of time, remove the battery to prevent leakage and damage.

BASIC OPERATION

Switching On/Off the Unit

- **Turn On:** Press the power button  on the player or the remote control.
- **Turn Off:** Press the power button  again to turn the unit off.

MUTE

- **Mute Sound:** Press the **MUTE** button to mute the sound instantly.
- **Resume Sound:** Press the **MUTE** button again to resume the sound.

VOLUME ADJUSTMENT

- **Increase/Decrease Volume:** Press the **VOL-/VOL+** buttons on the remote control or the player to adjust the volume level.

EQUALIZATION

- **Activate Equalization:** Press the EQ button on the remote control to turn on the equalization function and select the desired audio mode.

→ POP → ROCK → CLASS → FLAT → JAZZ → VOCAL → OFF

FUNCTION MODE SELECTION

- **Select Mode:** Press the **MODE** button on the player or the remote control to choose between CD, USB, AUX, FM radio and Bluetooth modes.

AUXILIARY INPUT




- **Connect External Audio:** Use the AUX-IN jack on the back of the unit to connect a portable audio player.
- **Select AUX Mode:** Press the **MODE** button to switch to AUX mode.

TUNER OPERATION

Switching to Tuner Mode

- **Select Tuner Mode:** Press the **MODE** button to select the tuner mode. If using the radio for the first time, you will need to search for FM radio stations.

Auto Searching

- **Start Auto Search:** Press and hold the auto-search button  to automatically search for radio stations. The search will stop after one complete cycle. You can press the stop  searching.
- **Half-Auto Search:** Press and hold the  buttons to search for radio stations half-automatically.

Manual Searching

- **Adjust Frequency:** Press the  buttons once to manually adjust the frequency step by step.

Selecting Channel

- **Change Channel:** Press the CH+/CH- buttons on the remote control to move up or down through the channels.
- **Direct Selection:** Use the numeric buttons [0-5] to input the station number directly.

Store Into Memory



- **Store Station:** Press the REM button to store a station. Use the  buttons to select and store the station in memory.

CD/MP3 OPERATION

Switch to CD Mode

- **Insert Disc:** Press PUSH to open the disc cover, place the CD/MP3 disc with the printed side up, and close the cover.
- **Select CD Mode:** Press the MODE button to select CD mode.

Select Tracks

- **Skip Tracks:** Press the   buttons to skip to the previous or next track. The track number will be displayed.

Pause Playing

- **Pause:** Press the play/pause button  to pause playback. Press it again to resume.

Stop Playing

- **Stop:** Press the stop button  to stop playback. Press  to start from the beginning.

USB OPERATION

Playing from USB

- **Connect USB:** Insert the USB drive into the USB port on the left side of the main unit.
- **Select USB Mode:** Press the MODE button to select USB mode. A contents menu will be displayed and playback will start automatically. Select a file to play if it does not start automatically.

Note: The maximum current for the USB port is 500 mA. If the USB consumption exceeds 500 mA, the product will enter a protective status and the USB device will stop working.

BLUETOOTH OPERATION

1. **Select Bluetooth Mode:** Press the MODE button to select Bluetooth mode.
2. **Pair Device:** Use your Bluetooth device to scan and pair with the player. The pair name is MC-605.
3. **Play Music:** Play your desired music from your Bluetooth device.

By following these basic operations, you can effectively use and enjoy all the features of your unit.

WARRANTY AND CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.