

# SHARPER IMAGE®

## ULTRASONIC JEWELRY CLEANER BY SHARPER IMAGE

Item No. 210333

### User Guide

Thank you for purchasing the Ultrasonic Jewelry Cleaner. Please read this manual thoroughly before operating this device.

## FEATURES

- Professional-grade ultrasonic jewelry cleaning for the home
- Large 25-oz. [750ml] tank capacity
- Powerful 42,000Hz energy-producing sound waves per second
- Digital timer
- Auto shut-off
- 5 cleaning cycles: 90, 180, 280, 380, and 480 seconds
- Safely cleans most jewelry using tap water
- Bright blue LED illuminated stainless steel tank
- Auto-opening transparent evaporation-free cover
- Quiet solid-state circuitry
- Elegant black European contoured design with chrome accents
- Includes removable basket and bracelet/watch holder
- 50/60HZ

## INSTRUCTIONS

### Operation

#### 1. Unpack:

- Unpack the Ultrasonic Jewelry Cleaner, basket, and bracelet/watch holder from the box and plastic wrapping.

#### 2. Connect to Power:

- Connect to an electrical power source. Do NOT turn on the Ultrasonic Jewelry Cleaner unless you have first filled up the tank with water.

#### 3. Fill the Tank:

- Open the transparent cover by pressing the crescent-shaped gray button above the LED digital display.
- Add the appropriate amount of water. Fill the solution to the MAX fill line marked on the rear center portion of the stainless-steel tank wall.
- **Do NOT** allow the water to evaporate below this level or fill the tank above this level, as damage may occur and the warranty will become void.
- For tougher stains, dirt, and grease, add a SparklePak to the water [sold separately at [SharperImage.com](http://SharperImage.com)]. You may also add a small amount of dishwashing soap with degreasing agent.

#### 4. Add Jewelry:

- Before cleaning jewelry, read the section “What May & May Not Be Cleaned in an Ultrasonic Jewelry Cleaner”.
- Place the item to be cleaned in the supplied basket and then submerge it in the tank and close the cover.
- If small items such as diamond ear studs, charms, or small pieces of jewelry require cleaning, use a household stainless steel tea strainer or fine mesh stainless steel basket to hold these items safely during the cleaning process. Place the tea strainer in the supplied basket.
- **Do NOT** place items directly on the tank bottom to avoid damage to the transducer, which could void the warranty. Dents and scars on the tank’s bottom indicate items were placed inappropriately in the tank without a basket.

#### 5. Start Cleaning:

- Press the **POWER** button to start the cleaning process.
- Use the **TIMER** button to scroll through the five cleaning cycle times: 90, 180, 280, 380, or 480 seconds.
- Once the cleaning cycle ends, the Ultrasonic Jewelry Cleaner will automatically shut off.
- For items that require additional cleaning, leave them in the basket within the tank and repeat the process.
- After cleaning, rinse the item with water to remove any remaining solution (as it may irritate your skin) and to dislodge/remove any loosened dirt from its surface.
- **DO NOT** place fingers or other body parts in the tank while the Ultrasonic Jewelry Cleaner is operating.

### IMPORTANT NOTES

#### Read This Section Before Cleaning Jewelry

- **Do NOT** use flammable liquids, ammonia, or acid/water mixtures in the ultrasonic tank.
- Avoid placing items directly on the tank bottom to prevent damage to the transducer.
- Dents and scars on the tank’s bottom indicate inappropriate use.

#### What May or May Not Be Cleaned in an Ultrasonic Jewelry Cleaner

- **Safe for Ultrasonic Cleaning:** Items such as gold, silver, platinum, diamonds, rubies, sapphires, amethyst, citrine, etc., are generally safe for ultrasonic cleaning.
- **Caution:**
  - Do not clean stones that may have many inclusions (e.g., emeralds) because the ultrasonic waves, heat, or sudden temperature changes may crack the stone.
  - Avoid cleaning soft, water-porous stones (e.g., pearls, opals, turquoise, amber, ivory) as they may be damaged.
  - For more specific information on which stones are suitable for ultrasonic cleaning, contact a professional jeweler, gemologist, or The Gemological Institute of America [GIA].

## WATCHES

- **Do Not Submerge:** Do not submerge watches in the Ultrasonic Jewelry Cleaner, as this may damage the watch.
- **Cleaning Watchbands:**
  - Use the included holder to clean metal watchbands. Place the holder in the basket to prevent the band from touching the tank's bottom.
  - Watches should be placed on the holder with the head/movement of the watch suspended above the water to prevent potential damage due to a possible poor water seal or gasket.
  - Never place a non-waterproof watch in water or in the device. Only place the metal band of the watch in the water.
  - Always ensure the watch's stem is fully inserted and/or screwed all the way in before attempting this.

## CLEANING THE TANK AND SOLUTION

- Clean the tank and change the solution regularly, but only after first unplugging the Ultrasonic Jewelry Cleaner to avoid potential electrocution.
- **Steps:**
  - With the device unplugged, remove the basket from the tank.
  - Carefully pour out the old solution.
  - Wash all dirt and residue from the tank's bottom with clean water and a non-ammoniated, non-acidic cleaning solution or stainless-steel cleaner and a paper towel.
  - Rinse the tank with clean water without overflowing other parts of the machine.
  - Wipe off the remaining cleaning solution with clean water.

## OUTER SHELL CLEANING

- The outer shell can be cleaned using a non-ammoniated, non-acidic, non-abrasive cleaning solution and a paper towel.
- After cleaning, wipe off the remaining solution with clean water.
- Avoid placing too much cleaning solution on the outer shell to prevent it from seeping into the electronics.
- **Warning: Do NOT** submerge the Ultrasonic Jewelry Cleaner into water as it may damage the electronics and void the warranty.

## WARRANTY AND CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.