

HEATED PERSONAL MASSAGER

Item No. 210417

User Guide

Thank you for purchasing the Heated Personal Massager. Please read this manual thoroughly before operating this device.

WARNING!

Proper maintenance and care can extend the life of this product. Please read the safety instructions before using it.

1. Before Use:

o Clean and disinfect the product using antibacterial soap or cleaning liquids with warm water. Dry it with a towel or soft cloth.

2. During Use:

o Do not use massage oil or hand cream with this product.
o Do not use silicone-based lubricants with this product as they can damage the silicone surface.

SAFETY INFORMATION

- This product contains small components that could be harmful to children. Keep it away from children to prevent choking hazards.
- Users cannot change or modify any components of the product. Only an authorized distributor or maintenance center can make changes. If you need to replace any parts due to normal wear or damage, contact your local distributor.
- Do not use the product in areas such as hospitals or airplanes, where it could interfere with electronic equipment or radio frequency-emitting products.

CARE INSTRUCTIONS

- Do not clean the product with alcohol, gas, acetone, or other harsh chemicals. Avoid direct sunlight or exposure to high temperatures. Store the product in a cool, dry place and do not store it with other plastic products.

BATTERY MAINTENANCE

- The product has a built-in rechargeable battery. Charge it fully after use. Avoid overcharging, as this can reduce battery life. Charge the battery before storing the product.
- Using the product in very hot or cold environments can reduce battery life and overall performance. If the battery is too hot or cold, allow it to return to room temperature before charging.

BATTERY WARNING

- **Caution:** Incorrect handling of the battery can cause fire, chemical burns, or even explosions. A damaged battery poses a serious risk.
 - Please dispose of the battery according to local laws. Recycle whenever possible. Do not attempt to remove or replace the battery yourself, as this can cause hazards and damage the product.
- NOTE:** Check the user guide for light indicators. Some vibrators cannot be used while charging.

SPECIFICATIONS

Material: ABS + Silicone

Battery Capacity: 800mAh

Usage Time: 2 Hours

Noise: <50dB

Waterproof: IPX7

Recharge Time: 2 Hours

OPERATION

Vibration Modes [8 total]

1. Normal [1-3]
2. Enthusiasm Mode
3. Shaking Mode
4. Pleasure Mode
5. Passion Mode
6. Climax Mode

BUTTON FUNCTION



- **Power On/Off:** Long press 
- **Warming On/Off:** Short press 
- **Change Vibration Mode:** Short press 
- **Increase Vibration:** Short press 
- **Decrease Vibration:** Short press 

LIGHT INDICATORS

- **Power On:** Light on
- **Working:** Light on continuously
- **Power Off:** Light off
- **Charging:** Light blinking
- **Fully Charged:** Light is solid and stays on

CLEANING AND MAINTENANCE

1. Turn Off and Unplug: Ensure the massager is turned off and unplugged from any power source before cleaning.

2. Wash with Water: Rinse under warm, running water. Use a mild, non-abrasive soap to gently clean the surface. Avoid submerging the device if it's not designed for water contact.

3. Rinse Thoroughly: Make sure all soap is rinsed off completely to avoid any residue.

4. Dry Completely: Pat the massager dry with a clean, soft towel. Allow it to air dry completely before storing. Ensure it is fully dry to prevent any moisture damage.

5. Store Safely: Once dry, store the massager in a clean, dry place.

WARRANTY / CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.