



Instructions For Inflatable Crazy Sports Fan

Important: Please read all instructions carefully before using this product.

Caution: Do not attempt to inflate during unusually strong wind. If it becomes too windy for safe operation, simply allow your inflatable to deflate, secure it, and wait for better condition.

Caution: Electricity and water are a bad combination. Protect the electric fan and power cord from exposure to water.
If the external flexible cable or cord is damaged, please do not use it.
The repair of the damaged main connection cable is only allowed by a qualified technician.

Warning:

Remove unit completely from package before connection to power supply.
This item is designed to be safely used in winter weather and will operate under normal exposure to rain and or snow. However, the product should not be used under any conditions that could lead to it being completely submersed under water.

Instructions:

1. Remove contents from packaging.
2. Place inflatable in a clean, open area, free from obstruction or other debris.
3. Roll out fabric and lay out the contents.
4. Make sure the air intake located on the bottom of unit is clear and free of obstruction.
5. Make sure the black pedestal is placed on the flat ground.
6. Connect motor plug to power supply.
7. Press the Power button on the black pedestal to turn on the motor.
8. To deflate, simply press power button on pedestal to turn off motor then unplug from the electrical outlet .

Trouble shooting checklist!

If the motor is not working, the problem may be...

The power source is interrupted or the cord may be unplugged.

Debris may be lodged in the motor.

Ensure the Power button is pressed after plugging to electricity supply.

Cleaning, Storage and maintenance instruction:

Only use mild detergent with cold water to wipe the figure clean.

Leave inflated until completely dry.

Unplug, roll up and store in original package or similar size box.

Do not clean the motor with any liquids, use a dry cloth only.

This unit is not intended for use by children.



Environmental Protection

Discarded electric appliances are recyclable and should not be discarded in the domestic waste!
Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centers (if available)

⚠ WARNING

Electrically operated product. This is not a toy. Set up by adult only and adult supervision required as with all electric products. Precaution should be observed during handling and use to prevent electric shock. Never allow children to play with or jump on product.

⚠ WARNING

This product may contain chemicals known to the State of California to cause Cancer and Birth defects or other reproductive harm.
For more information, go to:
<https://www.p65warnings.ca.gov/>

⚠ WARNING

Remove all plastic fasteners and tags. These are part of the packaging and should be discarded. This item is not a toy and should be used for decoration purposes only. Detailed instruction sheet included.

