

# SHARPER IMAGE®

## VIBRATING ARTHRITIS GLOVES BY SHARPER IMAGE

Item No. 210438

### USER GUIDE

Thank you for purchasing the Vibrating Arthritis Gloves by Sharper Image. Please read this manual thoroughly before operating this device.

## WARNINGS AND IMPORTANT SAFETY INSTRUCTIONS

Please read all safety instructions before using this device and follow them carefully during use.

### 1. Who Should Not Use This Device

- o Individuals with contagious skin conditions.
- o Patients with osteoporosis.
- o Patients with heart conditions or those with active implants such as a pacemaker.
- o Individuals with a high fever.
- o Pregnant or menstruating women.
- o Children under 8 years old, or individuals with reduced physical, sensory, or mental capabilities, unless they are supervised.
- o Individuals experiencing symptoms like inflammation, blood stasis, or who have recently undergone hand surgery.

### 2. Before Using the Device

- o Read the manual thoroughly.
- o Do not use the device in wet environments, such as near a filled bathtub or a running shower.
- o Avoid using the device immediately after a sharp change in environmental temperature.
- o Do not use the device while driving.
- o Do not use the device if any parts are damaged.
- o If the device is broken, avoid touching any internal components to prevent electric shock.
- o Do not use the device if you are under the influence of alcohol or feeling unwell.

## BUTTON FUNCTIONS

### • Power Button

- o Long Press: Press and hold to turn the device on or off.
- o Short Press: Press briefly to switch between the three vibration modes:
  - **Mode 1:** Green light [default when powered on].
  - **Mode 2:** Blue light.
  - **Mode 3:** Red light.
- o The modes cycle in sequence with each short press.

### • Heating Button

- o The device has three heating levels:
  - **Level 1:** Green light [default when powered on].
  - **Level 2:** Blue light.
  - **Level 3:** Red light.
- o The heating levels cycle in sequence with each short press.

### • Phone Use

- o The tips of the thumb and index finger are touch-sensitive, allowing you to use your mobile phone while wearing the device.



## CHARGING

- When the battery is low, the light will blink slowly.
- During charging, the power button will blink red slowly.
- When fully charged, the light will turn solid blue.

## SPECIFICATIONS

- |                       |            |
|-----------------------|------------|
| · Charging Interface: | Type-C     |
| · Input Voltage:      | 5V, 2A     |
| · Rated Power:        | 10W        |
| · Battery Capacity:   | 800mAh     |
| · Timer:              | 30 minutes |

## STORAGE AND MAINTENANCE

- Keep the product clean and store it in a dry, cool place, away from high humidity, high temperatures, or volatile gases.
- Protect the product from moisture, rodents, and dirt; do not place heavy objects on it.
- If the product malfunctions, seek help from a professional technician. Do not attempt to disassemble the product yourself.

## WARRANTY AND CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.