

# INFLATABLE BUMPER BALLS [SET OF 2]

Item No. 210457

## User Guide

Thank you for purchasing the Inflatable Bumper Balls [Set of 2]. Please read this manual thoroughly before operating this device.

### SAFETY WARNING

- Only allow one person inside each Bumper Ball.
- Keep harmful objects away from the user.
- Misuse and abuse of the Bumper Ball can cause injuries and are dangerous.
- Children should only use the Bumper Ball with knowledgeable adult supervision.
- Wear comfortable clothing. Remove jewelry and any sharp objects.
- Use only when the surface of the Bumper Ball is dry. The item may be slippery when wet. Deflate the Bumper Ball and store it indoors during inclement weather.
- Prevent unauthorized use by properly securing the Bumper Ball when not in use.
- Ensure that proper air pressure is maintained while the Bumper Balls are in use. Check the air pressure frequently on hot and cold days.
- Do not use when temperatures are below 50°F. Do not use on ice or snow.
- Bumper Balls are not for commercial use.
- Bumper Balls are not an aquatic toy. It is not intended to be a lifesaving or flotation device.
- Keep away from open flames.

### LIABILITY

While every attempt is made to embody the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

### INCLUDES

- 2 Bumper Balls
- Vinyl Plastic Repair Kit

## **INFLATION INSTRUCTIONS**

1. Bumper Balls must be at room temperature before inflating. Otherwise, it is at risk of temperature shock and can become defective.
2. A hand, electric, or foot pump is recommended for inflation. These can be purchased separately. Do not overinflate.
3. Do not inflate with an air compressor or any high-pressure hose at a filling station.
4. Please ensure the air valve is securely pushed in after inflating.

## **VINYL PLASTIC REPAIR**

A vinyl plastic repair kit is included with your inflatable. To use:

1. Thoroughly clean the damaged area and allow the surface to dry for a minimum of 10 minutes.
2. Cut a patch large enough to completely cover the hole or puncture.
3. Remove the paper backing from the patch and press it firmly over the affected area.
4. Do not inflate for 20 minutes after applying the patch.

## **WARRANTY AND CUSTOMER SERVICE**

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.