

# HANDHELD ELECTRIC POWER SCRUBBER

Item No. 210470

## User Guide

Thank you for purchasing the Handheld Electric Power Scrubber. Please read this manual thoroughly before operating this device.


## SPECIFICATIONS

<b>Input Voltage:</b>	5V-2A
<b>Output Power:</b>	80W
<b>Battery Capacity:</b>	7.4V/2000mAH
<b>Speed Range:</b>	2 gears
<b>Speed:</b>	Low grade: 280-300 RPM; High grade: 300-320 RPM
<b>Charging Time:</b>	2.5 hours

## WHATS INCLUDED


- 1 x Electric Cleaning Brush
- 1 x Conical Brush
- 1 x Polishing Sponge
- 1 x Flat Brush
- 1 x Cleaning Cloth
- 1 x Fitting Base
- 1 x Diamond Cleaning Cloth
- 1 x USB Charging Cable

## PARTS DESCRIPTION

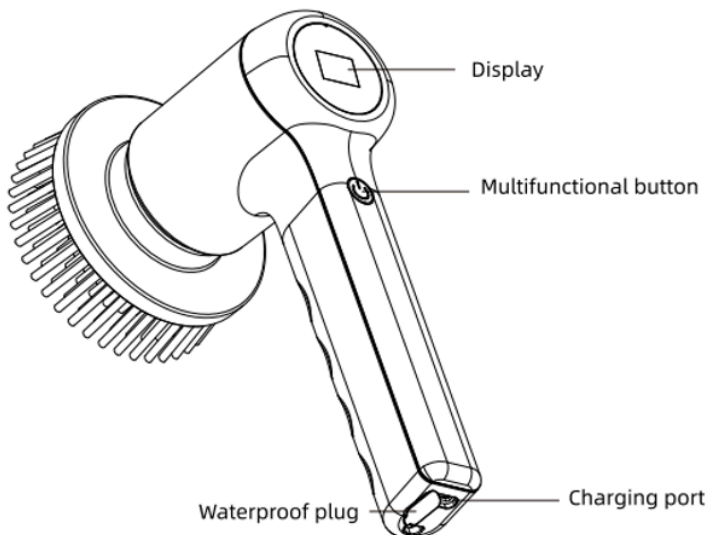

## BRUSH HEAD INSTALLATION

The Handheld Electric Power Scrubber's design is simple, featuring an easy-to-use buckle system for installing and removing the brush head. Align each brush head with the buckle, gently press it, and listen for a "click" to confirm that it is securely in place. To remove the brush head, simply pull it out with light force.

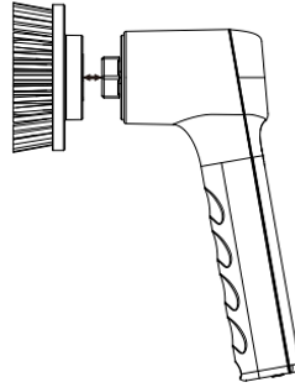

### Note:

1. Polishing sponges, cleaning cloths, and emery pads are consumable items designed for easy installation and removal using a Velcro method. Customers can easily replace them with a new brush head when necessary.
2. Slight deformation of the corner pointed brush is a common occurrence, typically caused by compression during transportation. This deformation will naturally correct itself after the brush is used or left to rest for some time.

## OPERATING INSTRUCTIONS

The Handheld Electric Power Scrubber is designed for one-button operation:

1. Press the button once to start the machine and enter gear 1 [low speed], with a speed of 280-300 rpm/min.
2. Press the button again to enter gear 2 [high speed], with a speed of 300-320 rpm/min.
3. Press and hold the button for the third time to power off the machine.

**Tips:** *If the brush head is pressed too hard, it will stop rotating to prevent damage. Once the pressure is released, the Handheld Electric Power Scrubber will automatically resume operation. During use, avoid pressing too hard to prevent blockages and extend the machine's lifespan.*

## INDICATOR LIGHT DESCRIPTION

- At low speed [gear 1], the indicator light rotates slowly.
- At high speed [gear 2], the indicator light rotates quickly.
- During charging, the power number flashes.
- Once fully charged, the battery percentage is always on, and the charging icon stops flashing.

## **PRECAUTIONS**

- During the cleaning process, avoid pressing too hard to prevent the machine from overloading and triggering shutdown protection.
- This product is IPX7 waterproof and can be washed entirely. However, when using it in or near water, ensure that the waterproof plug on the rear USB interface is securely closed to prevent water from entering and damaging the product.
- For optimal cleaning results, use detergent before starting the cleaning process to achieve a more efficient and faster cleaning effect.

## **WARRANTY / CUSTOMER SERVICE**

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.