


VINTAGE BLUETOOTH CD PLAYER

Item No. 210474


User Guide

Thank you for purchasing the Vintage Bluetooth CD Player. Please read this manual thoroughly before operating this device.

FUNCTIONS

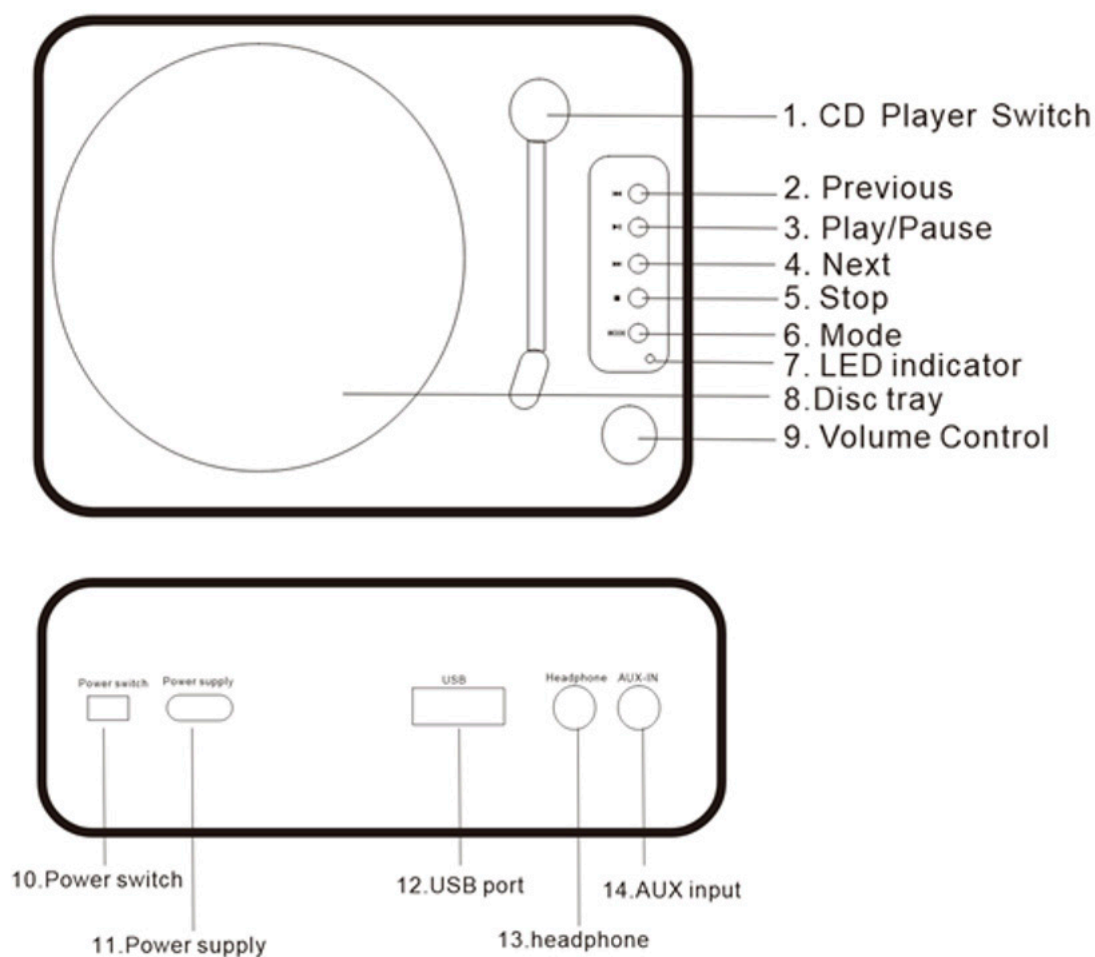

REMOTE CONTROL FUNCTIONS

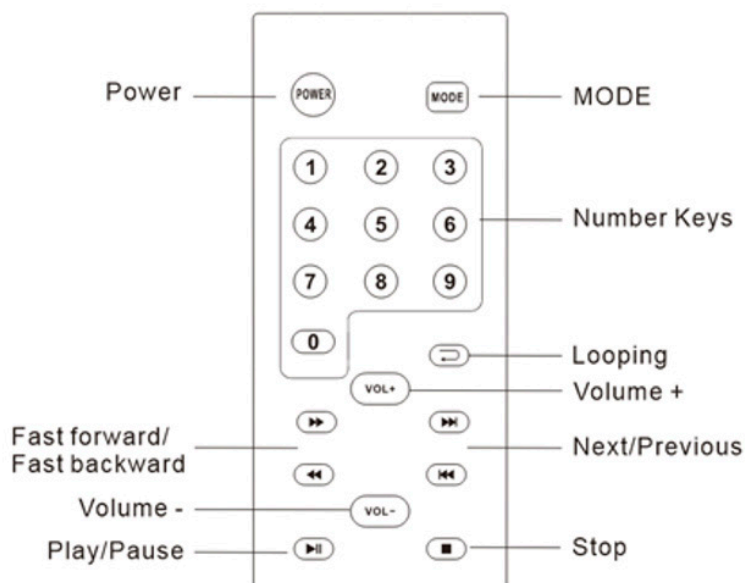

SPECIFICATIONS

Power Output: 2x3W

Power Supply: USB Type-C DC 5V, 2A

INSTRUCTIONS

Switching On/Off the Unit

Press the power button on the rear to turn the unit on or off.

Mute

Press the MUTE button to mute the sound instantly. Press it again to resume the sound.

Volume Adjustment



Use the VOL- and VOL+ buttons on the remote control or the player to adjust the volume level.

Function Mode Selection

Press the MODE button on the player or remote control to select a mode: CD, Bluetooth/USB, or AUX-IN. The LED indicator colors are:

- Green for CD mode
- Red for Bluetooth/USB mode
- Yellow for AUX-IN mode

Select Tracks

Press the  button to skip to the previous track or the  button to skip to the next track. The track number will be displayed.

Pause Playing

Press the  button on the player or remote control to pause playback. Press it again to resume.

Stop Playing

Press the  button to stop playback. Press the  to start playing from the beginning.

CD Operation

1. Place the CD/MP3 disc in the disc compartment with the printed side up.
2. Close the disc cover.
3. Press the MODE button to select CD mode.
4. Turn the CD player switch to ON. The disc will start playing automatically.

Bluetooth Operation

1. Press the MODE button to select Bluetooth mode.
2. Use your Bluetooth device to scan and pair with the player [pair name: MC-610].
3. Play your desired music from your Bluetooth device.

USB Operation

1. While in CD mode, plug in your USB device.
2. The player will automatically play MP3 music from the USB device.

Auxiliary Input

1. Connect a portable audio player to the AUX-IN jack on the back of the unit.
2. Press the MODE button on the player or remote control to switch to AUX mode.

WARRANTY / CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.