



## **USER'S MANUAL**

### **Portable Blender ES10060US**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway**



# Contact Us!

## **Do NOT return this item.**

Contact our friendly customer service department for help first.



# Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

# IMPORTANT SAFEGUARDS

**When using this or any other electrical appliance,  
always follow these basic safety precautions**

- Read All Instructions before using this blender.
  - Don't operate the blender if the blender isn't assembled completely.
  - To protect against risk of electric shock, do not put cord, plug, or base in water or other liquids.
  - Close supervision is necessary when any appliance is used by or near children.
- Unplug the power cord from outlet when not in use, before putting on or taking off parts and before cleaning.
- Avoid contacting moving parts.
  - Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact our customer service for information on examination, electrical repair, mechanical repair, or adjustment.
  - The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.

- Do not blend hot liquids.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces including stove.
- Keep hands and utensils away from moving blades while processing food to reduce the risk of severe injury to persons or damage to the food chopper. A scraper may be used but only can be used when the food chopper is not running.
- Blades are sharp. Handle carefully.
- This appliance is intended for processing small quantities of food for immediate consumption. This appliance is not intended to prepare large quantities of food at one time.
- To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
- Be sure cover is securely locked in place before operating appliance.
- Do not attempt to defeat the cover interlock

mechanism.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- This appliance shall not be used by children. Keep the appliance and its cord away from children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children must not play with the appliance. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.


**CAUTION**
**To reduce the risk of personal injury  
and/or product/property damage**

- This product is intended solely for indoor, non-commercial, non-industrial use in processing liquids and foods for human consumption; do not use the product outdoor or for any other purpose.
- Always operate the product with the Blade Assembly in place.
- Do not attempt to place the Jar on the Base or

 
remove the Jar from the base while the motor is running.

- To disconnect the product from an electrical outlet, pull directly on the plug; do not pull on the Power Cord.
- Do not put any stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.
- If using an extension cord with this product, the

marked electrical rating of the cord set must be at least as the same as the electrical rating of the product.

- Always operate the product on a flat, level, stable surface.
- Do not allow the Power Cord to hang, such as over the edge of a table or counter, in case it may be tripped over or pulled.

## What's included

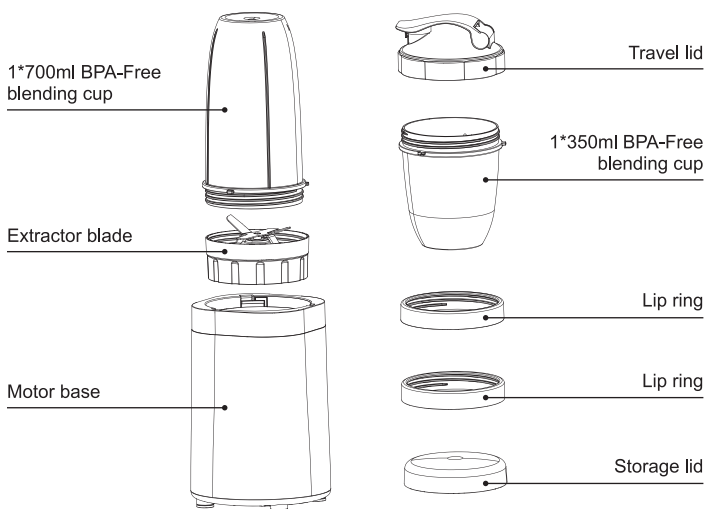

# Assembly Guide

1. Review all warning and caution statements in the important Safeguards section before proceeding to step 2.

2. Place the motor base on a clean, dry, level surface such as a counter or table.

 
 
3. Add ingredients and liquids to the cup.  
NOTE: Do not overfill! To avoid leakage, do not add ingredients beyond the MAX line.

4. Place the extractor blade onto the cup and twist until it's tightly sealed.


5. Plug the power into an electrical outlet.

6. Turn the cup upside down and place it onto the motor base, gently push and twist.

7. Unlock the assembly by gently pushing and untwisting the cup counterclockwise.  
NOTE: blending should not require longer than one minute to yield smooth and creamy results.

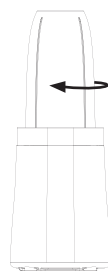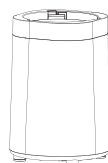

Clockwise

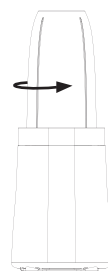 

Counterclockwise

### Caution

1. Do not remove the extractor blade from the cup until blending has completely ceased.
2. Do not use the extractor blade as a storage lid for your cup. Some foods may contain active ingredients or release gases that will expand if left in a sealed container, resulting in excessive pressure that can pose a risk of injury. When storing
3. Contents in the cup, use plastic wrap or foil to seal your container. Always point contents away from your body when unsealing.

### Clean Guide

1. The most important thing -ALWAYS UNPLUG the motor base from the power supply outlet when it is left unattended, before assembling , disassembling, changing accessories or approaching parts that move in use or when cleaning. Do not attempt to handle the appliance until all parts have stopped moving.
2. Remove the cup/extractor blade assembly from the motor base.
3. Clean the individual components( motor base, extractor blades, cups, lid rings).

### Motor base

- For the most part, the motor base doesn't really get dirty, please use a sponge or dish cloth dampened with warm soapy water to wipe down the inside and outside of the motor base until clean.
- To avoid risk of injury, NEVER use your hands or utensils to clean the white actuator Tabs while the blender is plugged in.
- Do not remove the rubber or plastic liners inside the motor base.

### Electrical Specifications

|                            |                                    |
|----------------------------|------------------------------------|
| <b>Max Voltage:</b> 120V~  | <b>Operating Time:</b> KB=2min     |
| <b>Frequency:</b> 60 Hz    | <b>Rest period:</b> Blender: >2min |
| <b>Max Wattage:</b> 1000 W | <b>Max. Capacitor:</b> 700 ml      |

**Welcome to visit our website and purchase our quality products!**

With your inspiring rating, COSTWAY will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office: Fontana, California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

*5 Star Rating*



We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.

THANK  
you  
😊

