




**COSTWAY**

WHERE THERE IS COSTWAY THERE IS HOME

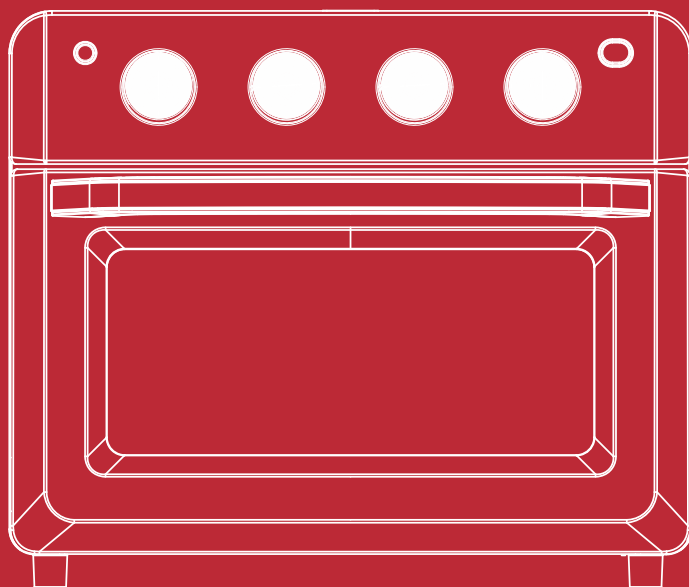

## **USER'S MANUAL**

---

**Air Fryer Oven**  
**EP24685**

## **IMPORTANT SAFEGUARDS**

When using electric appliances, basic safety precautions should always be followed:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children younger than 8) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have supervision.
3. Check if the voltage indicated on the appliance corresponds to the local main voltage before you connect the appliance.
4. Do not use the appliance if the plug, the main cord or the appliance itself is damaged. Always make sure that the plug is inserted properly into a wall outlet.
5. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
6. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
7. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
8. To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid. Do not plug in the appliance or operate the control panel with wet hands.
9. Never connect this appliance to an external timer switch or separate remote-control system in order to avoid a hazardous situation. To disconnect, turn off the appliance, then remove plug from wall outlet.

10. Do not place the appliance on or near combustible materials such as a tablecloth or curtain. The accessible surfaces may become hot during use. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not place the appliance against a wall or against other appliances. Leave at least 4 inches of free space on the back and sides and 4 inches of free space above the appliance. Do not place anything on top of the appliance.
12. Do not use the appliance for any other purpose than described in this manual. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
13. Do not let the appliance operate unattended. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. Do not use outdoors.
15. Do not touch the hot surfaces; use handle. During air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the pan from the appliance.
16. After using the appliance, avoid contact with the hot metal inside. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning the appliance.
17. After using the appliance, avoid contact with the hot metal inside. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning the appliance.
18. Do not use appliance for other than intended use.
19. Use extreme caution when removing tray or disposing of hot grease.

20. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
21. Oversize foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
22. A fire may occur if the toasteroven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
23. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
24. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
25. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
26. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
27. Turn off the appliance by pressing the key "START/CANCEL".
28. For household use only.

**SAVE THESE INSTRUCTIONS**

## IMPORTANT SAFEGUARDS

### CORD SAFETY

- A short power-supply cord is provided to reduce risk of becoming entangled in or tripping over a longer cord.
- Extension cords may be used if care is exercised in their use.
- If an extension cord is used:
  - a. The marked electrical rating of the extension cord should be at least equal to the electrical rating of the appliance;
  - b. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.



**ELECTRICAL POLARIZED PLUG**  
This unit has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug is intended to be used by inserting it into the electrical outlet only one way. If the plug does not fit securely into the outlet, reverse the plug and re-insert. If it still does not fit, contact a qualified electrician for assistance. Do not modify the plug in any way.

## **SPECIFICATIONS:**

Model Number: EP24685

Voltage &: 120V~ 60Hz

Product size: 400(L)×384(W)×340(H)

Packing size: 480(L)×430(W)×410(H)

Power: 1550W

Capacity: 18L(Bake 4 slices of bread and 9 inches of Pizza )

Net weight: 8.2kg

Gross weight: 10.2Kg

Accessories: Pan, Grill rack, Slag pans, Fry basket

Up heating tube: 60V~ 350W 60Hz 4pcs,

down heating tube: 60V~ 400W 60Hz 2pcs

## **USING YOUR AIR FRYER OVEN**

### **BEFORE USING FOR THE FIRST TIME**

1. Remove all packaging stickers, and labels from the unit
2. Wash the Fry Basket, Oven Rack, Baking Pan, and Crumb Tray with hot water, some dishwashing liquid, and a non- abrasive sponge. Dry before placing trays into Air Fryer Oven.
3. Place the Crumb Tray in the bottom of the Air Fryer Oven,


### **CAUTION:**

Do not place the Air Fryer Oven against a wall or against other appliances. It is important to leave at least 4 inches of free space on the back and sides, and 4 inches of free space above the Air Fryer Oven to allow for proper ventilation.

Do not put anything on top of the Air Fryer Oven.

# KNOW YOUR AIR FRYER OVEN

## Function:

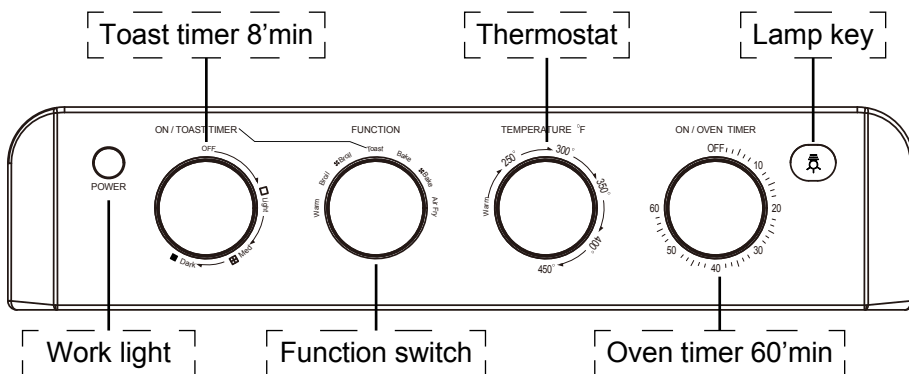

## Work instructions:

1. Warm function: turn the function switch knob to warm, turn the thermostat knob to warm, open the 60'min timer, oven working. (power:800w, down heating tube and motor)
2. Broil: turn the function switch knob to broil, turn the thermostat knob to 450, open the 60'min timer, oven working. (power:730w, 2pcs up heating tube and motor)
3. Broil (strong fan): turn the function switch knob to broil, turn the thermostat knob to 450, open the 60'min timer, oven working. (power:750w, 2pcs up heating tube and motor)
4. Toast: turn the function switch knob to toast, turn the thermostat knob to 450, open the 8'min toast timer, oven working. (power:1500w, down heating tube and up heating tube)
5. Bake: turn the function switch knob to bake, turn the thermostat knob to 450, open the 60'min timer, oven working. (power:1530w, down heating tube and motor and up heating tube)
6. Bake(strong fan): turn the function switch knob to bake, turn the thermostat knob to 450, open the 60'min timer, oven working. (power:1550w, down heating tube and motor and up heating tube)
7. Air fry: turn the function switch knob to air fry, turn the thermostat knob to 450, open the 60'min timer, oven working. (power:1450w, up heating tube and motor)

## CLEANING & MAINTENANCE

**WARNING:** Never immerse cord, plugs, or appliance in water or other liquid. Do not plug in the appliance or operate the control panel with wet hands.

- Clean the appliance after every use.
- Always unplug the appliance and let it cool down completely before cleaning.
- Never use abrasive utensils or corrosive products to clean the appliance.
- Apply a cleansing agent to a cloth and wipe down the exterior.
- Apply a mild liquid soap solution to a damp cloth or sponge and wipe down interior. Remove any residue with a damp cloth.
- Clean accessories in dishwasher, or hand wash with a nylon scoring pad or brush in warm, soapy water.

### STORAGE

- Unplug the appliance and let it cool down.
- Make sure all parts are clean and dry
- Store the appliance in a clean and dry place.

### ENVIRONMENT

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

### GUARANTEE AND SERVICE

If you need service or information or if you have a problem, please visit our website or contact your distributor.

## TROUBLESHOOTING

Problem	Solution
The Air Fryer Oven does not work	Ensure the unit is plugged into a dedicated power outlet.
Food is not cooked	Use smaller batches for more even cooking
	Raise temperature and continue cooking
Food is not fried evenly	Turn over food halfway through cooking process
	Cook similar sized foods together
White smoke is coming out of the Air Fryer Oven	Clean the Air Fryer Oven and accessories after each use to remove greasy residue
French Fries are not cooking evenly	Fry less potatoes at a time
	Blanch potatoes before frying
	Use firm, fresh potatoes cut into sticks
Fries are not crispy	Remove excess water from potatoes
	Cut potatoes into more narrow strips
	Mist with a little more oil

## WARRANTY & SERVICE

This Limited Warranty is for one full year from the date of purchase. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/part. If product repair/ replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.

Only valid within the United States.





#### TIPS:

Your suggestions and comments for Costway are really important to us!

We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office:Fontana

UK office:Ipswich



WHERE THERE IS COSTWAY THERE IS HOME

