



Thank you for purchasing a Speakeasy Snap!



**BUTANE TORCH
REQUIRED**

SCAN THIS FOR A DEMONSTRATION VIDEO

INSTRUCTIONS

1. Place Snap on top of your glass and remove the lid.
2. Put a small pinch of wood chips in the chip basket.
3. Press the button (The fan will automatically stop running 30 seconds after the button is pressed.)
4. Light the chips with a butane torch on low flame. Do not use flame for more than 5 seconds. A standard lighter will NOT work.
5. If desired place the magnetic lid back on to contain the smoke
6. Leave your drink to smoke for as long as you would like. (Smoke will stop flowing after 30 seconds)
7. Press the button again to turn off the smoker.
8. Remove the Snap
9. Enjoy your drink!
 - a. Empty the chip basket after it has completely cooled to avoid ash build up. The basket can be hand washed to clean out the air holes if necessary.

SEE REVERSE FOR TROUBLESHOOTING

NOTES

- During the smoking process it is perfectly normal and necessary for smoke to escape under the dome.
- To conserve battery, we recommended turning off the lights after smoking.
- It will take some practice to find the ideal timing for smoking your drinks.

NO LIGHTS

- Replace battery with a new 9v.

LIGHTS WORKING BUT FAN ISN'T

- Replace battery with a new 9v.
- Replace with a new fan from www.speakeasysmoker.com

9v battery must be brand new. Only use brand name i.e. Energizer, Duracell, Amazon, etc. 3rd party batteries don't provide enough power to spin the fan)

Contact support@speakeasysmoker.com with questions

Prop. 65 Warning for California Residents



WARNING: This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.