

 
 
 
SPEAKEASY Torch

Use Instructions

1. To use, turn ignition button to OPEN and ignite by pushing forward **B** **C**.
2. If not use, turn ignition button to CLOSE so as to facilitate carrying.
3. If continuously using is required, push ignition button forward and turn it to REMAIN.
4. TO adjust height of flame, turn gas regulator lever to (+) or (-) **A**.
5. To fill the gas, keep the air hole upward **D**.

Precautions

1. Playing by children is prohibited for pressurized and inflammable gas inside.
2. Keep away from the faces of others and yourselves and inflammable articles when use it.
3. DO NOT continuously burn over 5 minutes.
4. DO NOT touch the nozzle and metal pipe while using.
5. Keep it well and avoid direct sunshine for long term or placing at the place over 50 Celsius degrees.
6. Use acceptable butane gas, otherwise it is possible to break the lighter or shorten the service life.

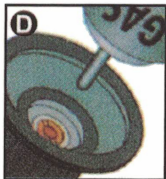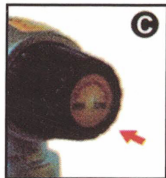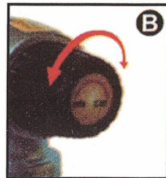

TORCHES SHIPPED WITHOUT BUTANE