



**Thank you for purchasing a Speakeasy Smoker!**



**SCAN THIS FOR A DEMONSTRATION VIDEO**

## **INSTRUCTIONS**



**BUTANE TORCH  
REQUIRED**

1. Place a drink of your choice in the center of the base.
2. Put the glass dome onto the base. Make sure it is sitting in the grooves.
3. Put a small pinch of wood chips in the chip basket.
4. Press the button (The fan will automatically stop running 30 seconds after the button is pressed.)
5. Light the chips with a butane torch on low flame. Do not use flame for more than 5 seconds. A standard lighter will NOT work.
6. Cover the chip basket with the lid if there is still flame in the chip basket
7. Leave your drink to smoke for as long as you would like. (Smoke will stop flowing after 30 seconds)
8. Press the button again to turn off the smoker.
9. Remove the glass dome
10. Enjoy your drink!
  - a. Empty the chip basket after it has completely cooled to avoid ash build up. The basket can be hand washed to clean out the air holes if necessary.'

## **NOTES**

- During the smoking process it is perfectly normal and necessary for smoke to escape under the dome.
- To conserve battery, we recommended turning off the lights after smoking.
- It will take some practice to find the ideal timing for smoking your drinks.

*SEE REVERSE FOR TROUBLESHOOTING*

# **TROUBLESHOOTING**

## **NO SMOKE IN DOME**

- Make sure you are using a butane torch. A standard lighter will not work
- Check if the fan is spinning. The fan spins for 30 seconds after pressing the button
- Replace battery with a new 9v. (Battery must be brand new. Used or old batteries may not provide enough power)

## **SMOKE NOT FILLING DOME**

- Make sure you are using a butane torch. A standard lighter will not work
- Check if the fan is spinning. The fan spins for 30 seconds after pressing the button
- You may be experiencing an air lock. The lid and base connection is too tight. Try leaving a small air gap while lighting to get the smoke flowing.
- Empty the chip basket. Ash buildup can clog the holes affecting air flow.
- Replace battery with a new 9v.

## **NO LIGHTS**

- Replace battery with a new 9v.

## **LIGHTS WORKING BUT FAN ISN'T**

- Replace battery with a new 9v.

**9v battery must be brand new. Only use brand name i.e. Energizer, Duracell, Amazon, etc. 3<sup>rd</sup> party batteries don't provide enough power to spin the fan)**

**Contact [support@speakeasysmoker.com](mailto:support@speakeasysmoker.com) with questions**

### **Prop. 65 Warning for California Residents**



WARNING: This product may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.