

COBY®

CETW645

Active Noise Cancelling TWS Earbuds

Auriculares TWS con cancelación activa de ruido

With Hi-Res LCD Touchscreen Case

Con Funda de Pantalla Táctil LCD de Alta Resolución



User Manual | Manual De Usuario



EN... 01

ES... 23



S



M

 


L

Earbud Tips (S/M size)



1

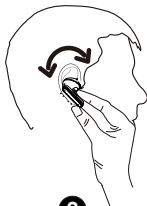

2



Overview

 
CETW645 True Wireless Stereo Earbuds

Left Earbud

Right Earbud


Eartip

Eartip

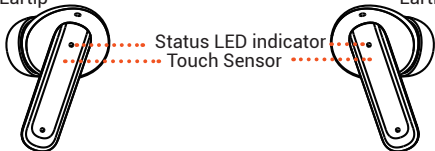

CETW645 LCD Touchscreen Case

 Touch display screen






Powering on/off

Turning on the display

Press the Screen On/Off button once to turn on the display. The Coby Logo will appear. Select the language, then tap the icon < > to choose your desired wallpaper. Tap on the selected wallpaper to confirm. It will then take you to the home screen.

 Home screen

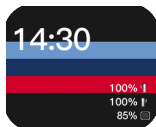


Touch Operation

- Swipe left and right on the display screen to toggle the app list.
- On the App screen, swipe up and down to select the items.
- Tap the icon on the screen to select the item.

Waking/Unlocking the display screen

 If there is no operation for more than 30 seconds on the display screen, it will turn off and lock automatically. To wake the display screen, press the Screen On/Off button once or tap on the screen. Then, swipe right to unlock it.

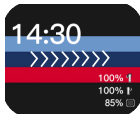

Screen is locked


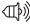 
Turning off the display

Swipe left or right on the display screen to select the 'Settings' app. Then, swipe up and down to select 'Shutdown' to turn off the display.

Turning on the earbuds


Your CETW645 earbuds will power on automatically when taken out of the Touchscreen case. You can also power them on manually by pressing and holding the Touch Sensor on both earbuds for 7 seconds.



| | |
|----|---|
| ON |  Alternately flashing white and blue on both earbuds |
| |  Power on tone notification |

Turning off the earbuds

 Your CETW645 earbuds will power off automatically when placed back into the Touchscreen case .

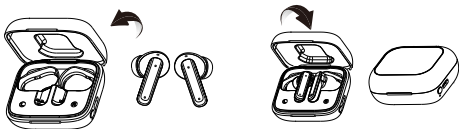


To power them off manually, press and hold the **Touch Sensor** on a single earbud for 5 seconds.




Charging

 Charging the Touchscreen Case

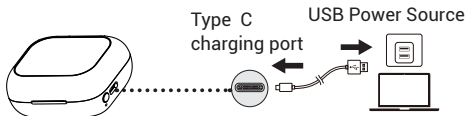

The charging status and the power level for the Touchscreen case will be shown on the display screen.

 Status bar

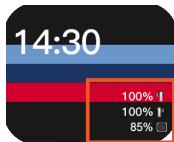


Charging your earbuds

When your earbuds' battery runs low, the earbud status indicators will slowly flash white, and a notification tone will play. Open the Touchscreen case's lid, then place the earbuds into the Touchscreen case and close the lid to start recharging.

1



 2

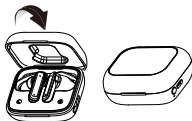

The charging status and the power level for the Touchscreen case will be shown on the display screen.






Pairing

1. True Wireless stereo connection

When the earbuds are turned on, they will automatically enter True Wireless stereo pairing mode.






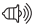 
| | |
|---|---|
| Enter True Wireless stereo pairing mode |  Alternately flashing white and blue on both earbuds |
| When True Wireless Stereo connection is successful (the right and left earbuds are connected) |  Alternately flashing white and blue on one earbud, the light turns off on the other earbud. |
| |  Connected tone notification |

2. Connect the Earbuds & Touchscreen Case to your device

After a successful True Wireless stereo connection, your CETW645 will automatically enter Bluetooth pairing mode to connect to your device.

Turn on Bluetooth in your device's settings and search for "CETW645", then tap "CETW645" to connect.



| | |
|---|--|
| Pairing mode |  Alternately flashing white and blue on one earbud, flashing blue on the other earbud. |
| Connected to a device (Successfully paired) | The Bluetooth icon  on the status bar changes to blue icon  .  Connected tone notification |



Status bar on the touchscreen



The CETW645 earbuds and touchscreen case will automatically be paired with your last successfully connected media device the next time they are turned on.



Controls

- **Button Control**

1. Music mode

| | |
|---------------------------|--|
| Play/Pause | Press the Touch Sensor once on either earbud. |
| Next track | Quickly press the Touch Sensor twice on the right earbud. |
| Previous track | Quickly press the Touch Sensor twice on the left earbud. |
| Volume up | Quickly press the Touch Sensor three times on the right earbud. |
| Volume down | Quickly press the Touch Sensor three times on the left earbud. |
| Transparent mode/ANC mode | The default mode is Transparent mode. Press and hold the Touch Sensor for 2 seconds on the left earbud, to toggle among Transparent mode, ANC On mode, and ANC Off mode (Normal mode). |

2. Phone call mode

| | |
|-----------------------|--|
| Answer /End a call | Quickly press the Touch Sensor twice on either earbud. |
| Reject a call | Press and hold the Touch Sensor for 2 seconds on either earbud. |

3. Voice Assistant mode

| | |
|-----------------------------|--|
| Activate voice assistant | Press and hold the Touch Sensor for 2 seconds on either earbud. |
| Exit voice assistant | Press the Touch Sensor on either earbud. |

• Touch Control

 
The CETW645 earbuds features with a display screen built-in the case for touch controls, allowing you to get more controls for the earbuds (Note: Make sure the CETW645 is connected to your phone.).

- Swipe left and right on the display screen to toggle the app list.
- On the App screen, swipe up and down to select the items.
- Tap the icon on the screen to select the item.
- Swipe right to return to previous screen.

1. Music Playback Control



2. Ambient Control

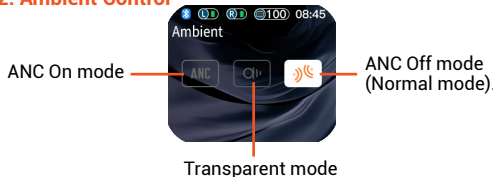


3. Spatial Sound Control

 


4. Sound Equalizer Control





5. Voice Assistant

Make sure the CETW645 is connected to your phone. From the App list, select and open the voice assistant App, tap once on the icon  to activate the voice assistant, then you speak to the voice assistant in the Touchscreen case by a simple voice command. For example, "how is the weather in New York today?", "what is a rainbow?", and so on. After a few seconds of thinking, the voice assistant will respond to you with its Voice information.

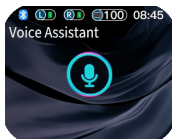

 
6. Menu display style

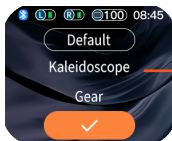

Tap to customize the menu display style, tap  to confirm.

7. Bluetooth Camera

The Camera app in the watch allows you to remotely take pictures through your phone's camera.

 
1. Open the Camera app in your phone.
2. Open the Camera Control app, and tap on the icon  to start taking photos from your phone remotely. You can view the photos on your phone.

Note: To use the Bluetooth camera, ensure that the CETW645 has been successfully paired with your phone. Also, make sure the earbuds are not in music playback mode. Keep your phone on the camera app screen, then tap to take photos.




8. "Like" App

When you watch a video on a video app, such as TikTok, and you like it, you can open the Like App, and tap the heart icon to engage with the content on the app. Tap the </> button to switch onscreen viewing pages.

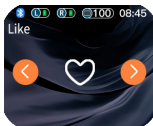

 9. Stopwatch

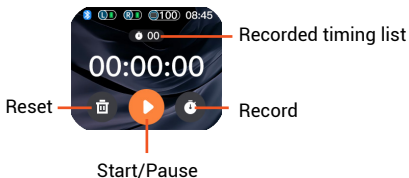

10. Countdown timer

 


11. Flashlight



Repeatedly tap on the screen to switch among white, red, yellow and green flashlight.


12. Find your earbuds

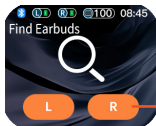

Tap to send the alert to your earbuds. Your earbud will play a ringtone to alert you of its location.

13. Settings

 Open the Settings app to adjust a wide variety of the earbuds and touchscreen case's settings, including language, wake operation, sound, restore to factory settings and more.

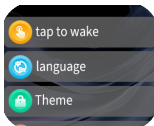

Troubleshooting

| Problem | Solution |
|---|--|
| Your left and right earbuds aren't connected. The LED indicators on both earbuds are alternating between white and blue lights. | First, reset the earbuds by taking out the earbuds from the charging base and then placing them back to check whether they are connected to each other. If they are not, open Bluetooth settings in your device and tap "Forget device" on "CETW645" , then turn off Bluetooth in your device to manually initiate the True Wire stereo connection. Please allow up to 30 seconds to connect if you are in a public area with interfering signals. |
| Your left and right earbuds are connected, but you cannot connect them to your device. | Ensure the earbuds are not currently connected to another device. If they are, open Bluetooth settings on those devices and tap "Forget device" on "CETW645" . Confirm the device you would like to pair with is Bluetooth enabled, please refer to that device's user manual to confirm. |
| There is no response from the CETW645 earbuds. | Firstly, check whether the battery power in earbuds are used up, if they are, charge the earbuds. If they are not, reset the earbuds by taking out the earbuds from the charging base and then placing them back, or tap Settings >Factory on the case touchscreen to restore it to the factory settings. |
| You can only hear sound on one earbud. | Reset the earbuds by taking out the earbuds from the charging base and then placing them back. or tap Settings > Reset on the case touchscreen to restore it to the factory settings. |



Specifications

| | |
|-----------------------------------|--|
| Model Number | CETW645 |
| Model Name | ANC TWS Earbuds With Hi-Res Touchscreen Case |
| Power Input | 5 V/1A(Touchscreen case) |
| Charging time (Earbuds) | 1 hour |
| Charging time (Touchscreen case) | 1.5 hours |
| Playtime (Earbuds) | Up to 5 hours |
| Playtime (With Touchscreen case) | Up to 15 hours |
| Battery Type | Rechargeable Lithium-ion |
| Driver (full range) | 13 mm × 2 |
| Range | 33 ft (10 m) |
| Bluetooth version | V 5.4 |
| Dimension | 2.35" x 2.01" x 1.07" 59.7*51.1*27.2 mm |
| Weight (earbuds alone) | 7.5 g / 0.26 oz |
| Weight (with Touchscreen case) | 52 g /1.83 oz |



Specifications are subject to change without notice.

FCC Statement

FCC ID: 2AMSOETW004

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

Notice



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling.

Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.

Disclaimer

All information, design and specifications contained in this manual were correct at the time of this publication. As the product goes under continuous upgrades and changes, however, the final device may have slight differences. The contents of this manual are subject to change without prior notice, and COBY will not be liable for any errors contained herein or for incidental or consequential damages in connection with the furnishing performance or use of this manual.

COBY COPYRIGHT© 2024, ALL RIGHTS RESERVED.

COBY IS A REGISTERED TRADEMARK OF CBY HOLDINGS, LLC. MANUFACTURED BY SUMMIT ELECTRONICS LLC. USED UNDER LICENSE. CBY HOLDINGS, LLC DOES NOT MANUFACTURE THIS PRODUCT OR PROVIDE ANY MANUFACTURER'S WARRANTY OR SUPPORT. THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY THE BLUETOOTH SIG, INC. AND ANY USE OF SUCH MARKS BY SUMMIT ELECTRONICS LLC IS UNDER LICENSE. OTHER TRADEMARKS AND TRADE NAMES ARE PROPERTY OF THEIR RESPECTIVE OWNERS.



SUMMIT ELECTRONICS LLC One Year Limited Warranty

SUMMIT ELECTRONICS LLC LIMITED WARRANTY ("Warranty") — For product Categories Listed in Chart Below (as applicable, "Product") Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully. If you are still having trouble with your Product, please contact Technical Support at support@cobyaudio.com.

Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children.

Subject to the terms and conditions herein, SUMMIT ELECTRONICS LLC (hereinafter called "SUMMIT ELECTRONICS LLC") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period for one year, to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, SUMMIT ELECTRONICS LLC will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable) either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/ or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and SUMMIT ELECTRONICS LLC's sole liability for breach of the limited warranty contained herein. This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the product, any other Customer-induced damage, or the alteration or removal of any product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than SUMMIT ELECTRONICS LLC or a party authorized in writing by SUMMIT ELECTRONICS LLC; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions; or (g) any acts of God. Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use.

In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving

applications. SUMMIT ELECTRONICS LLC disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product and agrees to indemnify SUMMIT ELECTRONICS LLC for any damages claimed against SUMMIT ELECTRONICS LLC for such uses. EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS", AND SUMMIT ELECTRONICS LLC DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (I) OF MERCHANTABILITY, (II) OF FITNESS FOR A PARTICULAR PURPOSE, OR (III) OF NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL SUMMIT ELECTRONICS LLC BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF SUMMIT ELECTRONICS LLC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, SUMMIT ELECTRONICS LLC'S AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCT CAUSING THE DAMAGES, IF ANY. This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. To obtain Warranty service, Customer must email SUMMIT ELECTRONICS LLC Technical Support prior to making a Product return. Customer must include with Product return the following items (failure to enclose any of these items may result in a delay in the processing of your Warranty claim): (i) a dated sales receipt that indicates the place of purchase, model number of Product, and amount paid; (ii) a detailed description of Customer's problem with Product; (iii) Customer's full name, phone number, and return address, and; (iv) a money order made out to SUMMIT ELECTRONICS LLC Electronics Corporation to cover return shipping charges to US destinations only, for the applicable dollar amount shown for the Product in the table above. SUMMIT ELECTRONICS LLC will not make return shipments to a P.O. Box. For shipping to international addresses, actual freight will be charged to Customer. Return your Product

freight-prepaid in its original packaging, or packaging that affords an equal measure of protection. Please allow 4 to 6 weeks for the processing of your claim (6 to 8 weeks from November to February).

| Product Category | Shipping |
|--|-----------------|
| Adapters, Converters, Chargers, Headphones, Microphones, Cellular Accessories | \$7.99 |
| Alarm Clocks, Portable CD Players, Radios, Corded Telephones, MP3 Players, Digital Photo Frames (screen size less than 5") | \$7.99 |
| Portable Stereo Systems, Speaker Systems, Cordless Telephones, Home DVD Players | \$14.99 |
| Home Theater DVD Systems, Portable DVD Players, Portable Media Players, Digital Photo Frames (screen sizes 5" to 11") | \$14.99 |

You must email SUMMIT ELECTRONICS LLC Technical Support prior to making a return. Please ask if you are unsure of which category your product falls under.

*US destinations only.



Customer Service

Servicio al Cliente

To get the best after-sales service, access the Contact webpage from the link:

<https://summitcegroup.com/pages/contact>.

Or email us at support@cobyaudio.com for return information and customer support!

Para obtener el mejor servicio postventa, acceda a la página web de contacto desde el enlace: <https://summitcegroup.com/pages/contact>. ¡O envíenos un correo electrónico a support@cobyaudio.com para obtener información sobre devoluciones y atención al cliente!

For more information, please visit:

Para mayor información por favor visite:

<https://cobyaudio.com>