












Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!

US office: Fontana UK office: Ipswich AU office: Truganina





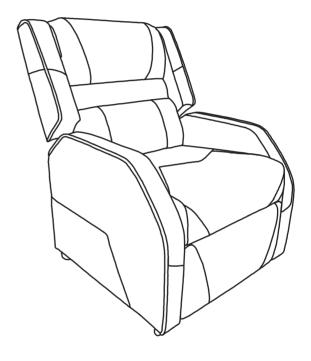

Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



US:cs.us@costway.com UK:cs.uk@costway.com AU:cs.au@costway.com

USER'S MANUAL

Children's Sofa HW66874





Before You Start

Please read all instructions carefully and keep it for future reference.

General Security Warning

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies

and children, otherwise they may pose a choking hazard. $% \left(x\right) =\left(x\right) +\left(x\right)$

Danger: Lack of attachment may cause a risk of tipping.





WARNING: CHOKING HAZARD-Small parts. Not for children under 3 years.

Warning for Assembly

⚠ Assembled only by adults

⚠ Remove all Packaging, separate and count all parts and hardware.

 \triangle Read through each step carefully and follow the proper order.

⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.


 \triangle Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.

Parts List

NO.	SKETCH		QTY
А		SEAT	1PC
В		BACKREST	1PC
С		LEFT EAR	1PC
D		RIGHT EAR	1PC
Е		PLASTIC LEG	4PCS
F		WASHER	4PCS


02

STEP 1

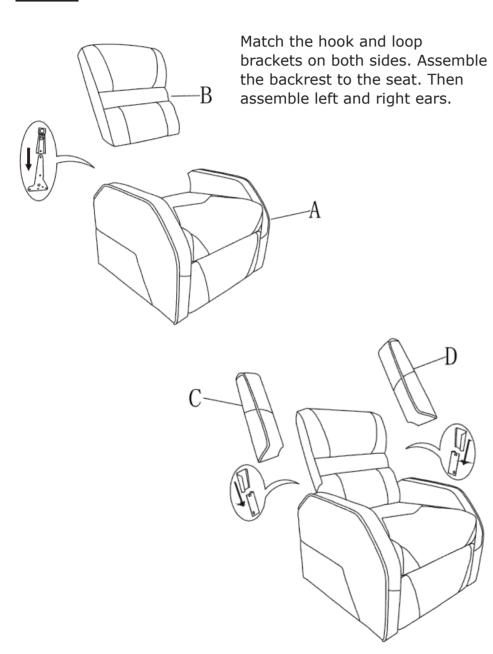

STEP 2

Assemble 4 plastic legs.

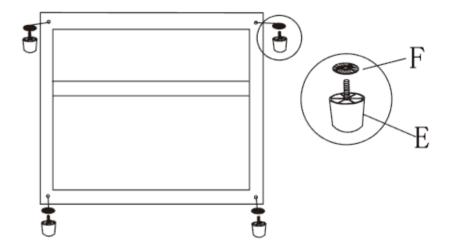

04 05

STEP 3

Finish assembly.

