

A3

Golf Mode Quick Guide Book

For more detailed
information of the product,
visit Voice Caddie's website.

www.voicecaddie.com



How to Set Time (Manual)

Touch the Setup menu  on the menu screen



① Touch Time on the screen



② Date Setting

- Swipe up or down to select year / date
- Touch the check mark when setting is completed.

How to Set Time (Manual)



③ Set time format

- Touch to select between 12 or 24-hour



④ How to set time

- Set time and minutes by swiping up or down on your screen.
- Push up or down to set AM or PM.
- Touch the check mark when setting is completed.



⑤ How to set up daylight saving time(DST)

- Touch ON or OFF

Key Buttons

Power On/Off : Press and hold the
POWER button for 3 seconds

Full Touch Screen



POWER(ON/OFF)
Backlight ON



Back to
previous stage



Show scorecard
Move up



Golf menu /
Move down

How to Enter Golf Mode

Enter the Menu Screen by swiping the clock screen to the left (←), touch the 'Golf Mode' icon on the menu screen.



 
Clock Screen



Menu Screen

Detect Golf Course & Hole

Touch the 'Golf Mode' icon to connect to the satellite and it will automatically detect the hole.

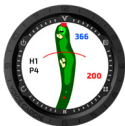

Guide to 'Smart Course View, Smart Green View, Distance Guide' Screen

- In Smart Course View, swipe left (←) to enter Smart Green View
- In Smart Course View, swipe right (→) to enter Distance Guide



Green View

<



Course View

 
>



Distance Guide

How to Use User IP

Touch your target on the screen to get the distance.

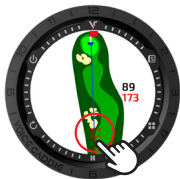

Touch the target

>



Change the target

How to Use Pin Reload

Touch a point on the green to change the pin location.



 
Touch the pin location
to change it



Change the pin location

How to Use Active Green View

The angle of the green view automatically changes to the player's location.

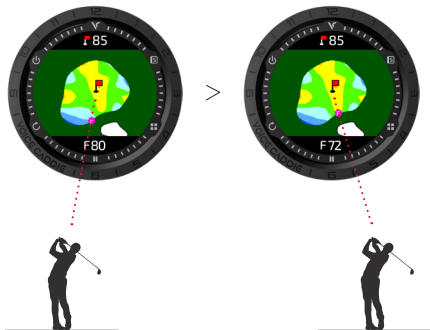

How to Set Time (Automatic)

Automatic setting (available when connected to GPS)

Touch the Golf Mode  on the menu screen.

 


Automatic GPS
reception when Golf Mode
is selected

How to Reset



Pressing both buttons simultaneously will reset and restart.

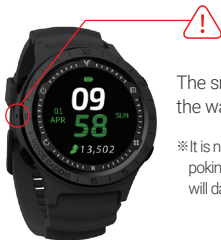

The small hole on the side of the watch is not a reset button.

※ It is not designed to be pressed and poking the hole with a sharp object will damage the watch.

Notes

- The time required to capture GPS satellite signals while in golf mode may vary depending on the environment (weather, topography).
- The battery's usage time may be reduced during rounds played in cold weather and in areas where satellite reception is poor. It is recommended that you turn the GPS power on once you are outside and ready to begin your round to extend usage time. Do not leave the product in vehicles in hot temperatures or humid places as damage may occur.
- Watch features will not be operational when the battery is being charged.

Warranty Conditions

- One Year Limited Warranty

Voice Caddie warrants this hardware product against defects in materials and workmanship for a period of one year from the date of original purchase.

If a defect exists, at its option Voice Caddie will (1) repair the product at no charge, (2) exchange the product with a product that is new or like-new and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. Voice Caddie shall have no obligation to repair, replace or refund until the customer returns the defective product to Voice Caddie.

This warranty does not apply

(1) to damage caused by accident, abuse, misuse, misapplication, or non-Voice Caddie products; (2) to damage caused by service performed by anyone who is not a Voice Caddie Authorized Service Provider; or (3) to a product or part that has been modified without the written permission of Voice Caddie. For more information on Voice Caddie's warranty and return policy, please visit www.voicecaddie.com

Warranty Conditions

Product Name	
Serial No.	
Purchase Date	
Dealer	
Dealer Contact	
Buyer's Name and Contact	
Warranty Period	One year after the date of purchase (other components are 6 months)

Battery Duration
<ul style="list-style-type: none">- Regular Watch Mode : 9 -10 days- Golf Mode : 10 hours

Warranty Conditions

Address : 6940 Aragon Cir. Unit 10 Buena Park, CA 90620, U.S.A.

phone number : 562-926-3978

Email : support@voicecaddie.com



VOICE CADDIE

www.voicecaddie.com