

Winter Lane™

Twinkler™ Orb

DECORATIVE LED ORB WITH DYNAMIC ILLUMINATION

READ AND FOLLOW ALL INSTRUCTIONS BEFORE OPERATING YOUR TWINKLER ORB LIGHT. SAVE THIS MANUAL FOR FUTURE REFERENCE.

Part	Quantity
Twinkler Foldable RGB Orb	1
Ornament Topper	1
Halloween Pumpkin Topper	1
Remote Control(1 x CR2025 battery included)	1
Hanging Hook	1
Ground Stakes with Securing Line and Fastener Clasp.	3

Remote Specification

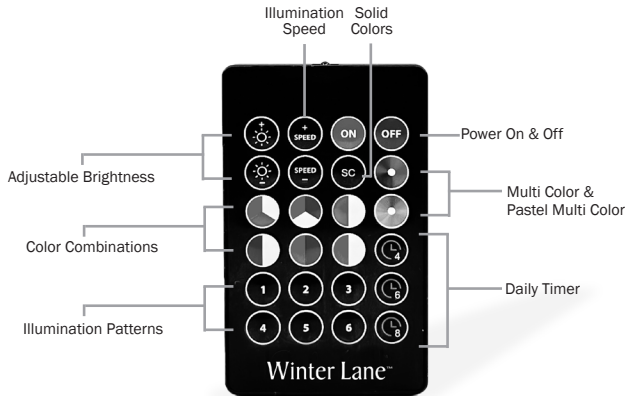


Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

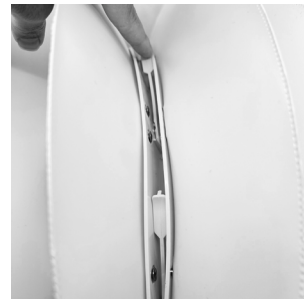


Figure 6



INSTALLATION

Remove your Foldable Twinkler Orb and all accessories from the box and packaging.

Attaching Toppers:

IMPORTANT:

1. If ground mounting, secure the ground stakes line to the orb before attaching the topper by fastening the clasps to the metal ring at the top. **(Figure 1)** Some clasps should be attached between the folds of the orb to ensure even spacing. **(Figure 2)**
2. If using the included toppers, install them **before** unfolding the Orb. To install, place the topper base on the integrated bracket at the top of the Twinkler Orb opposite the cord, ensuring the male locking posts are aligned with the slots on the bracket. Twist the topper 90 degrees clockwise until it clicks and locks it in place. **(Figure 3)**

Note: Your Twinkler Orb can be used with or without the included toppers. Your Orb cannot be hung when using the pumpkin topper.

Unfolding the Twinkler Orb:

Ensure that the connector latches are in the up/open position. **(Figure 4)**

Unfold the Twinkler Orb and press the plastic orb plates together. Begin with the middle latch, inserting each connector pin into adjacent hole, and pressing latch handles down to the locking position one at a time. **(Figure 5)**

Hanging:

Your Twinkler Orb may be hung using the included hanging hook with or without the ornament topper. Both the ornament topper and the Orb have integrated hanging loops. Place the small end of the hanging hook in the desired hanging loop. **(Figure 6)** Hang large hanger end in the desired location. Plug the AC adaptor into your power source.

Ground Mount:

Using the included securing ground stakes with clasps and lines, connect clasps to the metal ring located at the top of the Orb, ensuring that the lines are evenly spaced around the folds in your Orb. **(Figure 1 & 2)**

Place Orb in desired location & screw ground stakes into the soil at proper locations to ensure the securing lines are tight.

Plug the AC adaptor into your power source.

ACTIVATION/FUNCTION:

Your Twinkler Orb can be activated with the included remote control. Before first use, remove the insulator strip protruding from the remote's battery compartment. To use the remote, point it toward the Twinkler and select the button(s) associated with the function(s) you would like to use.

DO NOT LOSE YOUR REMOTE – full functionality is only available via your remote control.

Your remote control has the following functions:

ON – Turns your light on.

OFF – Turns your light off.

SC – Solid Colors – Twinklers can illuminate in the following solid colors – White, Red, Orange, Yellow, Green, Blue, Purple & Teal. To select a color, press the SC button repeatedly until you reach the color of your choice.

Color Combination Buttons – In addition to solid colors, you can choose different color combinations to fit the theme of your holiday or event. The available combinations are, in sequence from top to bottom/left to right Multicolor, Red, White & Blue, Green, Red & White, Blue & White, Pastel Multicolor, Green & White, Red & Green & Red & White.

Timer Functions – Twinklers have daily timers that illuminate automatically at a time of your choosing and turn off after a predetermined time. The time the lights will remain on are four hours, **(4)**, six hours, **(6)**, & eight hours, **(8)**. To activate, choose the illumination mode and the amount of time you would like the lights to illuminate, point the remote at the Twinkler and press the corresponding timer button when you would like the lights to turn on. The lights will turn off automatically after the duration chosen and restart the next day at the same starting time.

PLEASE NOTE: If you change either the color or flashing pattern after setting the timer, the timer will be canceled. Your timer MUST be reset to function properly after changing either the color or flashing pattern.

Numbered Buttons - Your Twinkler has six numbered buttons that correspond to the following illumination patterns:

- 1 - Twinkling – Segments illuminate & flash.
- 2 - Progression – Segments illuminate sequentially.
- 3 - Sequential Flashing – Segments fill in sequence and then flash.
- 4 - Sequential Slo-Glow – Segments fill in sequence and then slowly fade in and out.
- 5 - Sequential Glow – Segments in sequence and then fade in and out.
- 6 - Random Colors/Flash - Light segments randomly illuminate, fill and flash and glow in multiple colors.

PLEASE NOTE: If you do not select one of the illumination patterns but choose one of the color options your Twinkler will remain steady on in the color or combination chosen.

+ **SPEED** – Increases the speed lights move & illuminate at.

- **SPEED** - Decreases the speed lights move & illuminate at.

+ **SUN** – Increases the brightness of your Twinkler Lights.

- **SUN** – Decreases the brightness of your Twinkler Lights.

IMPORTANT: Your Twinkler Orb uses LED's with red, green and blue, (RGB), tints. The individual levels of red, green and blue light change in combination to create new colors and change light combinations. This process sometimes creates a brief color "bleed" in which tints of green or pink briefly appear. To alleviate this issue, use the + Speed button to increase the rate your Twinkler flashes at.

CHANGING YOUR REMOTE BATTERY:

If your remote control doesn't function properly its battery likely needs to be replaced. The battery is in a sliding battery tray located on the rear bottom of your remote control. To open, press in the RELEASE button located on the right-hand side of the battery tray, slide out the tray, and remove the old battery. Insert a new CR2025 button cell battery according to the polarity graphic located on the rear of your remote and return tray to the closed position.

CARE

- 1. DO NOT DISPOSE OF INSTRUCTIONS – KEEP FOR FUTURE USE.
- 2. Fold Twinklers after use for safe storage.
- 3. Disassemble Stakes for safe storage.
- 4. CAREFULLY wind-up Twinkler cords for safe storage.
- 5. Store all Twinkler parts together.
- 6. Remove the remote control's battery if not in use for extended time periods.
- 7. Dispose of old batteries according to the recycling regulations of your country, state, county or community.

CAUTION

- 1. NEVER disassemble or other wise alter or change the product.
- 2. WARNING: Risk of electronic shock if used Improperly.
- 3. Insert into outlets located greater than 1' above ground surface.
- 4. Do not place product or cables in standing water.
- 5. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails. Install only using the mounting means provided.
- 6. Do not close doors or windows on the product's cable or extension cords as this may damage the wire insulation.

IMPORTANT SAFETY INSTRUCTIONS

- 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
 - 2. Read and follow all instructions that are on the product or provided with the product.
 - 3. Do not use an extension cord.
 - 4. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
 - 5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
 - 6. Do not install or use within 10 feet of a pool.
 - 7. Do not use in a bathroom.
 - 8. WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
 - 9. WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
 - 10. WARNING: Risk of Electric Shock. Mount the unit at a height greater than 1 foot from the ground surface.
 - 11. WARNING: Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).
 - 12. This power unit is intended to be correctly orientated in a vertical or floor mount position.
- SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

"Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING**

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information
- d) The compatible battery type CR2025.
- e) The nominal battery voltage 3.0V.
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above 75 degree or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- h) Ensure the batteries are installed correctly according to polarity (+ and -).
- i) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- k) Always completely secure the battery compartment. If the battery compartment does not close securely, Stop using the product, remove the batteries, and keep them away from children.

CONTAINS COIN BATTERY



30 DAYS LIMITED WARRANTY:

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group
613 First Street
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.