

ROLLING TABLE ASSEMBLY INSTRUCTIONS



Box Contents

- (1) Table
- (2) All Terrain Wheels
(stored inside table)

Care & Use

Clean using mild detergent and soft cloth.


Table weight capacity: 500lbs

Chair rack: 60lbs

Lower accessory rack: 25lbs


FIRST TIME ASSEMBLY & SETTING UP TABLE

Step 1

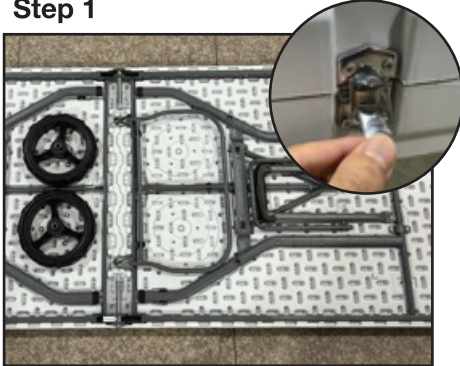

First, unlatch bailing latches, then unfold table and lay upside down on clean flat surface.

Step 2

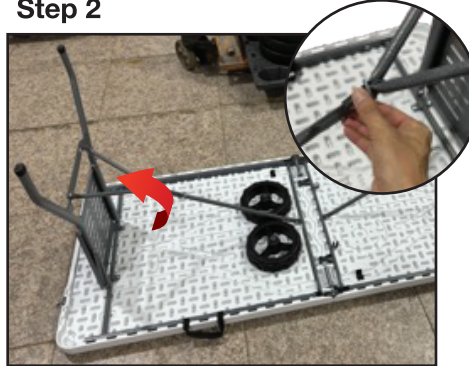

Lift table legs and rotate up until fully extended and upright. Slide lock rings all the way up to secure legs in opened position.


Step 3



Carefully, turn table upright on level surface. To use shelf and lower rack see below: a. attach the lower rack into the holes of leg frame. b. unfold the shelf by rotating down until fully extended and horizontal.

WHEEL ASSEMBLY

Step 1

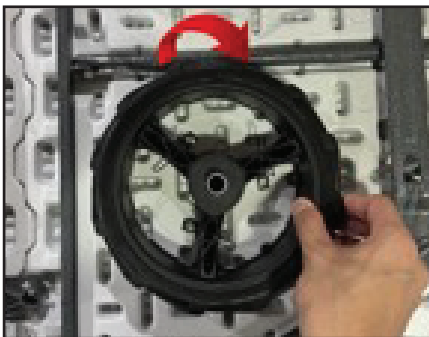

Rotate wheels 30 degrees counterclockwise to take out from the storage location inside the table. To restore wheels inside table, reverse process.

Step 2



To assemble wheels push wheel axle pipe out and slide wheel onto axle pipe, until it clicks.

CHAIR RACK




When you are folding your table, a. pull up on handle and pull metal bar up, b. extend "chair rack bar" outward to carry chairs.

COOLER RACK



To deploy lower rack, lay table down on a clean flat surface. Attach lower rack into the pre-drilled holes in the center position located at the bottom fold of your table.

Step 3 cont.

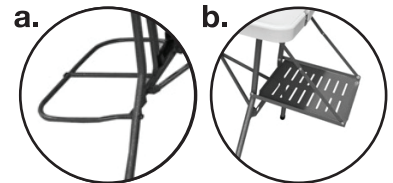

HOW TO FOLD/CLOSE TABLE



Fold the table while pushing down lock lever to release folding lock.

