

iCHAIR FOLDING CHAIR INSTRUCTIONS

CONTENTS



Wine glass and lap top computer not included.

USE/FEATURES

225lbs (102 kg) weight capacity 1 stemmed glass holder

1 cup holder

CARE

Use a damp cloth to clean. Do not use chemicals.

WARNING! BE CAUTIOUS OF PINCHING HAZARDS DURING FOLDING AND UNFOLDING.

DETACH TABLE BEFORE EXITING FROM CHAIR. BEFORE DETACHING TABLE, SECURE OBJECTS TO PREVENT ACCIDENTAL SPILLS OR DAMAGE.

SET-UP INSTRUCTIONS

Step 1



Unfold the fabric tabletop and frame and lay on a clean flat surface to begin assembly.

Step 2



Fit each segment together to form the rigid frame. The shock cord poles make set up and tear down easy.

Step 3



Adjust the angle of the two posts upwards by pushing in the adjustment button. This makes inserting the frame into the fabric table easier.

Step 4



Open all hook and loop enclosures on the table and insert the long section of the frame into the table. Making sure the adjustable posts fit in the cut out section of the table.

Step 5



Secure the frame in the fabric table by wrapping the hook and loop enclosures tightly around it. This will make the fabric of the table taught.

Step 6



The table is now ready to insert into the iChair. The angle of the table can be adjusted easily by pressing the adjustment buttons on both sides simultaneously.