


HOW TO FOLD

Step 1




Gently lower handle to the ground.

Step 2

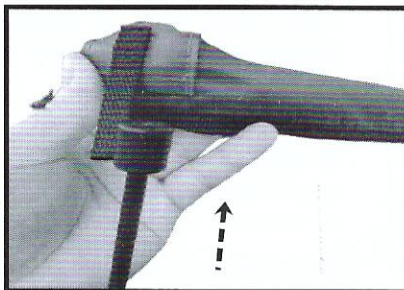


Take out the canopy from pole tip at all 4 corners

Step 3

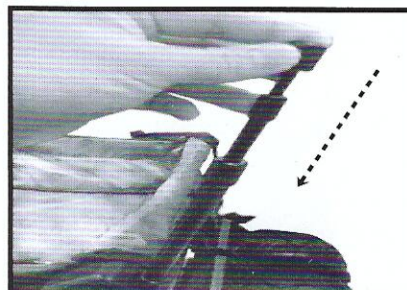


Slide back the pole tip to its minimum length

Step 4

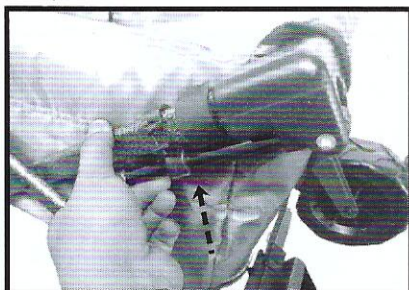


Push the pole tip back into the clip to keep it secure

Step 5

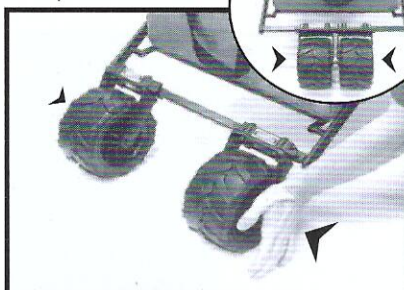


Push the rear wheels together and center on rear axle. Lightly tapping the wheel bracket with the heel of your palm can help. Beware of pinching.

Step 6

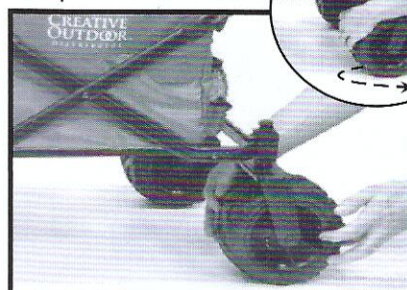

Rotate the front swivel wheels so they are both pointing outward, if they are not already. This is necessary for the wagon to fold compactly.

Step 7

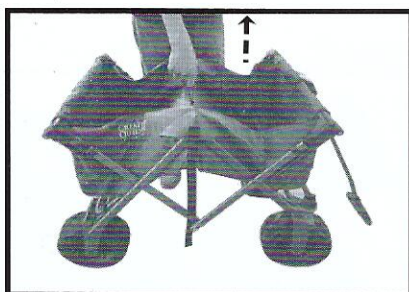


To begin folding the wagon, pull straight up on the loop on the floor of the wagon.

Step 8




The rear wheels should be in between the two front wheels and look like this while folding.

Step 9

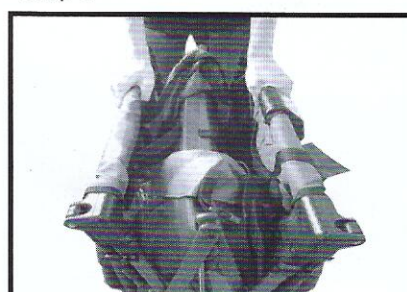


Finish folding the wagon by squeezing the frame together.

Step 10

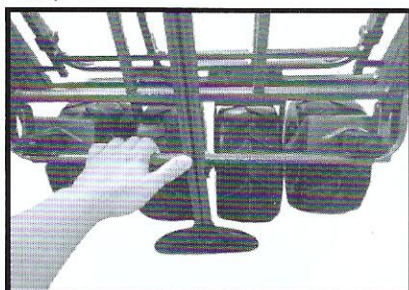

Secure the handle to the frame using the clip on the frame.

Step 11

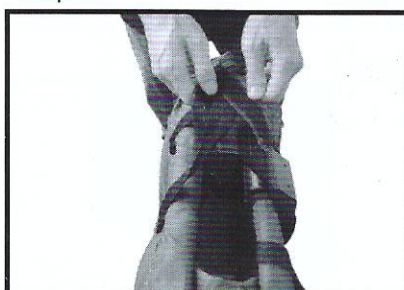

Secure the webbing handles together using the hook and loop enclosure. These handles can be used to carry or hang the wagon and prevent unfolding.

Step 12



The wagon can now be transported or stored and is freestanding while folded.

CONTENTS



(1) Folding Wagon

USE/FEATURES

No assembly required. Folds up with one pull on the loop.
Extra wide adjustable all-terrain rubber wheels.
Supports up to 150lbs (68kg).
Easily stores in trunks, garages, back seats, etc.
Stands up by itself in folded position.



YOUTUBE

CARE

Use a damp cloth to clean. Do not use chemicals.

WARNING! Not to be used as a children's ride wagon.

United States Patents



US 0748,739 S
US 0757,637 S

US 9,145,154 B1


Europe Registered Community Design No



003423193-0001
003395656-0001

HOW TO UNFOLD

Step 1

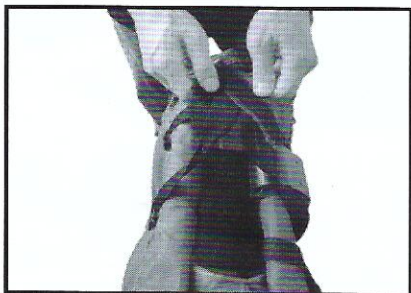


On a flat and even surface with the wagon standing upright, open the hook and loop enclosure and release the webbing handles.

Step 2




Release the handle from the clip on the frame. Use your thumb to push off from the frame while pulling the handle with your fingers.

Step 3

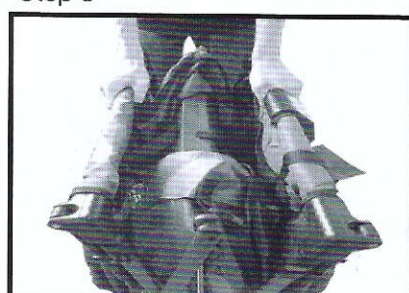


Spread the frame apart until the wagon is completely unfolded. Push down on the floor of the wagon to ensure it is completely unfolded.

Step 4

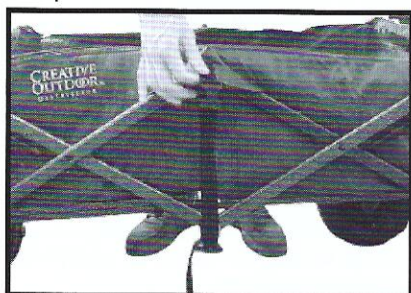

Be sure the fabric gussets are slipped over the frame on both sides.

Step 5

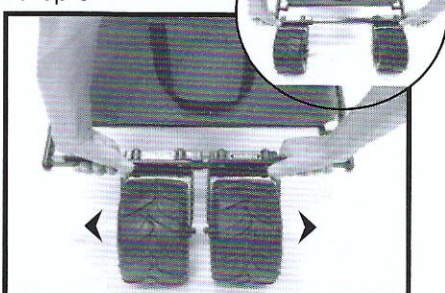


Spread apart the rear wheels. Secure wheels to frame to prevent them from wandering back and forth. You will hear or feel them click. Beware of pinching.

Step 6




Release the pole tip from the clip on the frame.

Step 7

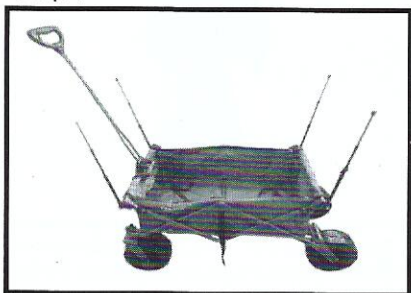

Raise up all 4 pole tips and pull it out at maximum length.

Step 8

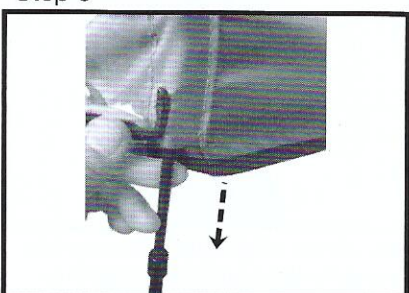

Slide the canopy into the pole tip at 4 corners.

ENJOY!

