

Warm Touch_™ Baby Wipe Warmer

Instructions for Use:











3. Power On & Choose Heat Setting:

Press and hold power button to turn ON. First setting is red (High), press once for blue (Medium) and press once more for green (Low). For fastest results, use red (High) setting. Allow wipes to warm up for 5 to 20 minutes.

1. Insert Baby Wipes:

Unroll warmer upside-down and place baby wipe package face down into it, aligning the package opening with the opening in the warmer.

Wrap the warmer around the wipes and secure with hook and loop fastener.

In some cases, the opening of the wipes package may be larger than the product's opening. The product opening may need to be stretched slightly for the opening of the wipes to fit through.

2. Plug In USB Cord:
Locate the USB cord in the pocket
on the back and plug into any
USB outlet (not included).

Press and hold power button to turn OFF.





©MMXXIV Jokari/US, Inc. 1220 Champion Cir, Carrollton, TX 75006 USA 800-669-1718

www.jokari.com